Windows

Communication Software for the Camera

EOS Utility

Ver. 2.10

1D Mk IV | 1Ds Mk III | 1D Mk III | 5D Mk II | 7D | 60D | 50D | 40D | REBELT3i | 600D | REBELT2i | 550D | REBELT1i | 500D | REBELXSi | 450D | REBELT3 | 1100D | REBELXS | 1000D

Instruction Manual

Content of this Instruction Manual

- EU is used for EOS Utility.
- Camera model is displayed as an icon.
  Example: EOS-1D Mark IV → 1D Mk IV
- displays the relevant camera model.
- In this manual, the windows used in the examples are from Windows Vista.
- The selection sequence of menus is displayed in ▶ procedures.
  (Example: Select the [Window] menu ▶ [Main Window].)
- Square brackets are used to indicate items such as menu names, button names and window names that appear on the computer screen.
- Text inside < > indicates a camera switch name or icon, or a keyboard key name.
- ** indicates a reference page.
  Click to move to the relevant page.
- : Marks information that should be read before use.
- : Marks additional information you may find helpful.

Switching Between Pages

- Click on arrows on the bottom right of the screen.
  - : next page
  - : previous page
  - : return to a page you had previously displayed
- Click on the chapter headings on the right side of the screen to switch to the contents page of that chapter. Also, click the item you want to read about on the table of contents to move to the relevant page.

© CANON INC. 2011 CT1-7195EUWE-000

READ CAREFULLY BEFORE USING!

CANON SOFTWARE LICENSE AGREEMENT

IMPORTANT - READ THIS AGREEMENT BEFORE USING THE SOFTWARE ON THE CD-ROM IN THIS BOX. BY USING THE SOFTWARE, YOU AGREE TO BE BOUND BY THE TERMS OF THIS AGREEMENT.

This is a license agreement (the [Agreement]) between you and Canon Inc. ([Canon]).

IF YOU DO NOT AGREE TO THE TERMS AND CONDITIONS OF THIS AGREEMENT, DO NOT USE THE SOFTWARE PROGRAM ON THE CD-ROM AND THE USER MANUAL IN THIS BOX (COLLECTIVELY, THE [SOFTWARE]) AND RETURN THE SOFTWARE WITHIN 30 DAYS FROM THE DATE OF PURCHASE TO YOUR POINT OF PURCHASE FOR A REFUND.

In consideration of the right to use the SOFTWARE, you agree to abide by the terms and conditions of this Agreement.

1. LICENSE: Canon grants you the non-exclusive right to use the SOFTWARE only on a single computer. You may physically transfer the SOFTWARE from one computer to another provided that the SOFTWARE is used on only one computer at a time. You shall not install or use the SOFTWARE on a network, multiple CPU, multiple site arrangement, or any other hardware configuration where the SOFTWARE is accessible to more than one CPU or to more than one user.

YOU SHALL NOT ASSIGN, SUBLICENSE, RENT, LEASE, LOAN, CONVEY OR OTHERWISE USE, TRANSFER, COPY, TRANSLATE, CONVERT TO ANOTHER PROGRAMMING LANGUAGE, ALTER, MODIFY, DECOMPILE OR DISASSEMBLE THE SOFTWARE, IN WHOLE OR IN PART, EXCEPT AS EXPRESSLY PROVIDED IN THIS AGREEMENT.

2. BACK-UP COPY: You may make one copy of the SOFTWARE solely for back-up purposes, or copy the SOFTWARE onto the permanent storage device (e.g. a hard disk) of your computer and retain the original for back-up purposes. Any other copying of the SOFTWARE is a violation of this Agreement. You must reproduce and include the copyright notice on the back-up copy.
3. SUPPORT AND UPDATES: Canon is not responsible for providing maintenance or support for use of the SOFTWARE. No updates, fixes or support will be made available for the SOFTWARE.
4. LIMITED WARRANTY AND LIMITATION OF LIABILITY: It is your responsibility to choose, maintain and match the hardware and software components of your computer system. Thus Canon does not guarantee uninterrupted service or correction of errors or that the functions or performance of the SOFTWARE will meet your requirements. THE SOFTWARE IS LICENSED ON AN [AS IS] BASIS AND WITHOUT WARRANTY OF ANY KIND. The CD-ROM storing the SOFTWARE is warranted only against defective material under normal use for a period of ninety (90) days after purchase from an authorized Canon dealer as evidenced by your sales receipt. Your sole remedy for a defective CD-ROM shall be replacement of the same without charge when returned by you at your expense to your point of purchase and proven to be defective upon inspection. The replacement CD-ROM will be warranted for the remainder of the original ninety (90) day warranty period of the defective CD-ROM. The limited warranty does not apply if the failure of the CD-ROM resulted from accident, abuse or misapplication of the SOFTWARE and shall not extend to anyone other than the original user of the SOFTWARE.

EXCEPT AS SPECIFICALLY SET FORTH IN THIS PARAGRAPH 4, CANON, CANON'S SUBSIDIARIES, DISTRIBUTORS AND DEALERS DISCLAIM ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, WITH RESPECT TO THE SOFTWARE.

NEITHER CANON NOR ANY OF CANON'S SUBSIDIARIES, DISTRIBUTORS OR DEALERS IS LIABLE FOR ANY DAMAGES HOWSOEVER CAUSED, INCLUDING WITHOUT LIMITATION, DIRECT, CONSEQUENTIAL OR INCIDENTAL LOSS OR DAMAGE INCLUDING LOSS OF PROFITS, EXPENSE OR INCONVENIENCE HOWSOEVER CAUSED OR ARISING OUT OF THE SOFTWARE OR THE USE THEREOF.

NEITHER CANON, NOR ANY OF CANON'S SUBSIDIARIES, DISTRIBUTORS OR DEALERS SHALL HAVE ANY OBLIGATION TO INDEMNIFY YOU AGAINST ANY CLAIM OR SUIT BROUGHT BY A THIRD PARTY ALLEGING THAT THE SOFTWARE OR THE USE THEREOF INFRINGES ANY INTELLECTUAL PROPERTY OF SUCH THIRD PARTY.

5. TERM: This Agreement is effective upon your using the SOFTWARE and remains in effect until expiration of all copyright interests in the SOFTWARE unless earlier terminated. You may terminate this Agreement by destroying the SOFTWARE. This Agreement will also terminate without notice to you if you fail to comply with any of the terms of this Agreement and you must then promptly return the SOFTWARE. In addition, Canon may enforce its other legal rights.
6. U.S. GOVERNMENT RESTRICTED RIGHTS NOTICE: The SOFTWARE is provided with restricted rights. Use, duplication or disclosure is subject to restrictions as set forth in either subparagraph (c) (1) (ii) of the Rights in Technical Data and Computer software clause at DFARs 252.227-7013 or subparagraph (c) (1) and (2) of the Commercial Computer Software Restricted Rights Clause at FAR 52.227-19, as applicable.
7. SEVERABILITY: In the event that any provision of this Agreement is declared or found to be illegal by any court or tribunal of competent jurisdiction, such provision shall be null and void with respect to the jurisdiction of that court or tribunal and all the remaining provisions of this Agreement shall remain in full force and effect.
8. CONTROLLING LAW: The terms of this Agreement as it relates to purchases of the Software in the United States of America shall be governed and construed in all respects in accordance with the laws and regulations of the State of New York, without reference to choice of law principles. The terms of this Agreement as it relates to purchases of the Software in Canada shall be governed by the laws of the province of Ontario.
9. OWNERSHIP: All rights, including but not limited to copyrights and trade secret rights, to the SOFTWARE belong to Canon, its affiliated corporations and third party licensors. Your use of the SOFTWARE is subject to the United States, Canada and other applicable copyright and trademark laws and nothing in this Agreement constitutes a waiver of the rights of Canon, its affiliated corporations and third party licensors under such laws.
   Nothing contained in Paragraph 1 shall be construed to give Canon any ownership rights in any images, graphics or textual material that you save in connection with the Software.
10. ACKNOWLEDGEMENT: BY USING THE SOFTWARE, YOU ACKNOWLEDGE THAT YOU HAVE READ THIS AGREEMENT, UNDERSTOOD IT, AND AGREE TO BE BOUND BY ITS TERMS AND CONDITIONS. YOU ALSO AGREE THAT THIS AGREEMENT IS THE COMPLETE AND EXCLUSIVE STATEMENT OF AGREEMENT BETWEEN YOU AND CANON CONCERNING THE SUBJECT MATTER HEREOF AND SUPERSEDES ALL PROPOSALS OR PRIOR AGREEMENTS, VERBAL OR WRITTEN, AND ANY OTHER COMMUNICATIONS BETWEEN THE PARTIES RELATING TO THE SUBJECT MATTER HEREOF. NO AMENDMENT TO THIS AGREEMENT SHALL BE EFFECTIVE UNLESS SIGNED BY A DULY AUTHORIZED OFFICER OF CANON.

Introduction

EOS Utility (hereinafter EU) is software for communication with your EOS DIGITAL camera. By connecting the camera and computer with the cable provided with the camera, you can download to your computer images saved in the camera's memory card as well as set various camera settings or shoot remotely from EU on your computer.

Main Features of EU

From EU, you can control the camera remotely and perform the following main features.

- **Batch download to your computer images saved in the camera's memory card.**
  - You can also download to your computer only images you have selected.
- **Set various camera settings from your computer.**
- **Shoot remotely by controlling the camera from your computer.**
  - Remote Live View shooting – Shoot while checking your subject in real time on your computer.
  - You can also shoot remotely by operating the camera's shutter button.
  - Preset a time allowing the camera to shoot automatically with timer shooting.
- **When downloading images or shooting remotely, view/check images with the linked Digital Photo Professional.**

System Requirements

OS	Windows 7*1 Windows Vista*2 Windows XP Professional/Home Edition*3
Computer	PC with one of the above OS preinstalled and a USB port as a standard feature (Upgraded machines not supported) * .NET Framework 2.0 or later is required.*4
CPU	1.3GHz Pentium or higher
RAM	Minimum 1GB*5
Interface	Hi-Speed USB
Display	Screen resolution: 1024 × 768 pixels or more Color quality: Medium (16 bit) or more

*1 Compatible with 32-bit/64-bit systems for all versions except Starter Edition
*2 Compatible with 32-bit/64-bit systems for all versions except Starter Edition
*3 Compatible with Service Pack 3
*4 .NET Framework is Microsoft software. It is installed together with EU.
*5 For Windows 7 64-bit systems, minimum 2GB

Supported Camera

Can be used for RAW images, JPEG images or MOV movies shot with the cameras below.

EOS-1D Mark IV	EOS-1Ds Mark III
EOS-1D Mark III	EOS 5D Mark II
EOS 7D	EOS 60D
EOS 50D	EOS 40D
EOS REBEL T3i/600D	EOS REBEL T2i/550D
EOS REBEL T1i/500D	EOS DIGITAL REBEL XSi/450D
EOS REBEL T3/1100D	EOS DIGITAL REBEL XS/1000D

Contents at a Glance

Downloading images from your camera to a computer

- To batch download all the images to a computer ➜ p.7
- To download to a computer selected images only ➜ p.8
- To download images using a third-party card reader ➜ p.10

Camera settings from a computer

- To set the camera owner's name, copyright notice and date/time ➜ p.12
- To set a Picture Style and apply to the camera ➜ p.16
- To apply a Picture Style file to the camera ➜ p.18
- To register a personal white balance in the camera ➜ p.20
- To set a JPEG quality and apply to the camera ➜ p.21
- To adjust a white balance setting and apply to the camera ➜ p.22
- To register lens aberration correction/peripheral illumination correction data for the lens in the camera ➜ p.22
- To set My Menu and apply to the camera ➜ p.24

Remote shooting

- To shoot by controlling the camera from a computer (Remote Live View shooting) ➜ p.27
- To shoot with accurate horizontal/vertical alignment ➜ p.39
- To change the aspect ratio and shoot ➜ p.39
- To shoot with another image displayed as overlay to align several images at the same angle ➜ p.40
- To shoot by operating the camera ➜ p.42
- To shoot movies ➜ p.42
- To shoot with timer ➜ p.53
- To shoot with flash ➜ p.55

Functions for use with other accessories sold separately

- To shoot with the Wireless File Transmitter WFT-E2/A, E2 II A/B/C/D, E3/A, E4/A, E4 II A/B/C/D, or E5A/B/C/D and check the images in real time ➜ p.68
- To start up the WFT-E2/A, E2 II A/B/C/D, E3/A, E4/A, E4 II/A/B/C/D, or E5A/B/C/D software from EU ➜ p.69

Other

- To register background music to the camera's memory card ➜ p.58

1 Downloading Images to your Computer

Basic operation such as preparing for downloading images to your computer (connecting your camera and computer), starting up EU, downloading images from your camera to your computer and exiting EU are explained here.

Connecting the Camera and Computer 5
Starting up EU 6
Batch Downloading Images to Your Computer 7
Downloading Selected Images to Your Computer..... 8
Downloading Images with a Card Reader 10
Downloading Images Using Digital Photo Professional ... 10
Downloading Images Using ZoomBrowser EX 10
Downloading Images without Using Canon Software... 10
Exiting EU 10

Connecting the Camera and Computer

To download to your computer images shot with your camera, you will need to connect your camera and computer using the interface cable provided with your camera.

1 Connect the large plug of the cable into the USB port of your computer.

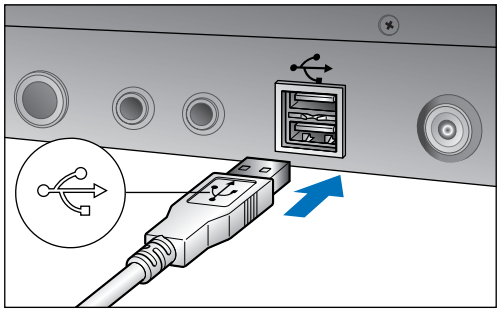

- For the location and direction of the USB port, refer to the computer User's Manual.

2 Connect the small plug of the cable into the terminal on your camera.

- Once the plug is connected to the camera according to the steps for your camera model, preparation for downloading images is complete. Continue with "Starting up EU".

1D Mk IV

- With the < > mark on the plug facing the back of the camera, connect it to the camera's <A/V OUT / DIGITAL> terminal.

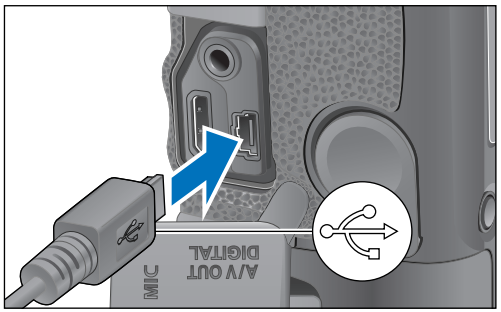

1Ds Mk III 1D Mk III

- With the < > mark on the plug facing the front of the camera, connect it to the camera's < > terminal.

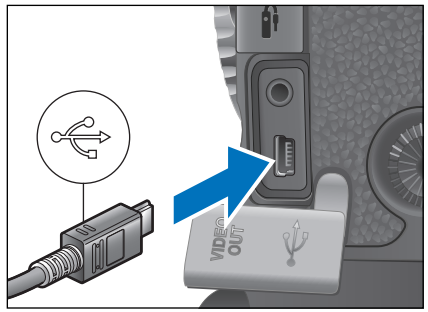

Cameras other than 1D Mk IV 1Ds Mk III 1D Mk III

- With the < > mark on the plug facing the front of the camera, connect it to the camera's < > terminal or <A/V OUT / DIGITAL> terminal.

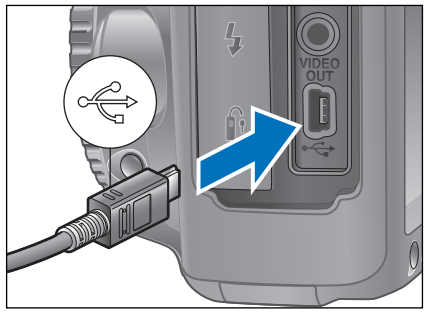

With 1D Mk IV 1Ds Mk III 1D Mk III, you can fix the plug to the camera with the cable protector to prevent the plug from disconnecting. For details on using, refer to p.71, p.72.

Starting up EU

When the camera's power switch is set to < ON >, EU will start up, and the camera and computer will be able to communicate.

1 Set the camera's power switch to < ON >.

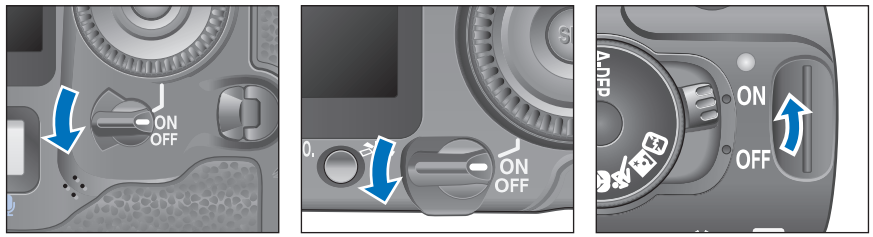

➜Communication between the camera and the computer begins and the dialog box in step 2 is displayed.

- If the window in step 2 is not displayed even when you set the camera's power switch to < ON >, double-click the [EOS Utility] icon on your desktop to start up EU.
- REBELT1i 500D cannot communicate with EU if the camera's mode dial is set to < >. Set the mode dial to a mode other than < >.

2 Click [Downloads images from EOS camera].

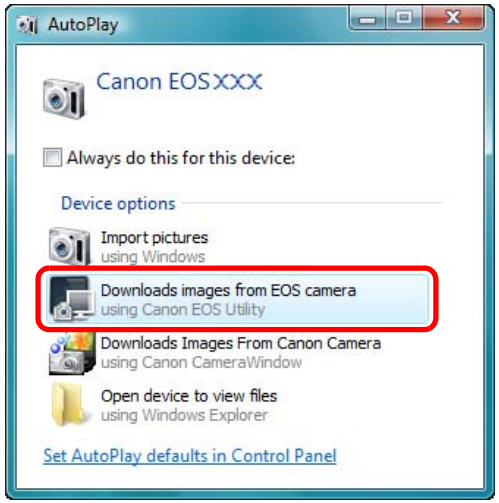

EU Main window

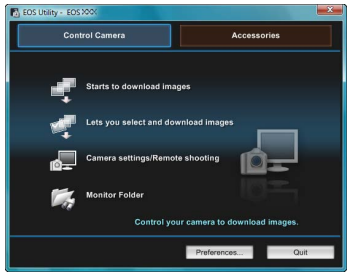

➜EU starts up, the main window appears, and your camera and computer can now communicate. Continue with "Batch Downloading Images to Your Computer".

- In Windows XP, select [Canon EOS Utility] and then click the [OK] button to start up EU.
- When [Always do this for this device] ([Always use this program for this action] in Windows XP) is checkmarked, from the next time you connect your camera and computer, EU will start when you set your camera's power switch to < ON >.
- The camera's LCD monitor turns on when EU starts up.
- For cameras other than 1D Mk IV 7D 60D REBELT3i 600D REBELT2i 550D REBELT3 1100D, you can operate the camera and download images saved on the memory card inserted in the camera to your computer. Refer to your camera's Instruction Manual for details.

Batch Downloading Images to Your Computer

You can batch download to your computer all the images saved on the memory card inserted in the camera that you have not already downloaded.
The downloaded images are sorted by date into folders and are then displayed in the main window of Digital Photo Professional (RAW image processing, viewing and editing software) (hereinafter DPP), which is linked to start up automatically, where you can check them immediately.

1 Click [Starts to download images].

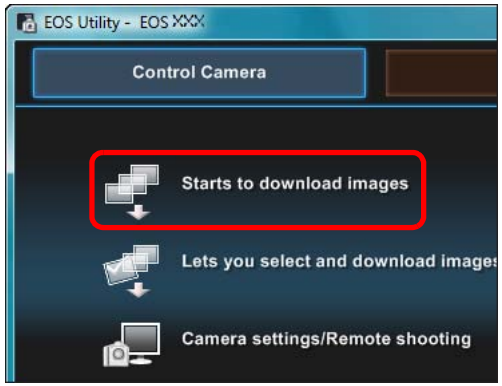
EOS Utility - EOS XXX
Control Camera
Starts to download images
Lets you select and download images
Camera settings/Remote shooting

Save File dialog box

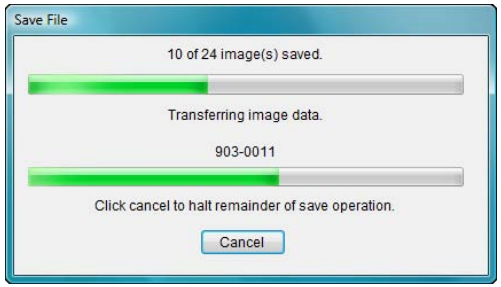

➜The [Save File] dialog box appears and image downloading to your computer begins.
➜The downloaded images are saved in the [My Pictures] folder.
- When all images have been downloaded, DPP starts up automatically and the downloaded images are displayed in DPP's main window.

2 Check the downloaded images.

DPP Main window

- Check the downloaded images in DPP.
  For details on using DPP, refer to the "Digital Photo Professional Instruction Manual" (PDF electronic manual).
- Continue with "Exiting EU" (p.10).

- When you download images, you can change the software that starts up from DPP to ZoomBrowser EX or other software in preferences ([Linked Software] tab sheet) (p.64).
- You can change the save destination for images downloaded and images to download in preferences ([Destination Folder] tab sheet, [Download Images] tab sheet) (p.62, p.63).
- Downloading movie files may take some time due to the large file size.

Downloading Selected Images to Your Computer

From the images saved in your camera's memory card, you can select the ones you want and download them to your computer.

1 Click [Lets you select and download images].

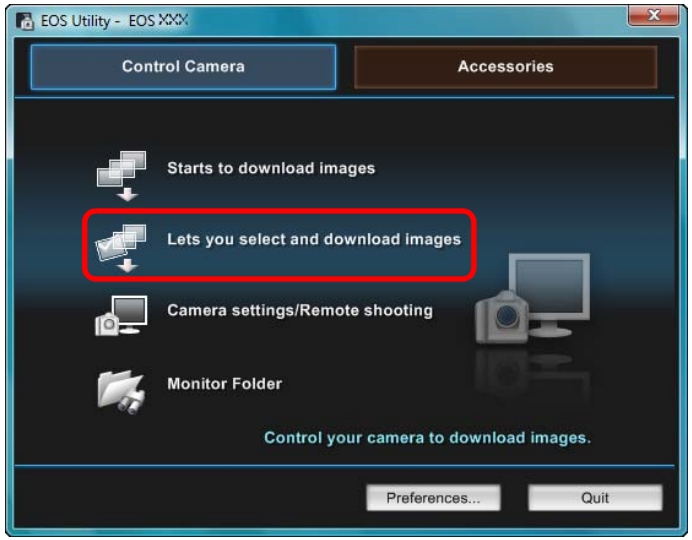

➜A viewer window appears and the images in the memory card are displayed.

2 View the images and checkmark images to download.

Viewer window

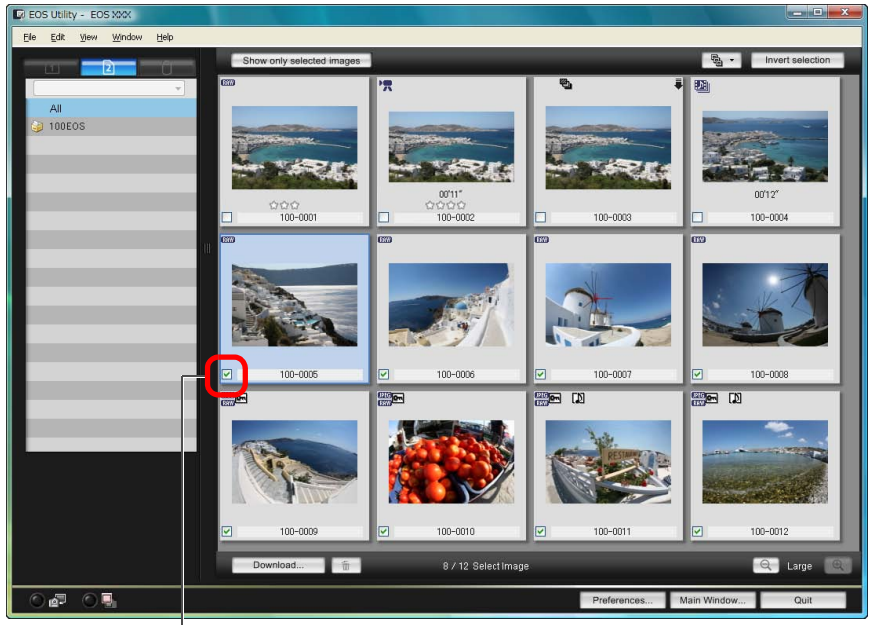

Add check mark

You can click the [ ] button and extract images by a variety of criteria to select images to download.

3 Click the [Download] button.

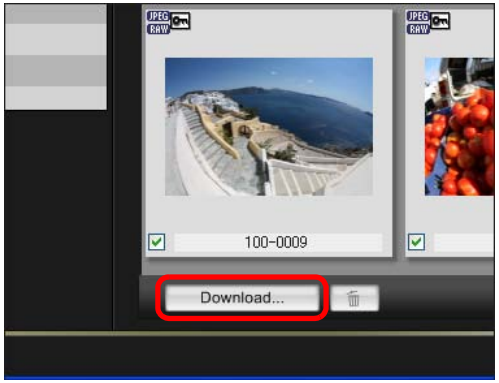

➜The [Download image] dialog box appears.

4 Specify the save destination and then click the [OK] button.

Displays the save destination on the computer

Download image dialog box

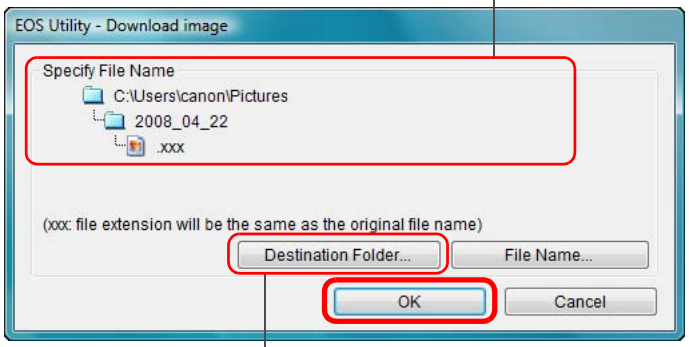

Specify the save destination

➜The [Save File] dialog box appears and image downloading to your computer begins.

➜The images downloaded to your computer are displayed in the [Quick Preview] window.

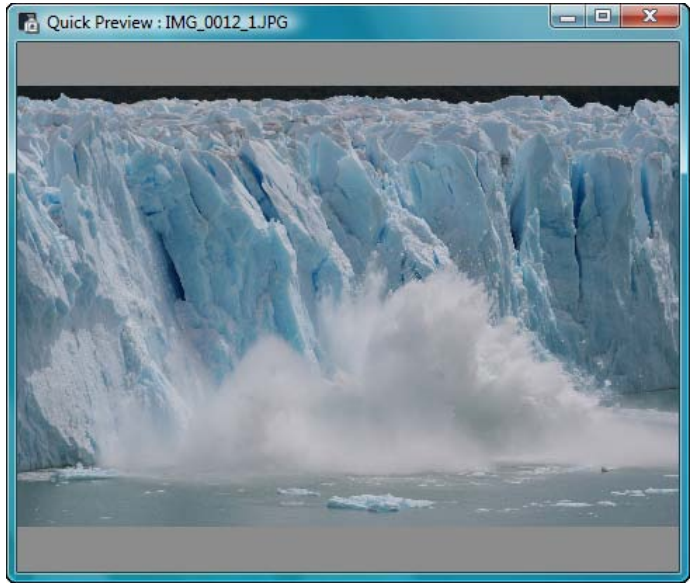

- The [Quick Preview] window allows you to quickly review the downloaded images. You can also resize the [Quick Preview] window.
- When all images have been downloaded, DPP starts up automatically and the downloaded images are displayed.
- To switch to the main window, click the [Main Window] button in the viewer window.

- In step 2, you can batch checkmark several images in sequence. After clicking the first image you want to download, hold the < Shift > key and click the last image, and [ ] will be displayed. By clicking the [ ] button, the selected images will be checkmarked in a batch.
- For a list of viewer window functions, refer to p.74.

Downloading Images with a Card Reader

For users with a third-party card reader, you can also download to your computer images stored in a memory card using the card reader. However, EU does not support image downloading using a card reader. For this reason, when downloading images using a card reader, use one of the following 3 procedures.

Downloading Images Using Digital Photo Professional

You can use DPP to download to your computer shot images from a memory card inserted in a third-party card reader connected to your computer.

For detailed instructions, refer to “Downloading Images Using Your Card Reader” in the “Digital Photo Professional Instruction Manual” (PDF electronic manual).

Downloading Images Using ZoomBrowser EX

You can use ZoomBrowser EX to download to your computer shot images from a memory card inserted in a third-party card reader connected to your computer.

For detailed instructions, refer to “Downloading Images Using Your Card Reader” in the “ZoomBrowser EX Instruction Manual” (PDF electronic manual).

Downloading Images without Using Canon Software

To download images with a card reader without using Canon software such as DPP or ZoomBrowser EX, copy to your computer the [DCIM] folder in the memory card.

For more details about folder structures and files in the memory card, refer to p.70.

Exiting EU

1 Click the [Quit] button.

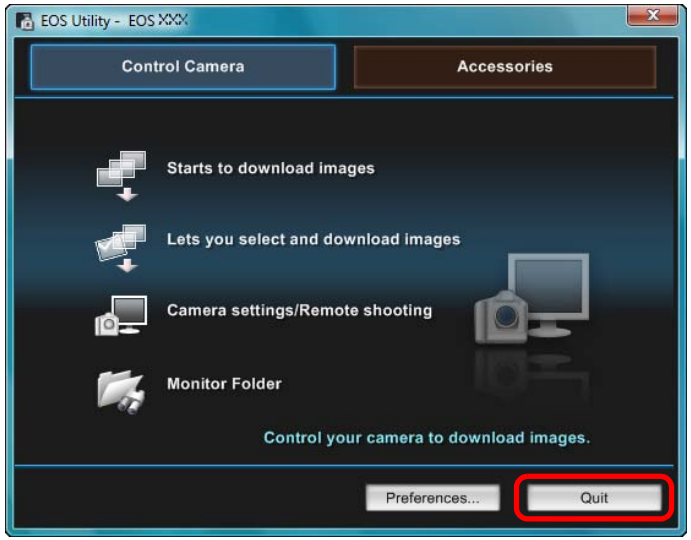

➜The window closes and EU exits.

2 Turn the camera’s power switch to < OFF >.

3 Disconnect the cable from the camera and computer.

- Do not pull on the cable; hold the plug and pull out.

2 Setting the Camera from Your Computer

This section explains how to set the camera's functions from EU.

Setting the Camera Owner's Name, Copyright Notice and Date/Time 12
Available Settings by Camera Model 13
Setting up Camera Functions 14
Available Settings by Camera Model 15
Setting Picture Styles and Applying to the Camera 16
Selecting a Picture Style and Applying to the Camera 16
Changing Picture Style Settings and Applying to the Camera 17
Applying Picture Style Files to the Camera 18
Saving White Balance to your Computer 19
Registering Personal White Balance in the Camera ... 20
Setting JPEG Quality and Applying to the Camera 21
Adjusting White Balance and Applying to the Camera... 22
Registering Lens Aberration Correction/Peripheral Illumination Correction Data for the Lens in the Camera 22
Setting My Menu and Registering to the Camera 24

Setting the Camera Owner's Name, Copyright Notice and Date/Time

You can set and apply to the camera, the camera owner's name, copyright notice and date/time recorded as shooting information in shot images.

1 Connect your camera and computer, and then start up EU (p.5).

2 Click [Camera settings/Remote shooting].

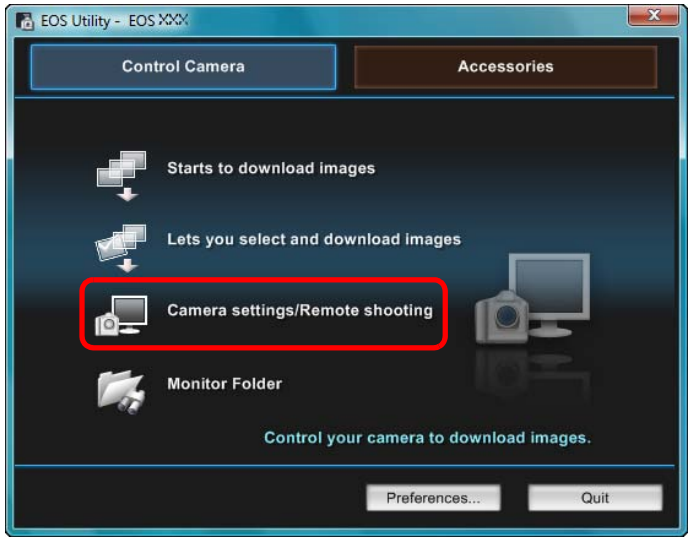

➜The capture window appears.

3 Click the [ ] button.

Capture window

➜The [Set-up menu] appears.

4 Click the required setting and specify each one.

Set-up menu

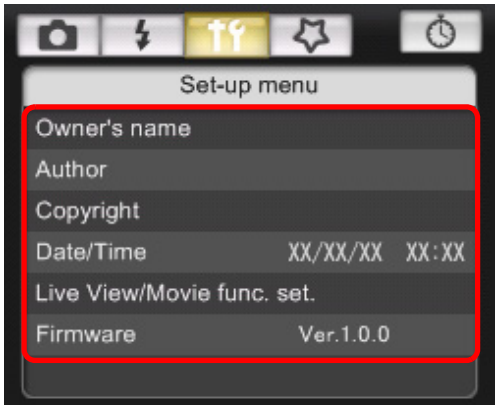

- Available settings are displayed for the camera that is connected. For more details, refer to “Available Settings by Camera Model” (Description on the below).

For a list of the capture window functions, refer to p.77.

Available Settings by Camera Model

Setting	1Ds Mk III, 1D Mk III	1D Mk IV, 5D Mk II, 7D, 60D, 50D, REBELT3i, 600D, REBELT2i, 550D, REBELT1i, 500D, REBELT3, 1100D	40D, REBELXSi, 450D, REBELXS, 1000D
Owner’s name	○	○	○
Author*1	–	○	–
Copyright holder (copyright notice)*1	–	○	–
Date/Time	○	○	○
Live View/Movie func. set.*2	○	○	○
Firmware	○	○	○

Owner’s name

- You can enter and set up to 31 characters as the camera owner’s name.

Author*1

- You can enter and set up to 63 characters or symbols, including a prefix, as the author’s name.

Copyright holder (copyright notice)*1

- You can enter and set up to 63 characters or symbols, including a prefix, as the photo creation’s copyright holder (copyright notice).

Date/Time

- You can set the camera’s date and time.

Live View/Movie func. set.*2

- You can set whether the Live View function settings or Movie function settings (p.27, p.42) are available or not.

Firmware

- You can display the version of the camera’s firmware.
- You can update the firmware by clicking on this item.
- For more details on updating firmware, refer to the Canon’s website.

*1 When the author or copyright holder (copyright notice) set is not displayed in full, moving the cursor to the displayed setting item will display all the entered information as a pop-up.

*2 Movie function settings are for 1D Mk IV, 5D Mk II, 7D, 60D, REBELT3i, 600D, REBELT2i, 550D, REBELT1i, 500D, REBELT3, 1100D only.

Setting up Camera Functions

You can set and apply to the camera Picture Styles, personal white balance, JPEG quality and white balance adjustment.

1 Connect your camera and computer, and then start up EU (p.5).

2 Click [Camera settings/Remote shooting].

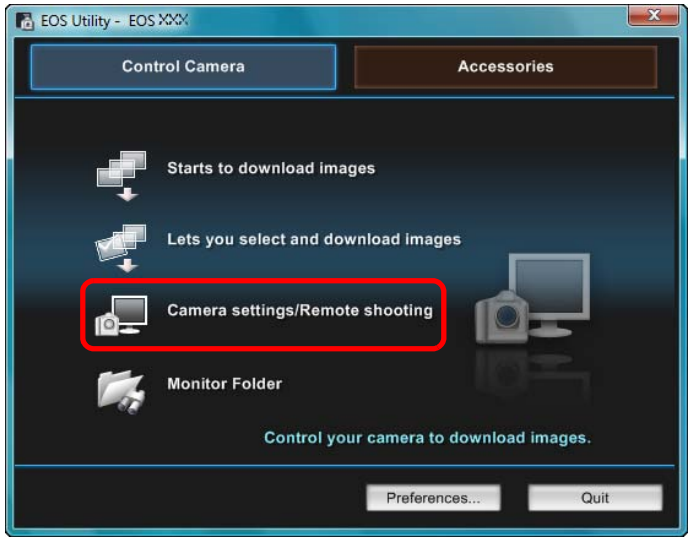

➜The capture window appears.

3 Click the [ ] button.

➜The [Shooting menu] appears.

4 Click the required setting and specify each one.

Shooting menu

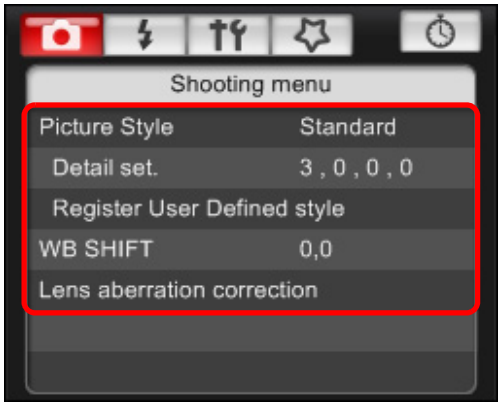

- Available settings are displayed for the camera that is connected. For more details, refer to “Available Settings by Camera Model”.

For a list of the capture window functions, refer to p.77.

Available Settings by Camera Model

Setting	1D Mk IV, 1Ds Mk III, 1D Mk III	5D Mk II, 60D, REBELT3i, REBELT2i, REBELT1i, REBELT3, 7D, 50D, 600D, 550D, 500D, 1100D	40D, REBELXSi, 450D, REBELXS, 1000D
Picture Style	○	○	○
Personal white balance	△*	–	–
JPEG quality	○	–	–
White balance adjustment	○	○	○
Registering lens aberration correction/peripheral illumination correction data	△*	○	–

△* Setting is possible for 1D Mk IV, but not for 1Ds Mk III 1D Mk III.

Picture Style

- You can set a Picture Style and apply it to the camera, in the same way as operating from the camera (p.16).

Personal white balance

- You can register to the camera a personal white balance file (p.20).

JPEG quality

- You can set the JPEG image quality and apply it to the camera, in the same way as operating from the camera (p.21).

White balance adjustment

- You can adjust the white balance, in the same way as operating from the camera (p.22).

Registering lens aberration correction/peripheral illumination correction data

- You can register lens aberration correction/peripheral illumination correction data for the lens to the camera or delete registered data from the camera (p.22).

Setting Picture Styles and Applying to the Camera

You can set and apply Picture Styles to the camera, in the same way as operating from the camera. You can change the values for [Sharpness], [Contrast], [Saturation] and [Color tone] of each Picture Style and register up to three of your own Picture Styles in the camera as user-defined settings.
You can also register Picture Style files in the camera as user-defined settings you have downloaded from the Canon's website or created with Picture Style Editor (Picture Style file creating software) (hereinafter PSE) and saved to your computer.

For 1D Mk IV 7D 60D REBELT3i 600D REBELT2i 550D REBELT3 1100D, registering Picture Styles may take some time.

Selecting a Picture Style and Applying to the Camera

1 Click [Picture Style].

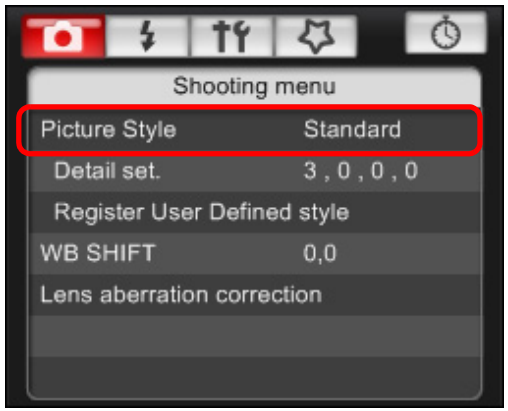

➜The [Picture Style] window appears.

2 Click the Picture Style to be set in the camera.

Picture Style window

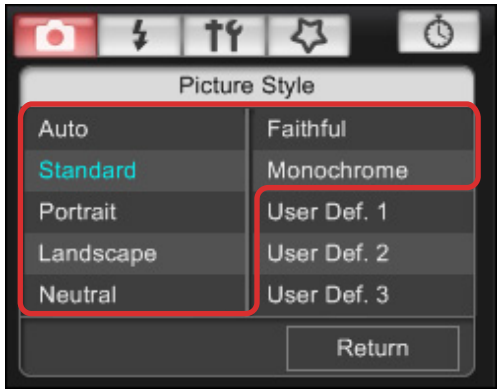

➜The setting is applied to the camera and the display returns to the [Shooting menu].

[Auto] appears for Picture Styles only with REBELT3i 600D.

Changing Picture Style Settings and Applying to the Camera

You can set your own Picture Style [Sharpness], [Contrast], [Saturation] and [Color tone] and apply them to the camera, in the same way as operating from the camera.

1 Click [Detail set.].

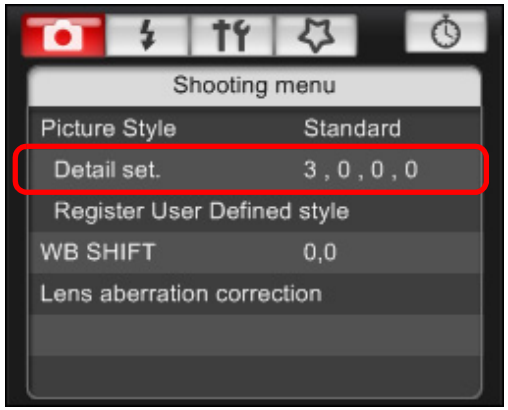

➜The [Detail set.] dialog box appears.

2 Set by clicking the pointer on the slider for each item.

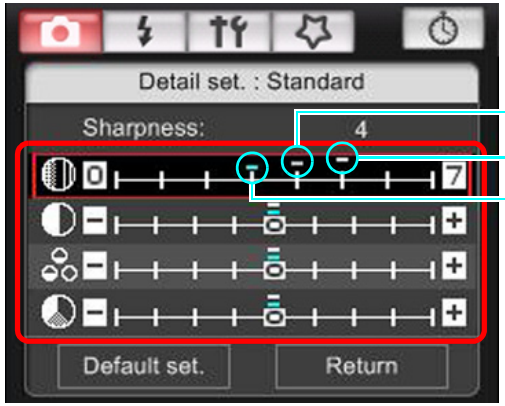

Cursor position
Setting
Default setting

➜If you select [Monochrome] for the Picture Style (p.16), the [Filter effect] and [Toning effect] list boxes appear.

3 Click the [Return] button.

➜The settings are applied to the camera, and the display returns to the [Shooting menu].

Applying Picture Style Files to the Camera

You can register up to three Picture Style files downloaded from the Canon's website or created with PSE and saved to your computer, as user-defined settings in your camera.

1 Click [Register User Defined style].

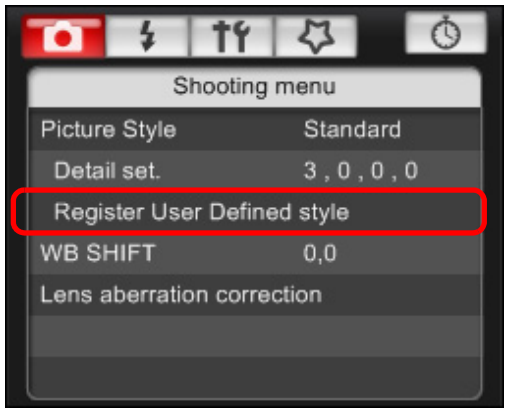

➜The [Register Picture Style File] dialog box appears.

2 Select a tab from one of [User Defined 1] to [User Defined 3].

3 Click the [ ] button.

➜The [Open] window appears.

4 Select a Picture Style file and then click the [Open] button.

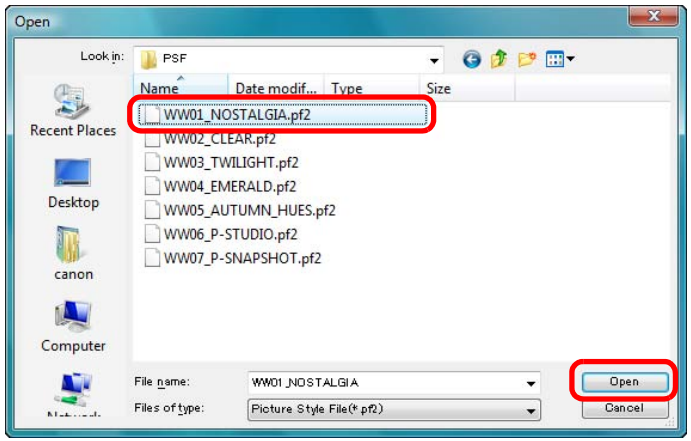

➜The Picture Style file is loaded.

5 Click the [OK] button.

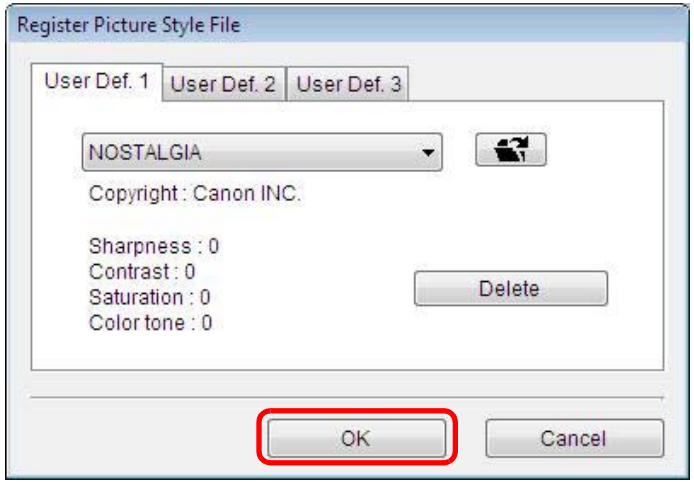

➜The Picture Style file is registered in the camera.

- A Picture Style file is an extended function of Picture Style. For more details on Picture Style files, refer to the Canon's website.
- The Picture Style files that you can apply to the camera are files with the ".PF2" extension only.
- For details on using PSE, refer to the "Picture Style Editor Instruction Manual" (PDF electronic manual).

Saving White Balance to your Computer

1D Mk IV

You can save the adjustment results for an image's white balance to your computer as a white balance file (extension ".WBD"). White balance files saved to your computer can be registered in the camera as personal white balances (p.20).

1D Mk IV

Start by registering a white balance in your camera after adjusting it in the [Remote Live View window] or [Test Shooting] window.

1 Click [Personal WB].

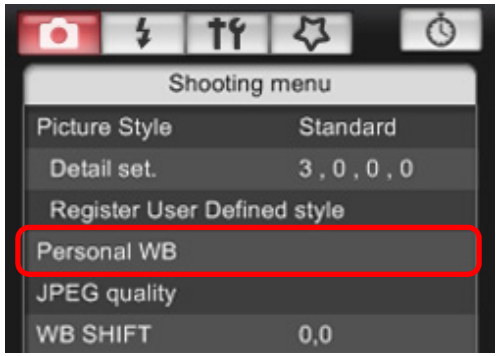

➜The [Personal white balance settings] dialog box appears.

2 Select the white balance to be saved to your computer and click the [Save] button.

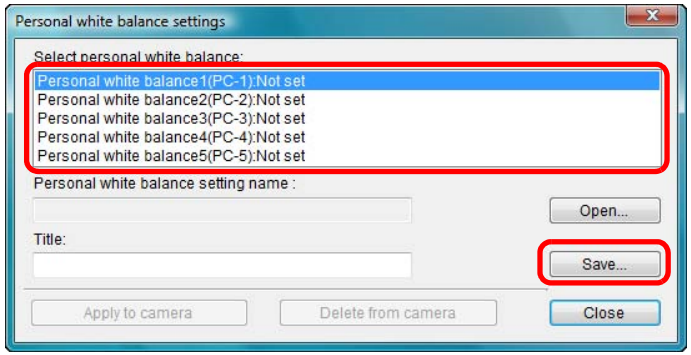

3 In the window that appears, enter a filename, select a save destination, and then click the [Save] button.

➜The white balance file is saved to your computer.

Registering Personal White Balance in the Camera

1D Mk IV

White balance files created by adjusting the white balance of an image and saving the results can be registered in the camera as personal white balances.

1 Click [Personal WB].

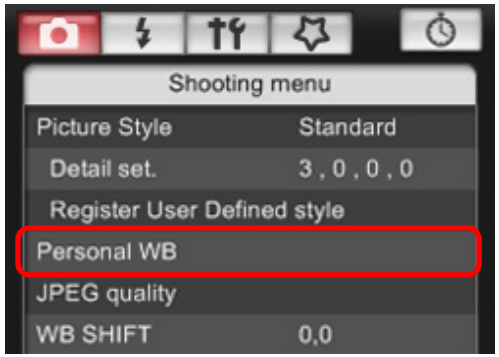

➜The [Personal white balance settings] dialog box appears.

2 Select the personal white balance to be registered and click the [Open] button.

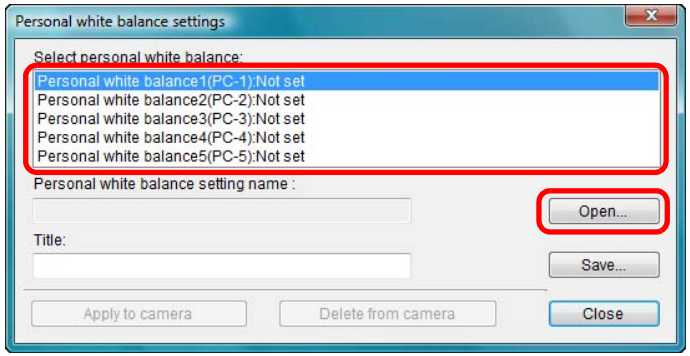

➜The [Open] dialog box appears.

3 **Open the folder containing the saved white balance file, select the file and then click the [Open] button.**

➜The white balance file is loaded.

- The white balance files that you can register to the camera are files with the ".WBD" extension.

4 **Enter a title into the [Title] input field.**

5 **Click the [Apply to camera] button.**

➜The personal white balance is registered on the camera.

- To register another setting, repeat step 2 to step 5.

6 **Click the [Close] button.**

➜The [Personal white balance settings] dialog box closes and the display returns to the [Shooting menu].

7 **Select a registered personal white balance on the camera.**

- Select a registered personal white balance as the white balance.
- For selecting personal white balance or manual white balance, refer to "Selecting the White Balance" in the camera's Instruction Manual provided with your camera.

Setting JPEG Quality and Applying to the Camera

1D Mk IV | 1Ds Mk III | 1D Mk III

You can set the JPEG image quality and apply it to the camera, in the same way as operating from the camera.

1 **Click [JPEG quality].**

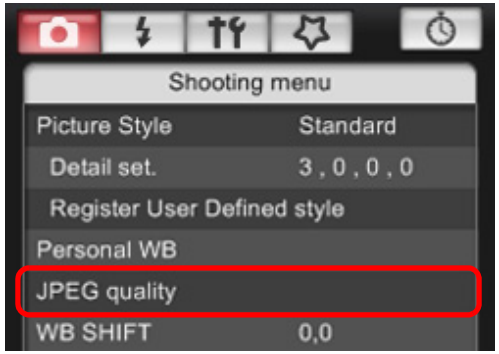

➜The [JPEG Quality] window appears.

2 **Click the setting position.**

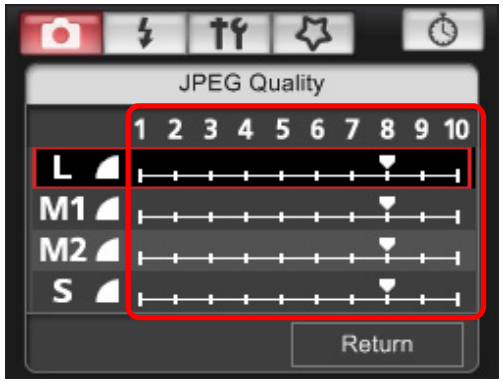

➜The settings are applied to the camera.

- Higher values give a lower compression ratio and higher image quality for any size.

3 **Click [Return].**

➜The display returns to the [Shooting menu].

Adjusting White Balance and Applying to the Camera

You can adjust white balance, in the same way as operating from the camera.

1 Click [WB SHIFT].

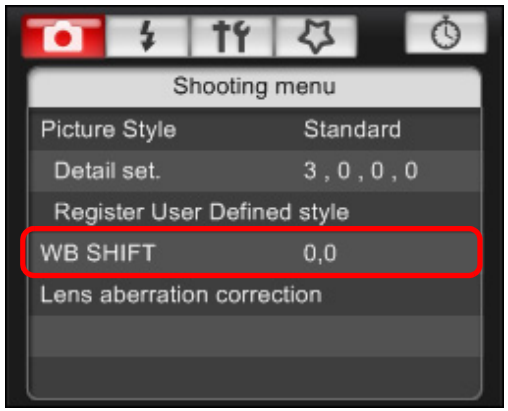
Shooting menu
Picture Style Standard
Detail set. 3 , 0 , 0 , 0
Register User Defined style
WB SHIFT 0,0
Lens aberration correction

➜The [WB SHIFT] window appears.

2 Click the compensation position.

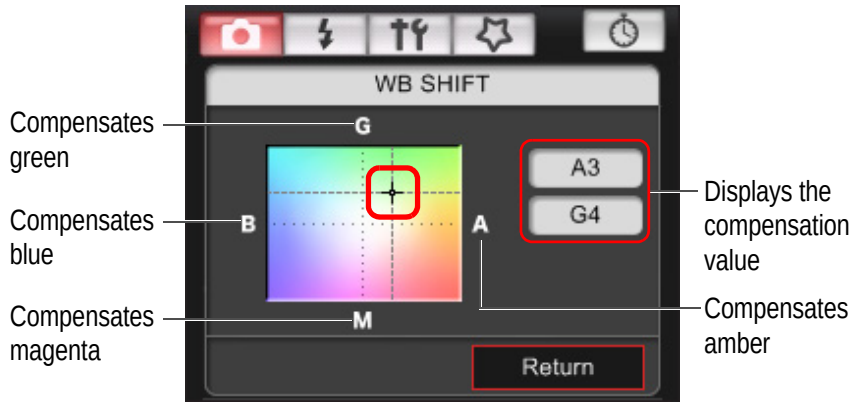

➜The settings are applied to the camera.

3 Click [Return].

➜The display returns to the [Shooting menu].

- To revert the corrected values to the original values, follow the procedure in step 2.

Registering Lens Aberration Correction/Peripheral Illumination Correction Data for the Lens in the Camera

1D Mk IV | 5D Mk II | 7D | 60D | 50D | REBELT3i | 600D | REBELT2i | 550D | REBELT1i | 500D | REBELT3 | 1100D

You can register lens aberration correction/peripheral illumination correction data for the lens to the camera or delete registered data from the camera.

For cameras where [Lens aberration correction] is displayed in the [Shooting menu], data is registered or deleted for lens peripheral illumination correction, distortion correction, and chromatic aberration correction. (Data for distortion correction and chromatic aberration correction is used during RAW processing on the camera.)

For cameras where [Peripheral illumin. correct.] is displayed in the menu, only lens peripheral illumination correction data is registered or deleted.

1 Click [Lens aberration correction] or [Peripheral illumin. correct.].

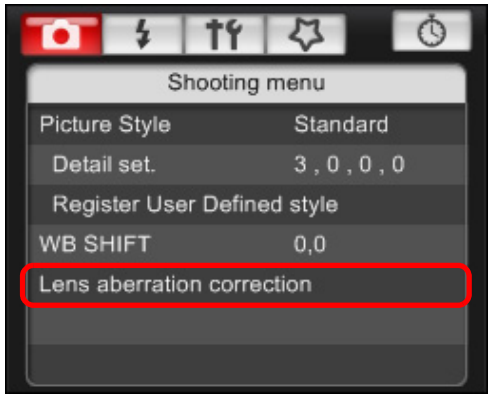
Shooting menu
Picture Style Standard
Detail set. 3 , 0 , 0 , 0
Register User Defined style
WB SHIFT 0,0
Lens aberration correction

➜The [Register lens aberration correction data] window or [Register peripheral illumination correction data] window appears. Lenses for which correction data is registered in the camera are shown checked.

- Window names that will appear and data to be registered in the camera differ depending on the camera, however, the following steps are the same.

2 Select the lens category for which you want to register correction data.

Register lens aberration correction data/Register peripheral illumination correction data window

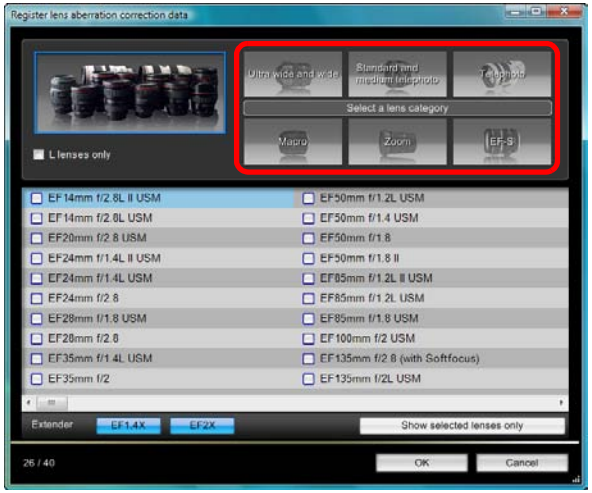

➜A list appears showing only the selected lens category.

3 Select the lens for which you want to register correction data and click the [OK] button.

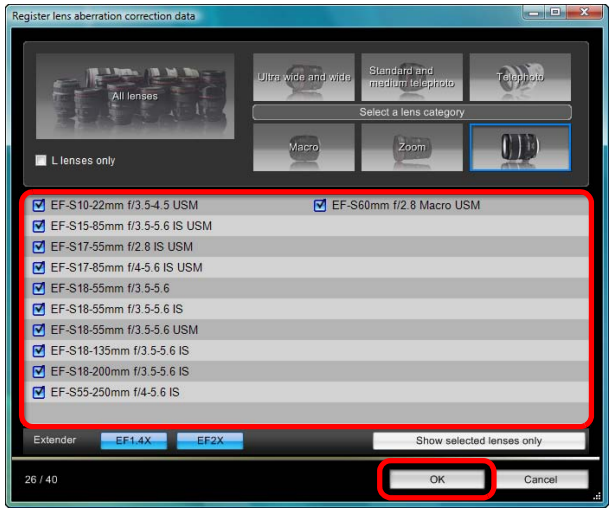

➜The correction data for the selected lens is registered in the camera.

- You can delete correction data from the camera by removing the check mark from the registered lens and clicking the [OK] button.

- For a list of the [Register lens aberration correction data] window or [Register peripheral illumination correction data] window functions, refer to p.75.
- Lens names displayed in the [Register lens aberration correction data] window or [Register peripheral illumination correction data] window may be partially shortened depending on the lens type.

Setting My Menu and Registering to the Camera

You can register up to six frequently used menu items as My Menu and register them to the camera, in the same way as operating from the camera.
You can register top layer items of each tab as well as all items of Custom Functions.

1 Connect your camera and computer, and then start up EU (p.5).

2 Click [Camera settings/Remote shooting].

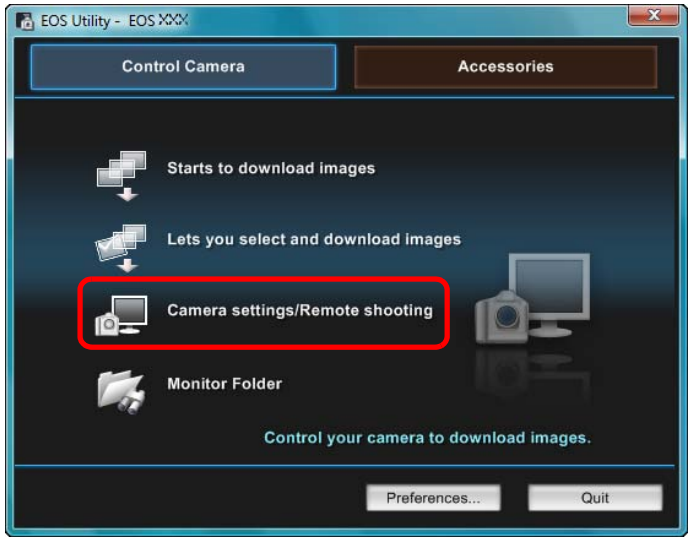

➜The capture window appears.

3 Click the [ ] button.

➜The [My Menu] appears.

4 Click [My Menu settings].

My Menu

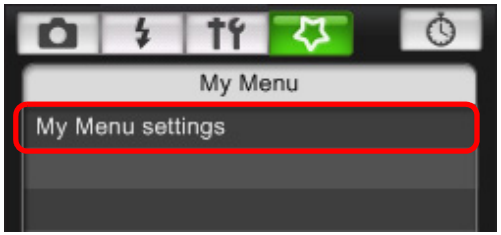

➜The [My Menu settings] window appears.

5 Select the item to be registered and click the [Add] button.

My Menu settings window

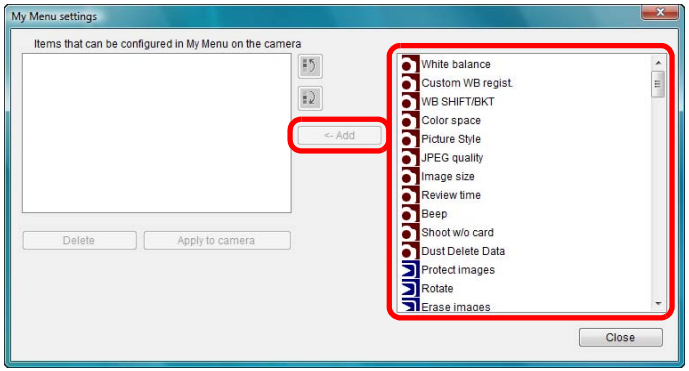

➜The selected item is added to [Items that can be configured in My Menu on the camera] on the left side of the window.

- You can register up to six items with the above procedure.
- You can change the position of an item by selecting it and then clicking the [ ] or [ ] button to move it.

6 Click the [Apply to camera] button.

➜The setting is applied to the camera.

For a list of the [My Menu settings] window functions, refer to p.76.

3 Remote Shooting by Controlling the Camera from Your Computer

From EU you can control the camera remotely, and by viewing the subject in the EU window, you can set the camera and shoot. You can also shoot by directly operating your camera even during remote shooting, or preset a time allowing the camera to shoot automatically with timer shooting.

Remote Live View Shooting 27
Remote Live View Window Functions 32
Focusing Manually 32
Focusing Using AF 34
Focusing Using Quick Mode 34
Focusing Using Live Mode 35
Focusing Using Face Detection Live Mode 36
Checking the Depth of Field and Exposure 36
White Balance with the Remote Live View Window .. 37
White Balance for Flash Photography 37
Adjusting the Horizontal/Vertical Alignment of the Camera 39
Changing the Aspect Ratio 39
Overlaid Display Function 40
Setting the Composite Ratio 41
Hiding the Overlaid Display Temporarily 41
Setting a Different Image as Overlaid Display 41
Exiting the Overlaid Display Function 41
Shooting by Operating the Camera 42
Shooting Movies 42
Timer-controlled Shooting 53
Timer Shooting 53
Interval Timer Shooting 53
Bulb Exposures 54
Flash Shooting 55
Registering Background Music to a Camera Memory Card 58

Remote Live View Shooting

You can control your camera remotely from EU and shoot still images from your computer screen.
Also, the shot image is saved directly on your computer and you can recheck it using the linked software Digital Photo Professional (hereinafter DPP).
This function is effective for shooting large numbers of shots with fixed-framing such as for studio shooting.

1 Connect your camera and computer, and then turn the camera's power switch to < ON >.

➜EU starts up.

- REBELT1i 500D cannot communicate with EU if the camera's mode dial is set to < >. Set the mode dial to a mode other than < >.

2 Click [Camera settings/Remote shooting].

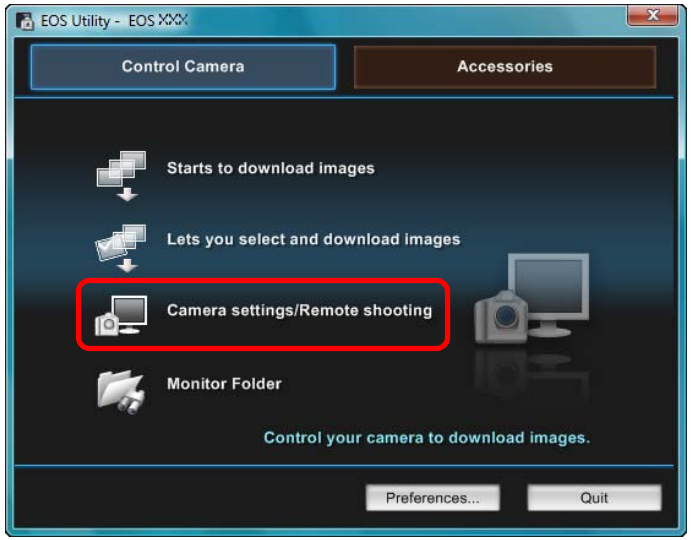

➜The capture window appears.

3 Set the camera.

Drive mode setting
Right-click ▼ under the setting item and select settings from the menu*1 that appears

(1D Mk IV | 5D Mk II | 7D | 60D | 50D | REBELT3i | 600D | REBELT2i | 550D | REBELT1i | 500D | REBELT3 | 1100D)

Mirror lockup menu display and setting
Right-click ▼ under the setting item and select settings from the menu*1 that appears

(1D Mk IV | 7D | 60D | REBELT3i | 600D | REBELT2i | 550D)

Double-click or right-click the setting item and select the setting*1 *2

*1 You can also use the scroll-wheel on your mouse to select settings for items in the settings window and menus that appear. You cannot use the scroll-wheel in the mirror lockup menu.

*2 On 1D Mk IV | 5D Mk II | 7D | 60D | 50D | REBELT3i | 600D | REBELT2i | 550D | REBELT1i | 500D | REBELT3 | 1100D, you can right-click the Exposure level/AEB level item and perform AEB setting using the <Shift> key + scroll-wheel.

- You can also use the functions of the [Shooting menu] (p.14).
- The settings that cannot be set in the capture window can be set by operating the camera.
- Mirror lockup settings are available when the camera mode is P, Tv, Av, M, A-DEP or B.
- During mirror lockup, the mirror lockup icon blinks.

4 Click the [ ] button.

➜The [Set-up menu] appears.

5 Set the Live View function.

- Click [Live View/Movie func. set.], and click [Enable] in the [Live View shoot.] window that appears.

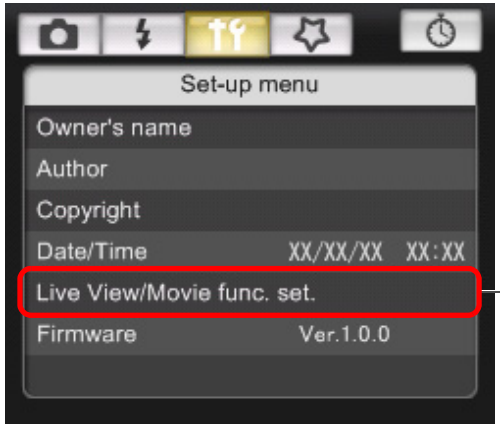

Live View shoot. window

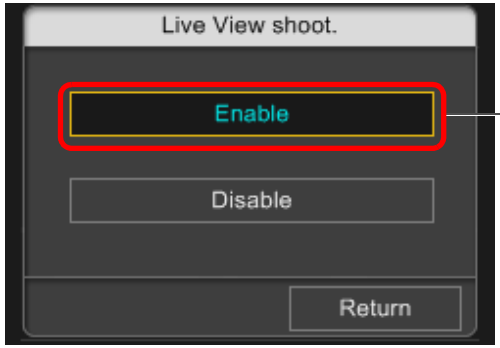

- For cameras other than 1 Ds Mk III 1D Mk III 50D 40D REBELXSi 450D REBELXS 1000D, the [Live View/Movie func. set.] window appears.
  For details on specifying settings, refer to the next page.

Live View/Movie func. set. window

1D Mk IV

Select [Stills] for [LV func. setting] and a setting for [Exposure simulation], and click the [OK] button.

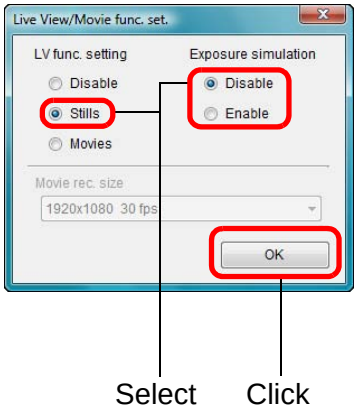

5D Mk II

Select [Stills only] and [Still display], and click the [OK] button.

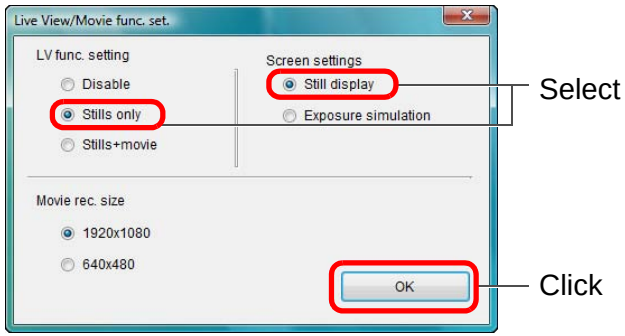

7D 60D

Select [Enable] for [LV func. setting] and the setting for [Exposure simulation], then click the [OK] button.

7D

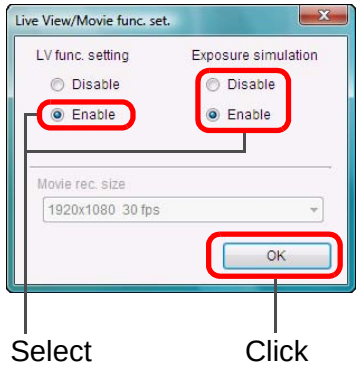

60D

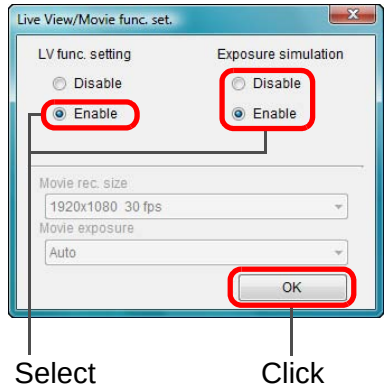

REBELT3i 600D REBELT2i 550D REBELT1i 500D REBELT3 1100D

Select [Enable] and click the [OK] button.

REBELT3i 600D REBELT2i 550D

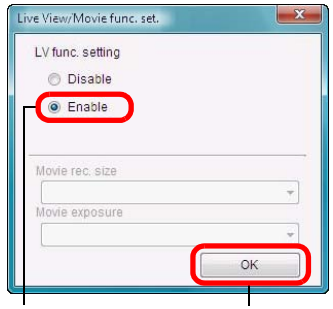

REBELT1i 500D REBELT3 1100D

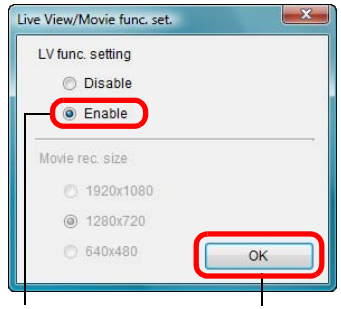

6 Click the [Live View shoot.] button.

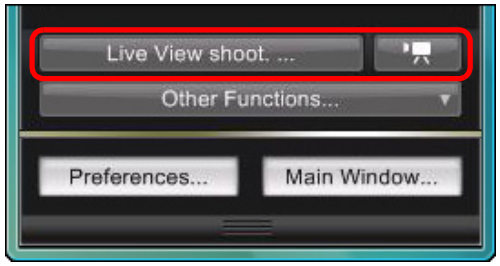

➜The [Remote Live View window] appears.

Remote Live View window

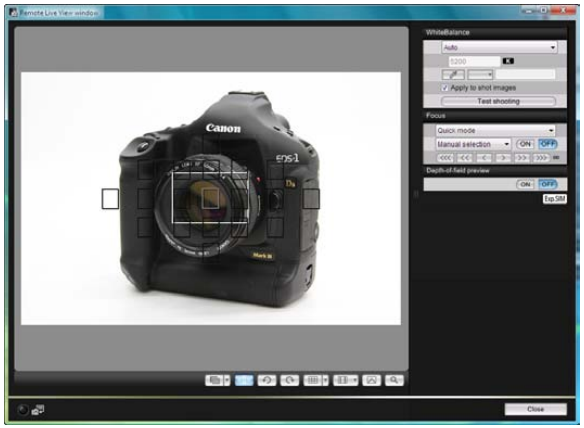

7 Click the [●] button to shoot.

➜The shot image is transferred to your computer and displayed in the [Quick Preview] window. And then, DPP starts up automatically.

- You can quickly review the shot image in the [Quick Preview] window displayed before DPP starts up. You can also resize the [Quick Preview] window.
- You can show/hide the [Quick Preview] window by clicking the [Other Functions] button in the capture widow and selecting [Quick Preview] from the menu that appears.

- You cannot perform RAW processing. If you connect the camera to your computer during in-camera RAW processing, the camera and computer will connect after you finish processing.
- On 60D REBELT3i 600D REBELT3 1100D you cannot set [Creative Auto].

You can also shoot using the <space> bar on the keyboard.

- You cannot operate the camera when the [Remote Live View window] is displayed. Pressing the Live View shooting button (the camera's <SET> button on the 1D Mk IV 1Ds Mk III 1D Mk III 40D REBELXSi 450D REBELXS 1000D) will also display the Live View image on the camera's LCD monitor, allowing you to view the image while operating the camera.
- On 1D Mk IV 1Ds Mk III 1D Mk III 40D REBELXSi 450D REBELXS 1000D, when the cursor is on the capture window's ● button, you can operate the camera's Mode dial to change the shooting mode.
- You can shoot by operating the capture window, even if the [Remote Live View window] is not displayed.
- To perform exposure simulation (p.36) with [Remote Live View window] or enable display of histograms (p.80), set your camera's Custom Function [Live View exposure simulation] to [Enable]. On 1D Mk IV 5D Mk II 7D 60D 50D, set [Exposure simulation] in the menu to [Enable].
- On 1D Mk IV 5D Mk II 7D 60D 50D REBELT3i 600D REBELT2i 550D, you can also use mirror lockup with remote shooting (You cannot take test shots after setting mirror lockup.). On 1D Mk IV, you can also use silent single shooting.
- With 1Ds Mk III 1D Mk III, mirror lockup and silent single shooting cannot be performed in remote shooting.
- The [Test Shooting] window appears when you click the [Test shooting] button.
  During flash shooting, you can take a test shot under the same conditions as an actual shot, and adjust the white balance based on the shot test image (p.37).
- You can save shot images to both your computer and a memory card by checkmarking [Save also on the camera's memory card] in preferences ([Remote Shooting] tab sheet) (p.64).

- You can change the software that starts up automatically when remotely shot images are transferred to your computer from DPP to ZoomBrowser EX or other software in preferences ([Linked Software] tab sheet) (p.64).
- For a list of the [Remote Live View window] functions, refer to p.80.
- For a list of the [Zoom View] Window functions, refer to p.81.

Remote Live View Window Functions

These pages explain the functions available in the [Remote Live View window], including checking the camera settings and focusing while viewing your subject on the computer screen.

Focusing Manually

You can focus manually while viewing the enlarged image in the [Remote Live View window].

1 Set the lens's focus mode switch to < AF >.

2 Drag [□] to the section you want to enlarge.

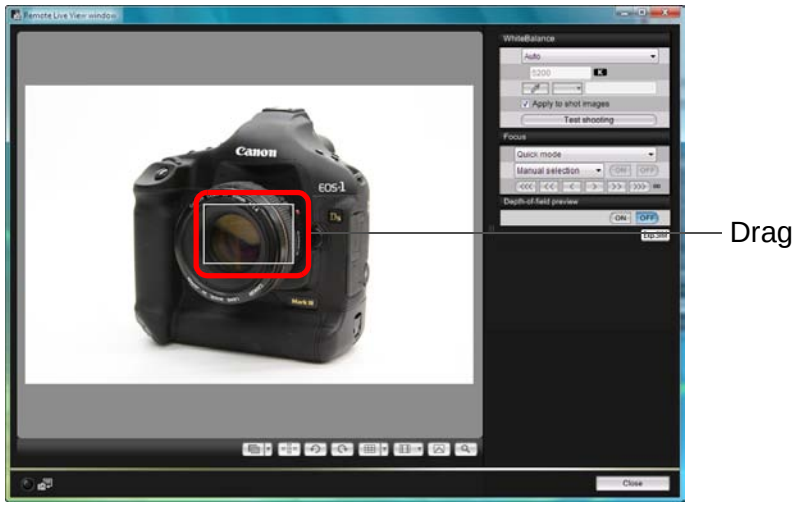

3 Click the [ ] button.

➜The section you selected in step 1 is displayed enlarged at 100% (actual pixel size) in the [Zoom View] window.

Zoom View window

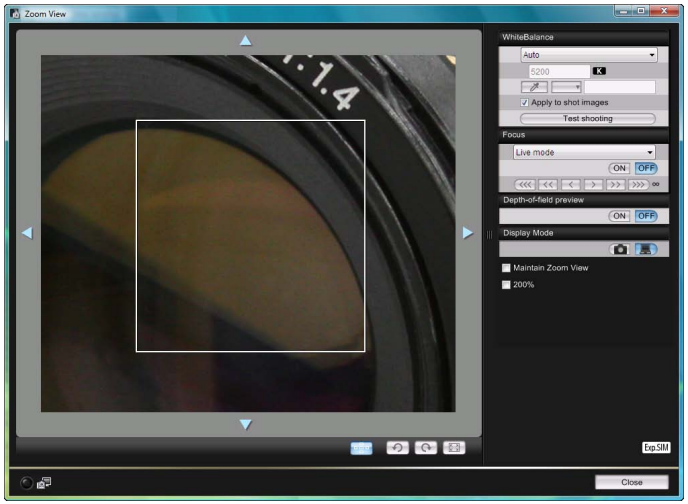

- To move the display position in the [Zoom View] window, click on [ ], [ ], [ ], [ ]. You can also move the display position by dragging the window.
- You can checkmark [Maintain Zoom View] to maintain display of the [Zoom View] window.
- You can also double-click the section you want to enlarge in step 1 to display an enlarged view at 100% (actual pixel size) in the [Zoom View] window.
- Double-click an image in the [Zoom View] window to return to the [Remote Live View window].
- You can checkmark [200%] to view the section enlarged to 200%.

4 Adjust the focus.

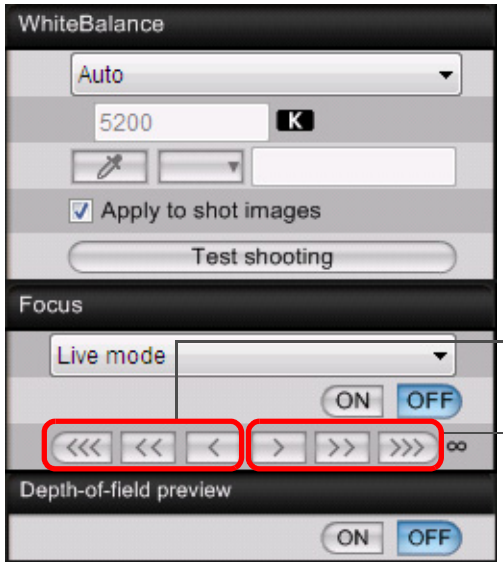

- [ ], [ ]: Adjustment Large amount
- [ ], [ ] : Adjustment Medium amount
- [ ], [ ] : Adjustment Small amount

➜The [Remote Live View window] changes in real time according to the focus position adjustment.

You can also focus using a key operation on the keyboard.

Adjustment	Closer	Further away
Large amount	< I >	< O >
Medium amount	< K >	< L >
Small amount	< < >	< > >

Focusing Using AF

1D Mk IV | 5D Mk II | 7D | 60D | 50D | REBELT3i | 600D | REBELT2i | 550D | REBELT1i | 500D | REBELT3 | 1100D

In Quick, Live and Face Detection Live AF modes, images can be focused automatically in the same way as on the camera itself.

Focusing Using Quick Mode

1D Mk IV | 5D Mk II | 7D | 60D | 50D | REBELT3i | 600D | REBELT2i | 550D | REBELT1i | 500D | REBELT3 | 1100D

1 Select [Quick mode] from the list box.

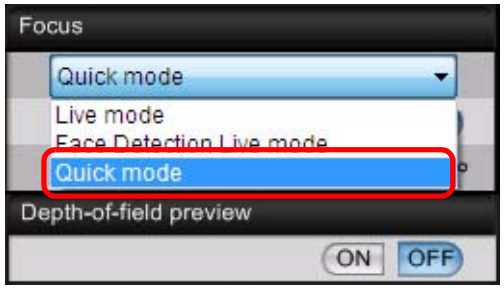

➜The AF points appear.

- You can switch between showing and hiding the AF points by clicking the [ ] button.

2 Select an AF point selection method from the list box.

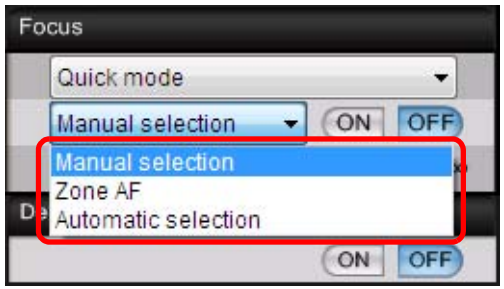

- Selectable items differ depending on the camera settings.

3 Click the AF point in the position where you want to focus.

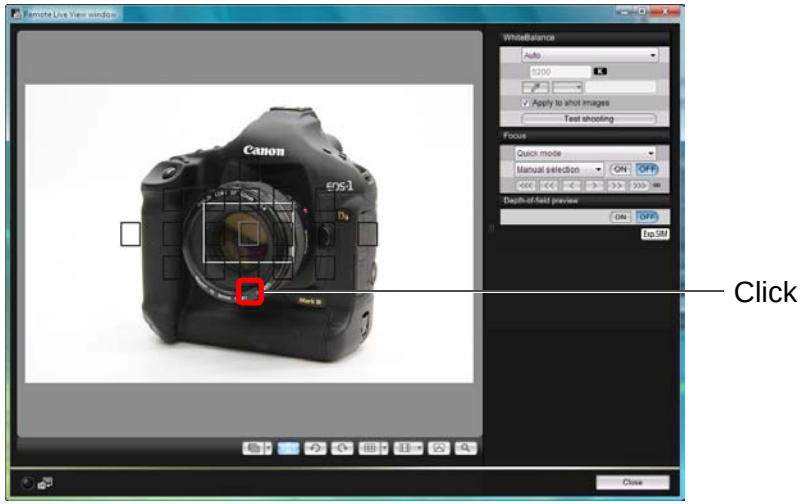

- If [Automatic selection] is selected in step 2, all the AF points are automatically selected.

4 Click the [ON] button.

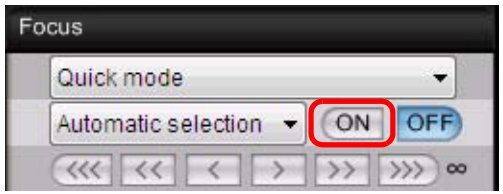

➜AF is executed.

➜When focus is achieved, the camera makes a beeping sound and the AF point color changes.

On 7D, cancel the AF point registration function on the camera if AF points have been registered. When the camera's AF points are registered, focusing with AF in the [Remote Live View window] may not be performed properly.

- Double-clicking an AF point also performs AF.
- To cancel AF operation, click the [OFF] button.

Focusing Using Live Mode

1D Mk IV | 5D Mk II | 7D | 60D | 50D | REBELT3i | 600D | REBELT2i | 550D | REBELT1i | 500D | REBELT3 | 1100D

1 Select [Live mode] from the list box.

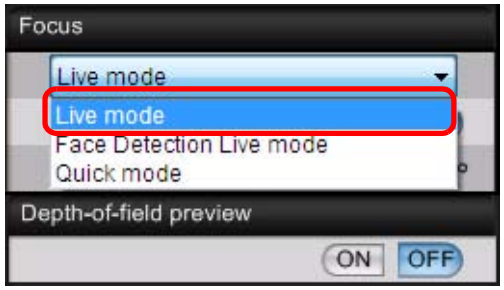

➜The AF point appears.

- You can switch between showing and hiding the AF point by clicking the [ ] button.

2 Drag the enlargement display frame to move it to the position where you want to focus.

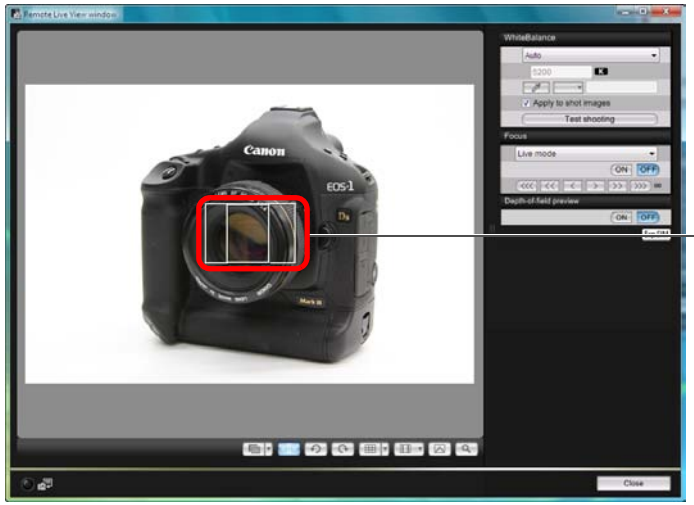

3 Click the [ON] button.

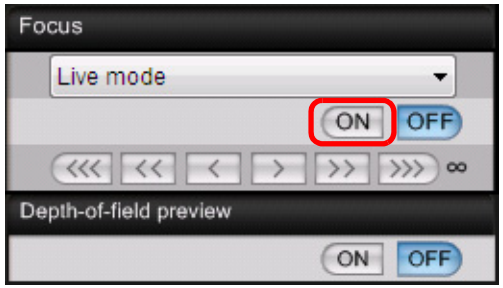

➜AF is executed.

➜When focus is achieved, the camera makes a beeping sound and the AF point turns green.

- If focus is not achieved, the AF point turns red.

Focusing Using Face Detection Live Mode

1D Mk IV | 5D Mk II | 7D | 60D | 50D | REBELT3i | 600D | REBELT2i | 550D | REBELT1i | 500D | REBELT3 | 1100D

1 Select [Face Detection Live mode] from the list box.

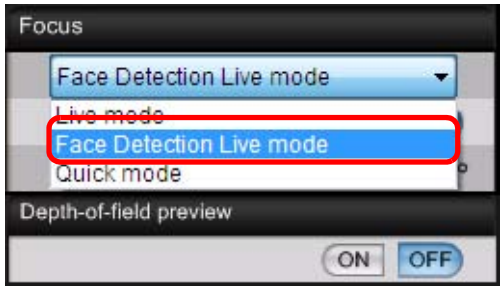

➜When a face is detected, an AF point appears.

- When there is a face other than the face detected in the scene, a new AF point appears if you move the cursor to the position of the other face. Clicking that position then selects the AF point.
- You can switch between showing and hiding the AF point by clicking the [ ] button.

2 Click the [ON] button.

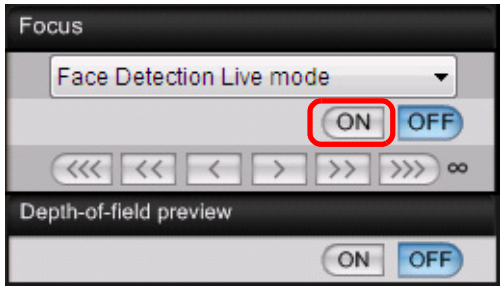

➜AF is executed.

➜When focus is achieved, the camera makes a beeping sound and the AF point turns green.

- If focus is not achieved, the AF point turns red.
- If the camera cannot detect a face, the AF point is fixed to the center to focus.

Checking the Depth of Field and Exposure

You can check the depth of field and exposure in the [Remote Live View window].

Click the [ON] button.

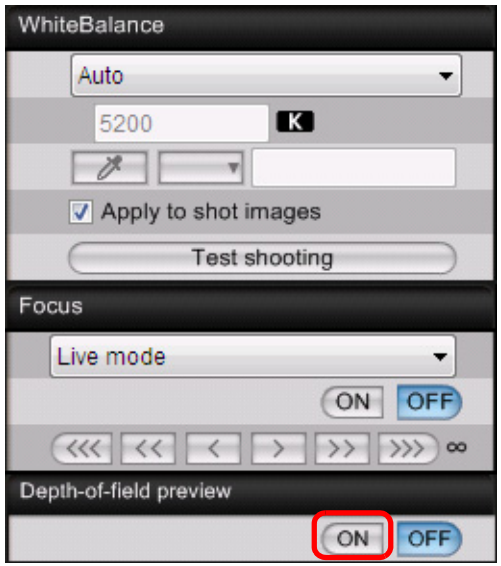

➜The aperture value (exposure simulation) is set in the capture window (p.77).

White Balance with the Remote Live View Window

You can change the white balance of an image in the [Remote Live View window] and register the changed white balance in the camera.

1 Select the white balance to apply to the image.

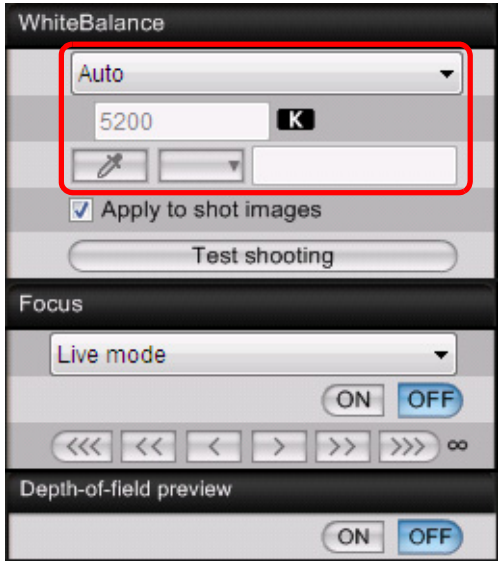

➜The selected white balance is applied to the image displayed in real time and you can check it in the [Remote Live View window].

2 Checkmark [Apply to shot images].

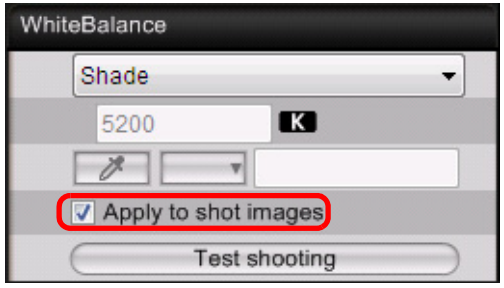

➜The selected white balance is registered in the camera as a personal white balance and applied to images that will be taken.

White Balance for Flash Photography

When taking flash shots where the subject is illuminated instantaneously, you can take a test shot under the same conditions as an actual shot, and adjust the white balance in the [Test shooting] window based on the shot test image. Also, you can take a test shot even when flash is not used.

You can perform the same operation by clicking the [Test shooting] button in the [Remote Live View window].

1 Click the [Other Functions] button and select [Test shooting] from the menu that appears.

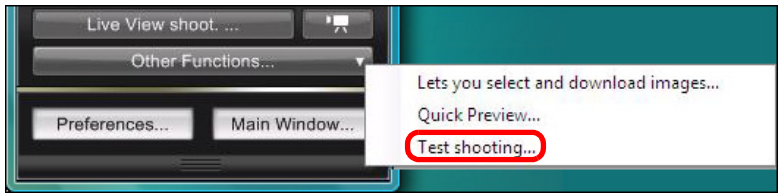

➜The shot image is displayed in the [Test Shooting] window.

Test Shooting window

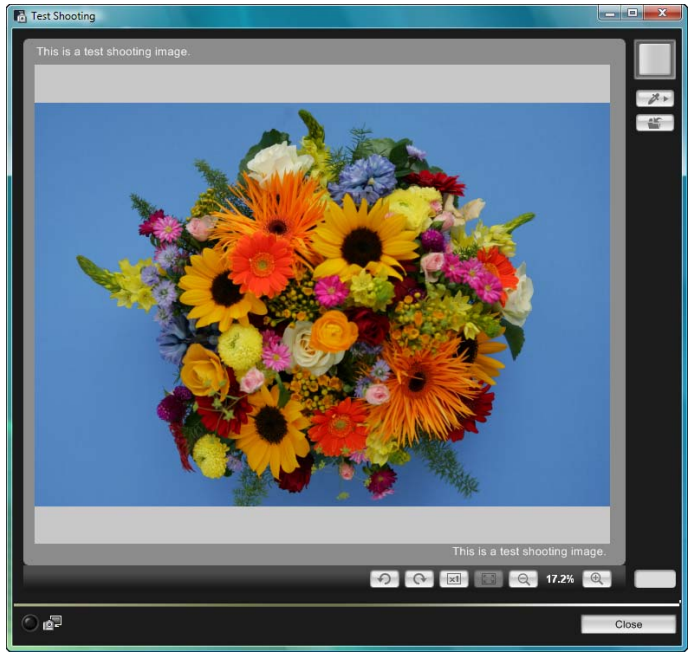

2 Click the [ ] button.

➜The [Click white balance] window appears.

Click white balance window

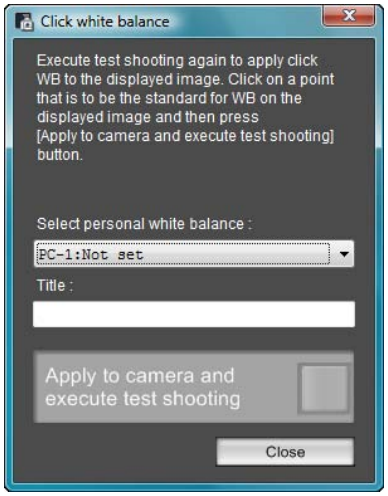
Click white balance
Execute test shooting again to apply click WB to the displayed image. Click on a point that is to be the standard for WB on the displayed image and then press [Apply to camera and execute test shooting] button.
Select personal white balance :
PC-1:Not set
Title :
Apply to camera and execute test shooting
Close

3 Click on a point that is to be the standard for white.

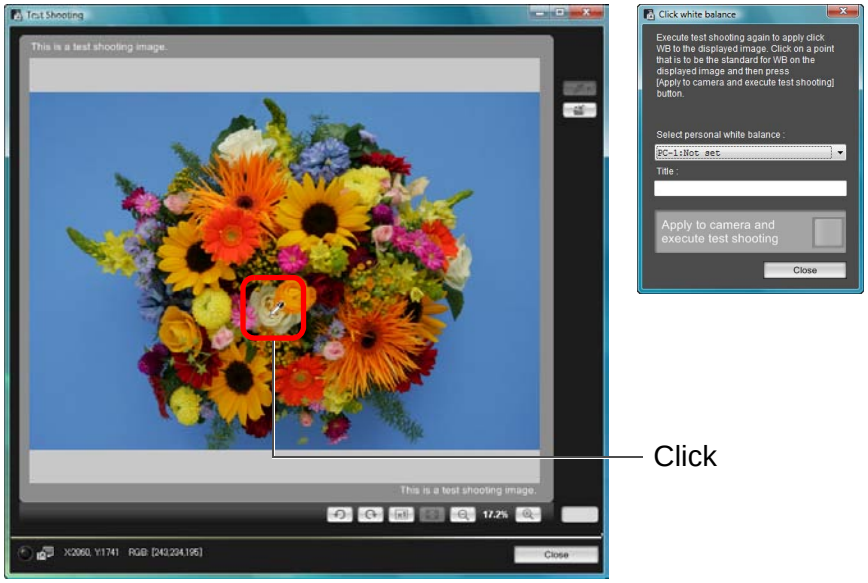
Test Shooting
This is a test shooting image.
Click white balance
Execute test shooting again to apply click WB to the displayed image. Click on a point that is to be the standard for WB on the displayed image and then press [Apply to camera and execute test shooting] button.
Select personal white balance :
PC-1:Not set
Title :
Apply to camera and execute test shooting
Close
Click

4 Click the [Apply to camera and execute test shooting] button.

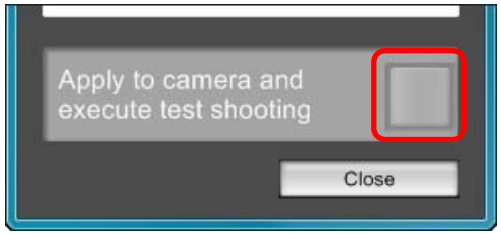

➜A shot will be taken again using the part of the image in step 3 clicked as the standard for white and the shot image is displayed in the [Test Shooting] window.

- The test image will not be saved. To save the test image, click the [ ] button.
- To close the [Test Shooting] window, click the [Close] button.

- You can perform the following operations in the [Test Shooting] window using keyboard controls.
  - Test shooting: <Ctrl> + <space>
  - 50% image display: <Ctrl> + <1>
  - 100% image display: <Ctrl> + <2>
  - 200% image display: <Ctrl> + <3>
  - Match image size to window: <Ctrl> + <4>
- On 1D Mk IV 5D Mk II 7D 60D REBELT3i 600D REBELT2i 550D REBELT3 1100D, you can link flash setting/test shooting/white balance adjustment by simultaneously displaying the [Flash function settings] window (p.56) and the [Test Shooting] window.
- For a list of the [Test Shooting] window functions, refer to p.82.

Adjusting the Horizontal/Vertical Alignment of the Camera

You can display gridlines in the [Remote Live View window] in the same way as the camera's Live View function, and adjust the horizontal/vertical alignment of the camera.

1 Click the [▼] button, and select a grid display from the menu that appears.

- You can set the following items by selecting [Customize grid].
  - Vertical and horizontal grid blocks (2 to 90)
  - Gridline thickness (1 to 10)
  - Grid color

2 Click the [ ] button.

➜Gridlines are displayed in the [Remote Live View window].

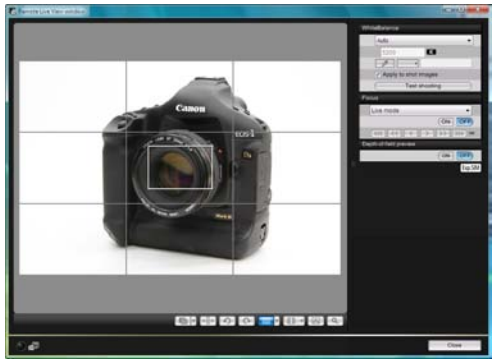

3 Move the camera to adjust the horizontal/vertical alignment.

- To remove the gridlines, click the [ ] button again.

Changing the Aspect Ratio

1D Mk IV | 1Ds Mk III | 1D Mk III | 7D | 60D | REBELT3i | 600D

As with the camera's Live View function, it is possible to shoot with a feeling similar to film-type medium-format/large-format cameras such as 6 × 6 cm, 6 × 4.5 cm and 4 × 5 inches. For a RAW image shot with 60D | REBELT3i | 600D, aspect ratio information is only attached with the shot image, and the image itself is not trimmed. For a JPEG image, the image itself is trimmed. With other cameras, aspect ratio information is only attached with the shot image, and the image itself is not trimmed.

1 Click the [ ] button and select the aspect ratio.

➜In the [Remote Live View window], the vertical lines of the aspect ratio you selected is displayed.

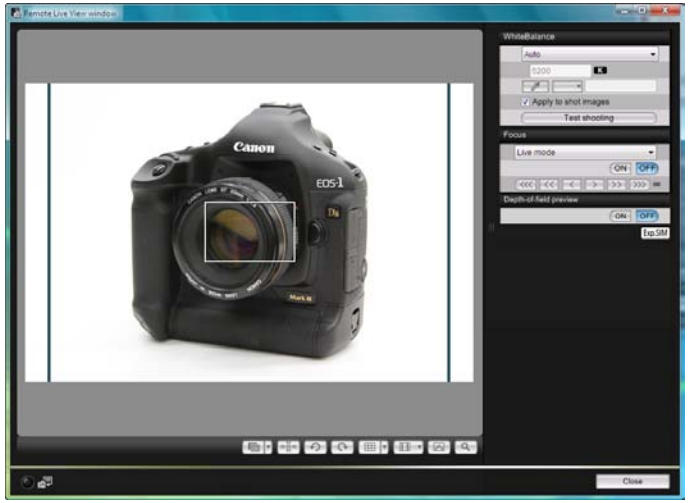

2 Move the camera and compose your picture.

- To revert the aspect ratio to the normal condition, click the [ ] button. For 60D | REBELT3i | 600D, select the original aspect ratio; for other cameras, select [Off].

Overlaid Display Function

An image saved in your computer can be overlaid on top of the image displayed in the [Remote Live View window]. As this function allows to accurately align angles, it is useful when aligning product photos or shooting several images at the same angle.
Images loaded from your computer are only displayed, and are not included in the shot.

1 Click the [ ] button.

➜The [Open] window appears.

2 Select the image you want to display as an overlay and click the [Open] button.

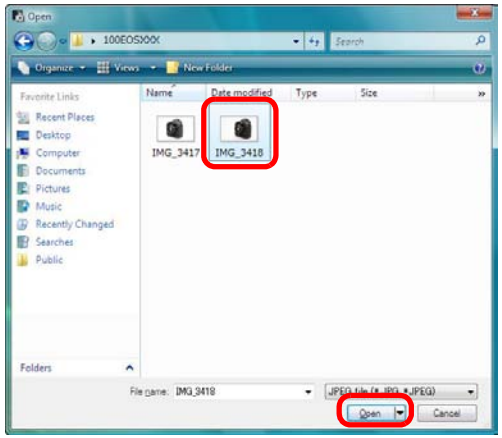

- Images that can be displayed as an overlay are RAW*, JPEG, TIFF, BMP (bitmap), and GIF images.

  * • RAW images that can be displayed as an overlay are only images with the extension ".CR2" shot using a Canon camera.
  • Images that have been adjusted with Digital Photo Professional are also displayed in the condition when they were shot.

- Even with supported image file types, the display of the image as overlay may not be possible.
- For images displayed as overlay, image size equal or inferior at 1200 x 800 pixels and 3:2 aspect ratio are recommended.
- Images with aspect ratios other than 3:2 will be distorted and displayed with a 3:2 aspect ratio.

➜The image selected in the [Remote Live View window] is displayed as an overlay. A composite ratio slider is displayed above the [ ] button.

3 Move the camera and subject to compose your picture.

- You cannot use the Overlaid Display function in the [Zoom View] window.

Setting the Composite Ratio

The composite ratio can be set from 0 to 100% in increments of 10%. Use the composite ratio slider to set the composite ratio.

1 Move cursor over the slider.



➜The slider changes from white to blue and becomes movable.

2 Hold the right mouse button and drag the slider left or right to set.

- You can also move the cursor over the slider, and then press the <←> or <→> key on the keyboard or use the scroll-wheel on your mouse to set the composite ratio.

➜The composite ratio set with the composite ratio slider is applied to the overlaid display.

Hiding the Overlaid Display Temporarily

You can temporarily hide the overlaid display.

➜The overlaid display is temporarily hidden.

- Click again to show.

Setting a Different Image as Overlaid Display

Switch the image displayed as an overlay to another image.

1 Click the [▼] button to the right of the [ ] button and select [Open] from the menu that appears.

➜The [Open] window appears.

2 Select the image you want to switch in the [Open] window and click the [Open] button.

➜The displayed image switches to the selected image.

Exiting the Overlaid Display Function

Click the [▼] button to the right of the [ ] button and select [Off] from the menu that appears.

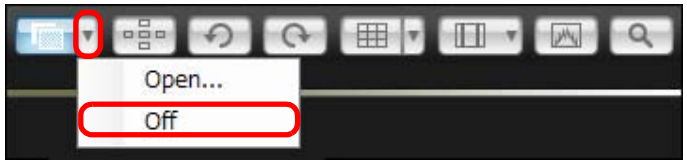

➜The Overlaid Display function terminates.

Shooting by Operating the Camera

Even when remote shooting is set, you can still operate the camera and shoot – as when shooting with only the camera. Also, since the shot images are saved to your computer's hard disk, you can shoot large quantities without having to worry about the capacity of the memory card.

1 Display the capture window (p.27).

2 Press the camera's shutter button and take a shot.

➜The shot images are transferred to the computer, DPP starts up automatically, and the shot images are displayed.

When the [Remote Live View window] is displayed, the camera cannot be operated. Press the Live View shooting button (the camera's <SET> button on the 1D Mk IV 1Ds Mk III 1D Mk III 40D REBELXSi 450D REBELXS 1000D), to display the Live View image on the camera's LCD monitor and operate the camera.

Shooting Movies

1D Mk IV 5D Mk II 7D 60D REBELT3i 600D REBELT2i 550D REBELT1i 500D REBELT3 1100D

You can control your camera from EU and shoot movies from your computer screen. You cannot shoot movies without a memory card in your camera.

1D Mk IV

1 Prepare for Live View shooting.

- Follow the procedure from step 1 to step 3 for "Remote Live View Shooting" (p.27).

2 Click [Live View/Movie func. set.].

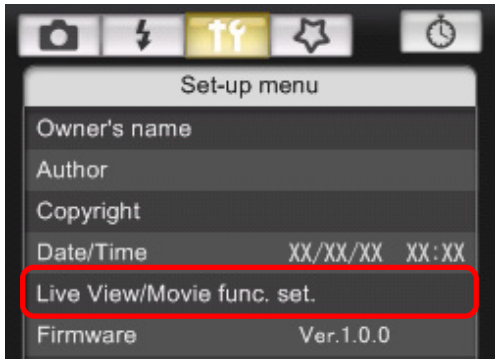

➜The [Live View/Movie func. set.] window appears.

3 Select [Movies] for [LV func. setting], and select the movie recording size from the list box.

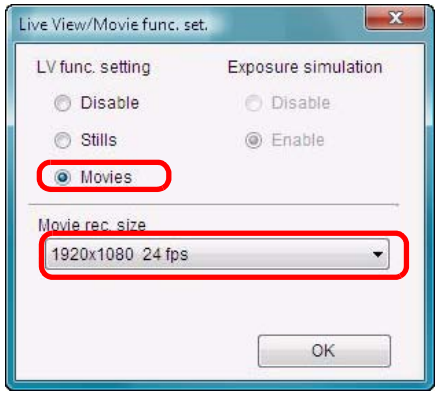

4 Click the [OK] button.

➜The [Live View/Movie func. set.] window closes.

5 Click [Live View shoot.].

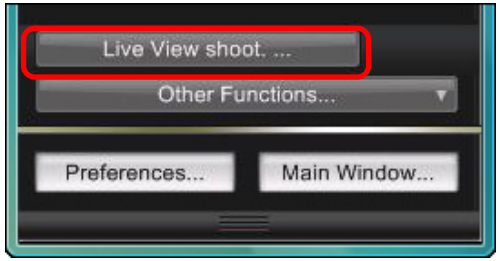

➜The [Remote Live View window] appears.

6 Focus (p.32, p.34).

7 Click the [●] button and begin shooting.

➜At the bottom left of the [Remote Live View window], a [●] icon and the recording time are displayed.

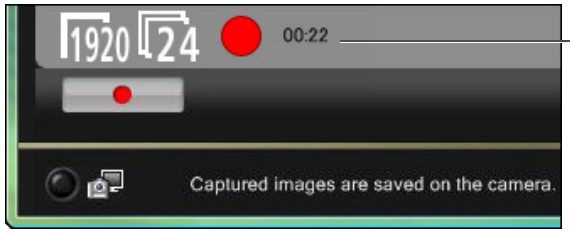

- Click the [●] button again to end shooting.

➜When the [Remote Live View window] closes, the following window appears if some image data remains to be downloaded to your computer.

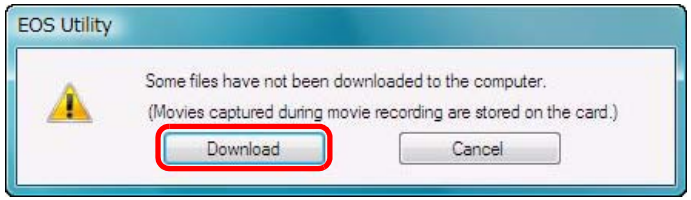
EOS Utility
Some files have not been downloaded to the computer.
(Movies captured during movie recording are stored on the card.)
Download
Cancel

- After you click the [Download] button, the file names of the image data shot in movie mode (movie/still image) appear in a list.

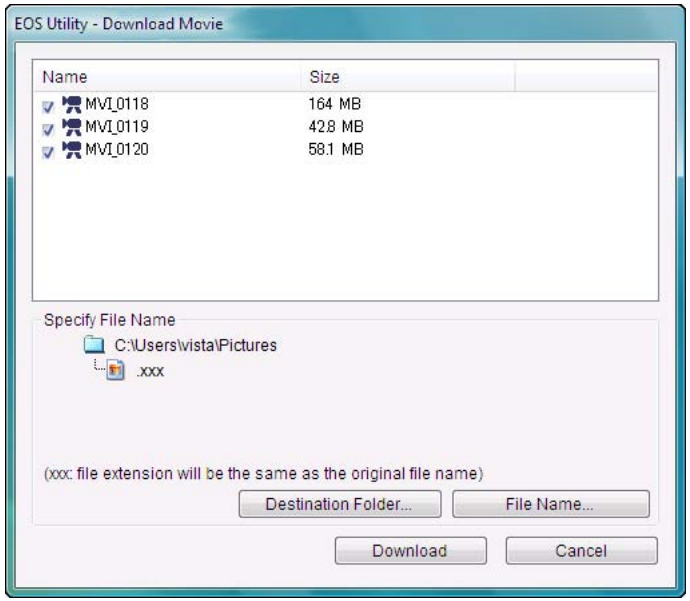

After specifying [Destination Folder] and [File Name], click the [Download] button in the window, and image data will be downloaded from the camera's memory card to your computer. Image data having a check mark removed from its file name are not downloaded. Afterward, when downloading image data to your computer from the camera's memory card, use the method described on p.7 to p.10 of this Instruction Manual to download.

5D Mk II

1 Prepare for Live View shooting.

- Follow the procedure from step 1 to step 3 for “Remote Live View Shooting” (p.27).

2 Click [Live View/Movie func. set.].

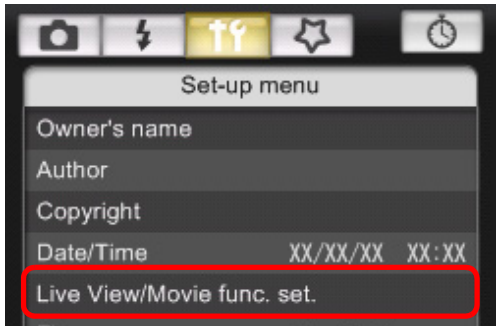

➜The [Live View/Movie func. set.] window appears.

3 Select [Stills+movie] and [Movie display], set the movie recording size.

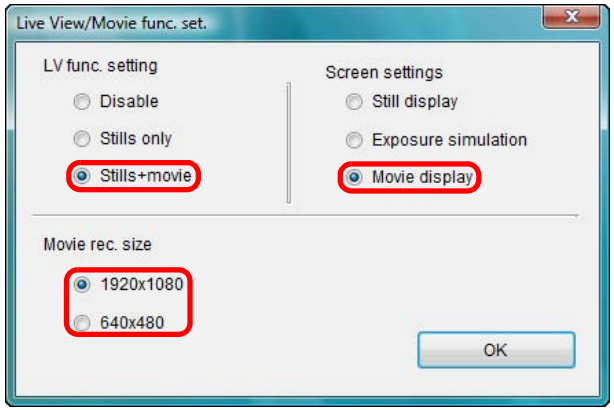

- You cannot shoot movies when [Screen settings] is set to [Still display] or [Exposure simulation].
- If the camera firmware is Ver.2.0.0 or later, set the frame rate on the camera. Note that if the frame rate has been set to 24 fps on the camera, if you change the movie recording size with EU, the frame rate will be changed to another setting.

4 Click the [OK] button.

➜The [Live View/Movie func. set.] window closes.

5 Click [Live View shoot.].

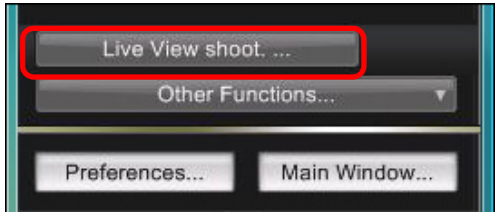

➜The [Remote Live View window] appears.

6 Focus (p.32, p.34).

7 Click the [ ] button and begin shooting.

➜At the bottom left of the [Remote Live View window], a [●] icon and the recording time are displayed.

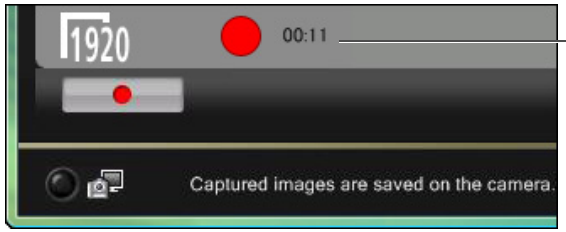

- Click the [ ] button again to end shooting.

➜When the [Remote Live View window] closes, the following window appears if some image data remains to be downloaded to your computer.

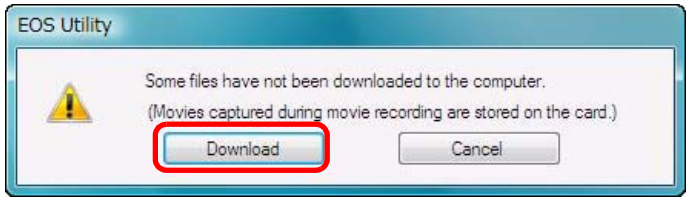
EOS Utility
Some files have not been downloaded to the computer.
(Movies captured during movie recording are stored on the card.)
Download
Cancel

- After you click the [Download] button, the file names of the image data shot in movie mode (movie/still image) appear in a list.

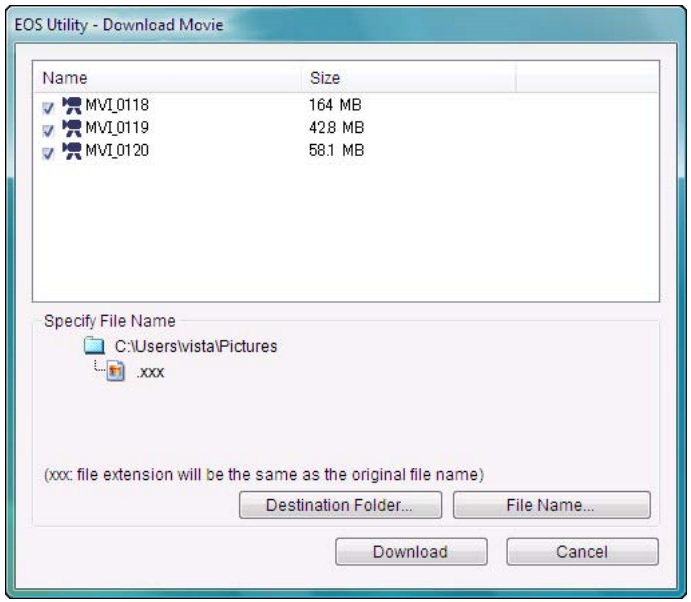

After specifying [Destination Folder] and [File Name], click the [Download] button in the window, and image data will be downloaded from the camera's memory card to your computer. Image data having a check mark removed from its file name are not downloaded. Afterward, when downloading image data to your computer from the camera's memory card, use the method described on p.7 to p.10 of this Instruction Manual to download.

7D REBEL T3 1100D

1 Prepare for Live View shooting.

- Follow the procedure of step 1 and step 2 for "Remote Live View Shooting" (p.27).
- On 7D, set your camera's Live View shooting/Movie shooting switch to < >.

2 Click the [ ] button.

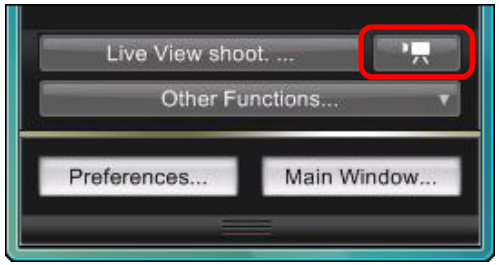

➜The [Remote Live View window] appears.

- You cannot operate the camera when the [ ] button is clicked. To operate the camera, click the [ ] button again or close the [Remote Live View window].
- You cannot shoot still photos in movie mode with REBEL T3 1100D.

When setting the movie recording size, click [Live View/Movie func. set.], and display the [Live View/Movie func. set.] window before setting.

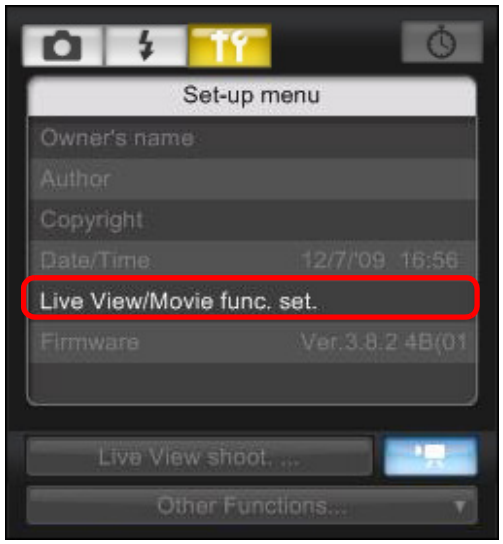

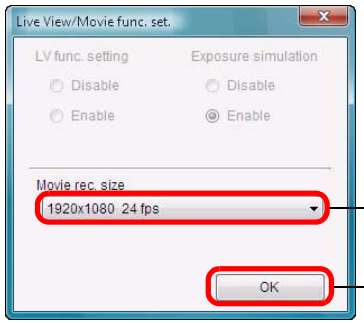

Select

Click

- Selectable movie recording sizes depend on the camera.

3 Focus (p.32, p.34).

4 Click the [●] button and begin shooting.

➜At the bottom left of the [Remote Live View window], a [●] icon and the recording time are displayed.

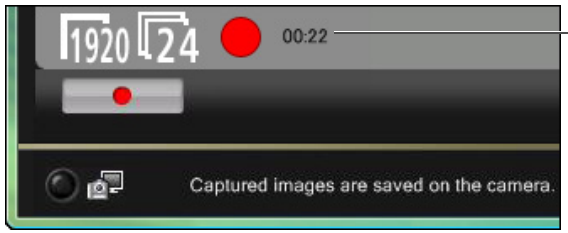

Recording time

- Click the [●] button again to end shooting.

➜When the [Remote Live View window] closes, the following window appears if some image data remains to be downloaded to your computer.

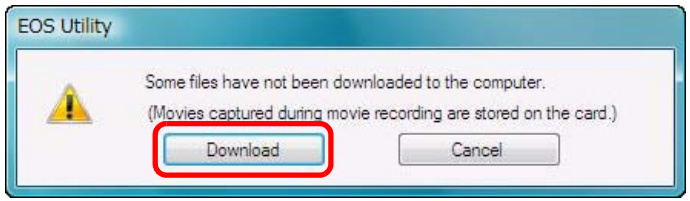
EOS Utility
Some files have not been downloaded to the computer.
(Movies captured during movie recording are stored on the card.)
Download
Cancel

- After you click the [Download] button, the file names of the image data shot in movie mode (movie/still image) appear in a list.

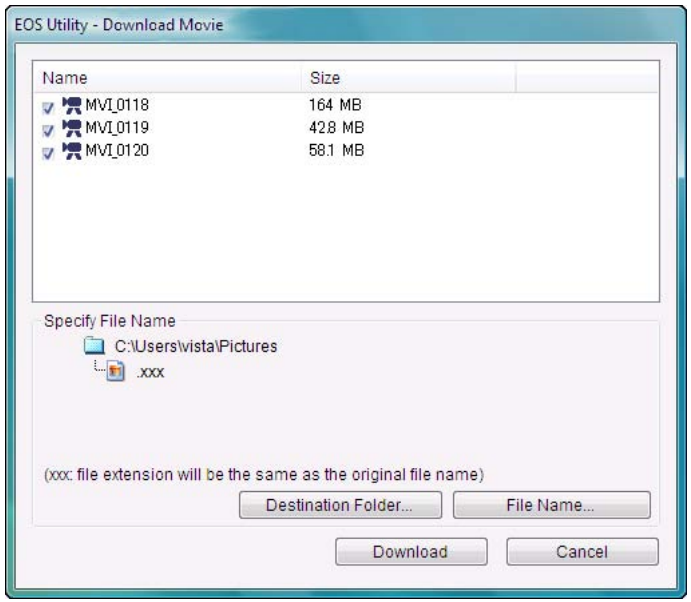

After specifying [Destination Folder] and [File Name], click the [Download] button in the window, and image data will be downloaded from the camera's memory card to your computer. Image data having a check mark removed from its file name are not downloaded. Afterward, when downloading image data to your computer from the camera's memory card, use the method described on p.7 to p.10 of this Instruction Manual to download.

60D

1 Prepare for Live View shooting.

- Follow the procedure of step 1 and step 2 for "Remote Live View Shooting" (p.27).

2 Click the [ ] button.

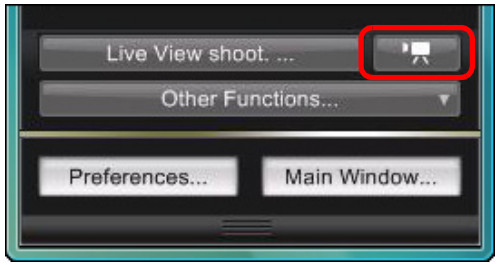

➜The [Remote Live View window] appears.

You cannot operate the camera when the [ ] button is clicked. To operate the camera, click the [ ] button again or close the [Remote Live View window].

When setting the movie recording size, movie shooting mode, etc., click [Live View/Movie func. set.], and display the [Live View/Movie func. set.] window before setting.

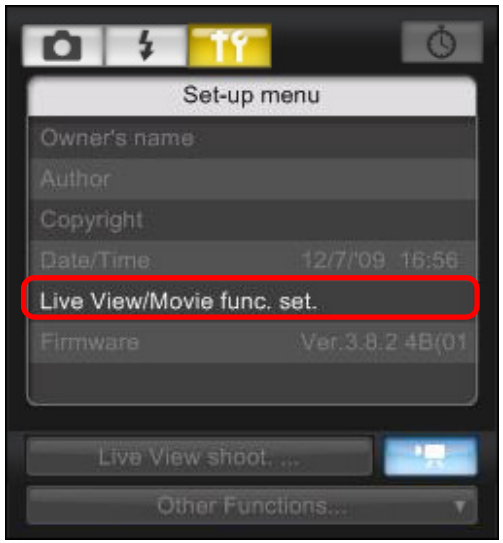

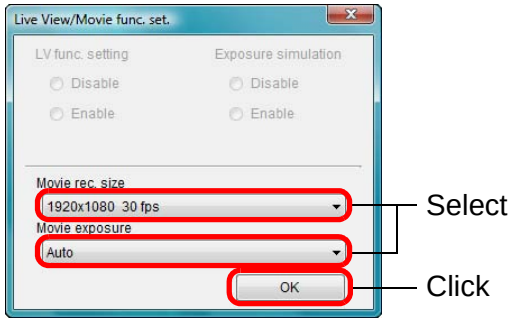

Note the following when you set the movie recording size to [Movie Crop 640 x 480].

- The Movie crop image cannot be magnified for focusing.
- Two AF modes can be selected, [Live mode] (p.35) and [Face Detection Live mode] (p.36).
- AF mode automatically switches to [Live mode] (p.35) when in [Quick mode] (p.34).
- Still photos cannot be taken.
- The movie recording size icon appears as [ ].

3 Adjust the focus (p.32, p.34).

4 Click the [ ] button and begin shooting.

➜At the bottom left of the [Remote Live View window], a [ ] icon and the recording time are displayed.

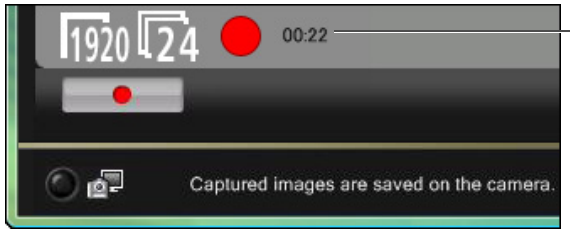

● Click the [ ] button again to end shooting.

➜When the [Remote Live View window] closes, the following window appears if some image data remains to be downloaded to your computer.

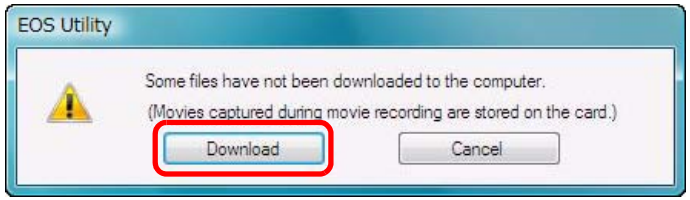
EOS Utility
Some files have not been downloaded to the computer.
(Movies captured during movie recording are stored on the card.)
Download
Cancel

● After you click the [Download] button, the file names of the image data shot in movie mode (movie/still photo) appear in a list.

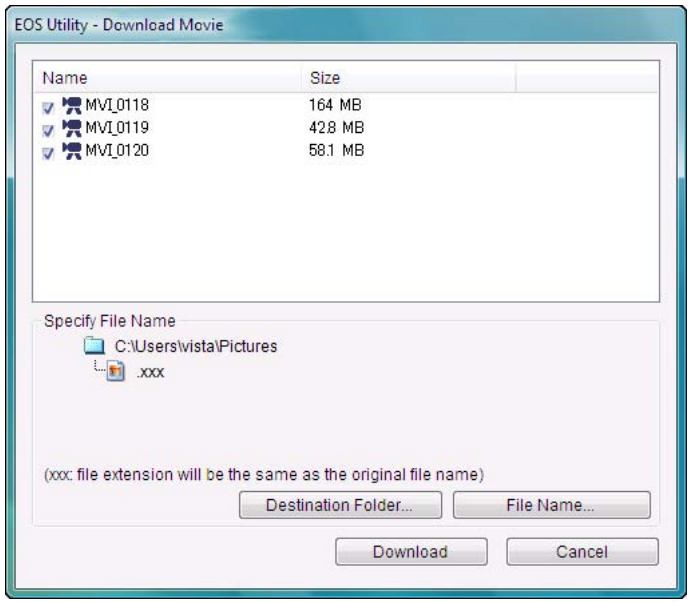

After specifying [Destination Folder] and [File Name], click the [Download] button in the window, and image data will be downloaded from the camera's memory card to your computer. Image data having a check mark removed from its file name are not downloaded. Afterward, when downloading image data to your computer from the camera's memory card, use the method described on p.7 to p.10 of this Instruction Manual to download.

REBEL T3i | 600D | REBEL T2i | 550D

1 Prepare for Live View shooting.

- Follow the procedure of step 1 and step 2 for "Remote Live View Shooting" (p.27).

2 Click the [ ] button.

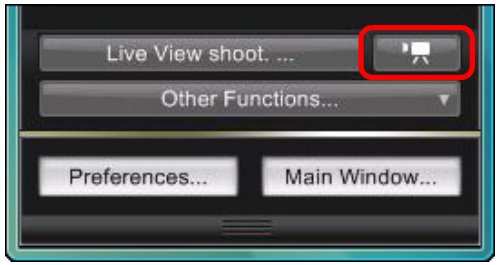

➜The [Remote Live View window] appears.

You cannot operate the camera when the [ ] button is clicked. To operate the camera, click the [ ] button again or close the [Remote Live View window].

When setting the movie recording size, click [Live View/Movie func. set.], and display the [Live View/Movie func. set.] window before setting.

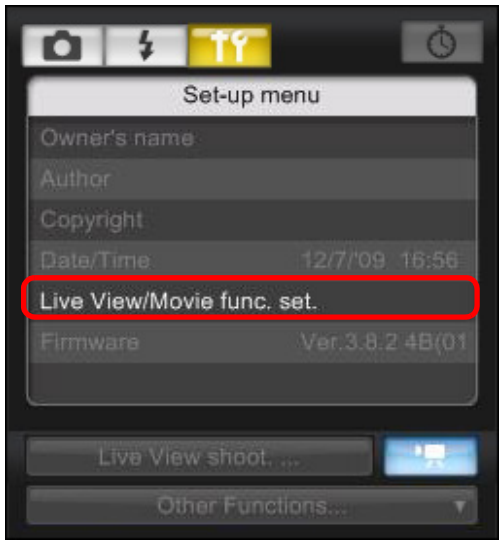

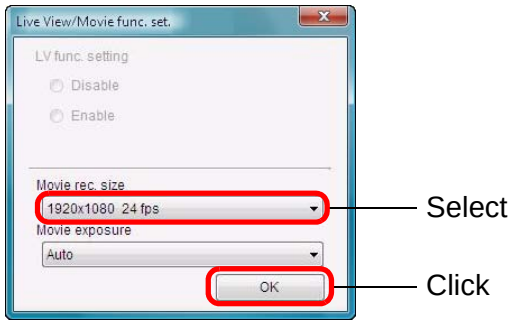

- Note the following when you set the movie recording size to [Movie Crop 640 x 480] on REBEL T2i 550D .
  - The Movie crop image cannot be magnified for focusing.
  - Two AF modes can be selected, [Live mode] (p.35) and [Face Detection Live mode] (p.36).
  - AF mode automatically switches to [Live mode] (p.35) when in [Quick mode] (p.34).
  - Still photos cannot be taken.
  - The movie recording size icon appears as [640].
- The following operations are not available when Movie Digital Zoom is set on REBEL T3i 600D .
  - Remote Live View display
  - AF focusing
  - Shooting still photos
- In EU, Video Snapshot shooting is not available on REBEL T3i 600D .

3 Adjust the focus (p.32, p.34).

4 Click the [●] button and begin shooting.

➜At the bottom left of the [Remote Live View window], a [●] icon and the recording time are displayed.

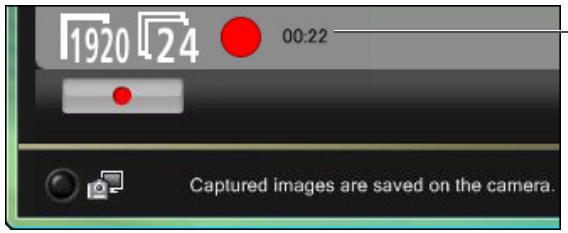

- Click the [●] button again to end shooting.

➜When the [Remote Live View window] closes, the following window appears if some image data remains to be downloaded to your computer.

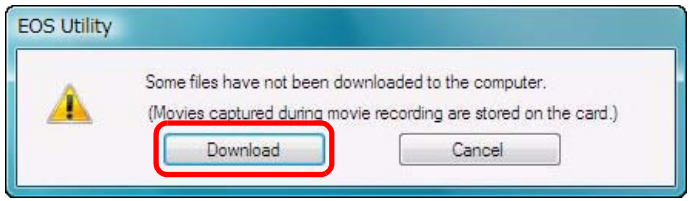
EOS Utility
Some files have not been downloaded to the computer.
(Movies captured during movie recording are stored on the card.)
Download
Cancel

- After you click the [Download] button, the file names of the image data shot in movie mode (movie/still image) appear in a list.

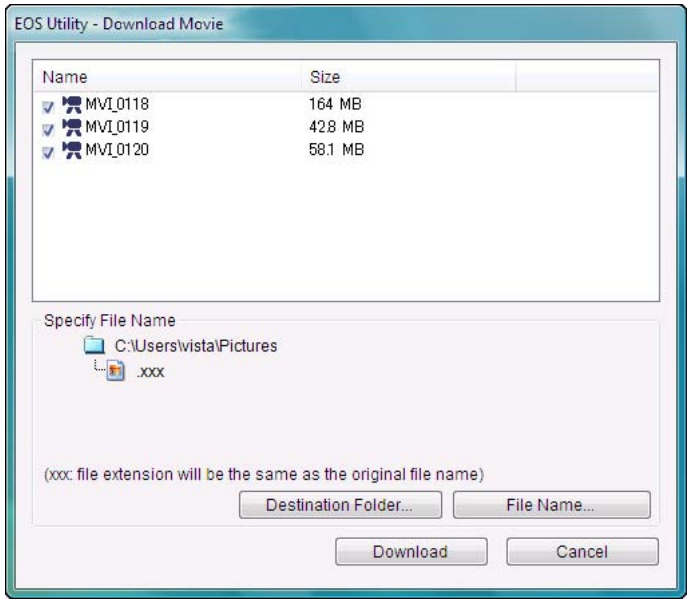

After specifying [Destination Folder] and [File Name], click the [Download] button in the window, and image data will be downloaded from the camera's memory card to your computer. Image data having a check mark removed from their file name are not downloaded. Afterward, when downloading image data to your computer from the camera's memory card, use the method described on p.7 to p.10 of this Instruction Manual to download.

REBEL T1i | 500D

1 Prepare for Live View shooting.

- Follow the procedure of step 1 and step 2 for "Remote Live View Shooting" (p.27).

2 Set the camera's mode dial to <🎥>.

- When setting the movie recording size, click [Live View/Movie func. set.], display the [Live View/Movie func. Set.] window before setting.

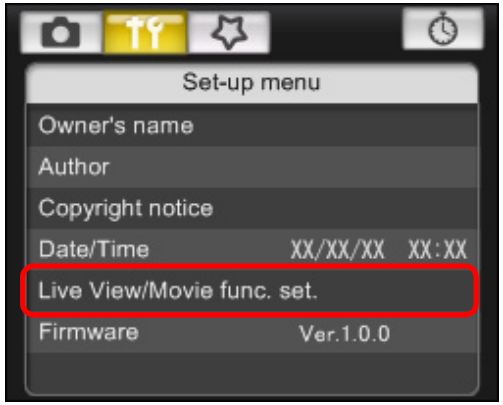

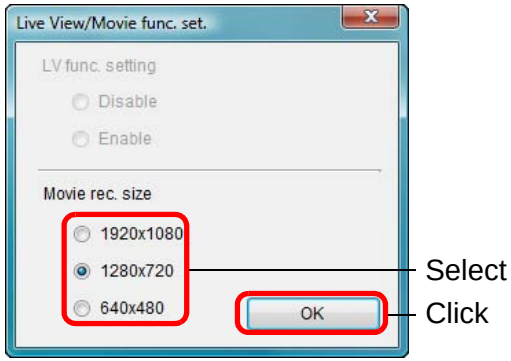

3 Click [Live View shoot].

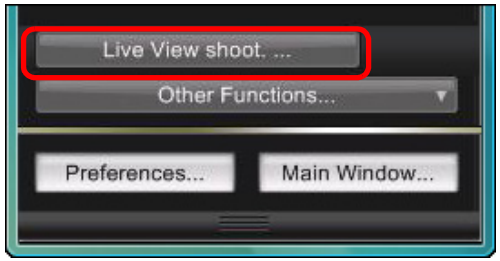

➜The [Remote Live View window] appears.

4 Focus (p.32, p.34).

5 Click the [●] button and begin shooting.

➜At the bottom left of the [Remote Live View window], a [●] icon and the recording time are displayed.

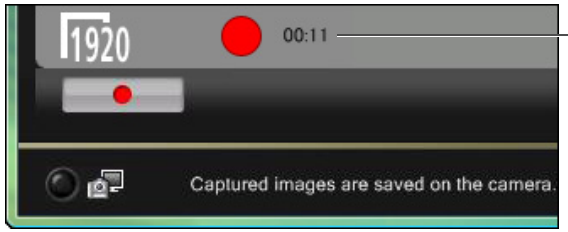

● Click the [●] button again to end shooting.

➜When the [Remote Live View window] closes, the following window appears if some image data remains to be downloaded to your computer.

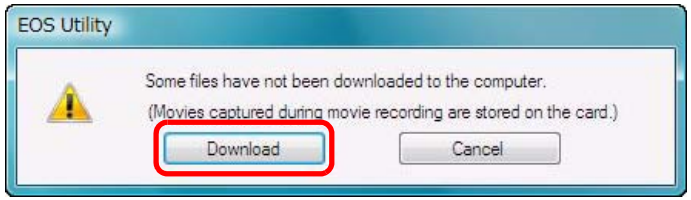
EOS Utility
Some files have not been downloaded to the computer.
(Movies captured during movie recording are stored on the card.)
Download
Cancel

● After you click the [Download] button, the file names of the image data shot in movie mode (movie/still image) appear in a list.

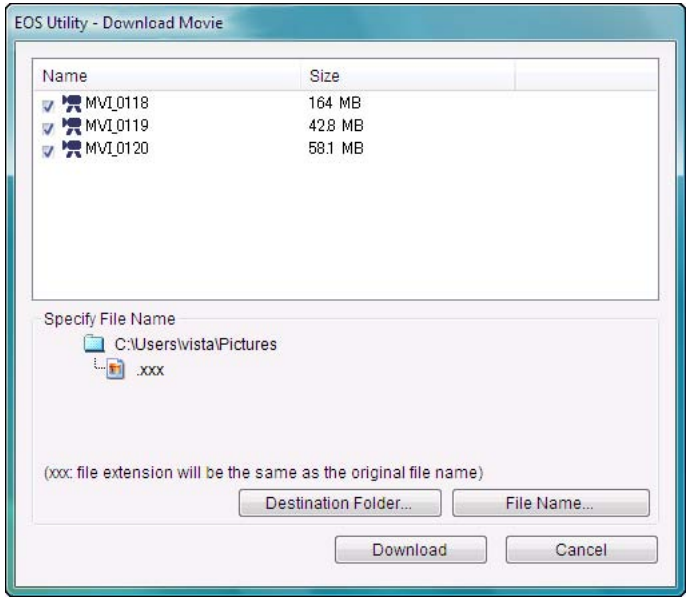

After specifying [Destination Folder] and [File Name], click the [Download] button in the window, and image data will be downloaded from the camera's memory card to your computer. Image data having a check mark removed from its file name are not downloaded. Afterward, when downloading image data to your computer from the camera's memory card, use the method described on p.7 to p.10 of this Instruction Manual to download.

Timer-controlled Shooting

Two types of timer shooting are available where the camera automatically takes shots at a specified time or a specified number.

Timer Shooting

You can automatically take a shot when the specified time elapses.

1 Display the capture window (p.27)**.**

2 Click the [ ] button.

➜The [Timer shooting settings] dialog box appears.

3 Enter a delay time and click the [Start] button.

- Enter a value between 0 seconds and 99 minutes and 59 seconds in one-second increments.

➜The shot is taken when the specified time elapses.

Interval Timer Shooting

You can automatically take shots by setting the interval between shots and the number of shots to be taken.

1 Display the capture window (p.27)**.**

2 Click the [ ] button.

➜The [Timer shooting settings] dialog box appears.

3 Checkmark [Interval timer shooting].

4 Enter the shooting interval and the number of shots.

- Enter a value between 5 seconds and 99 minutes and 59 seconds in one-second increments.
- The minimum number of interval-timed shots is two. The number of shots you can take at timed intervals depends on the available space on your computer's hard disk.

5 Click the [Start] button.

➜The shots are taken at the specified intervals and for the specified number of shots.

On certain types of computer, if you set a short interval between shots and there is insufficient time to transfer and save the images, it may not be possible to take shots at the specified interval. In this case, set a longer interval between shots and take the shots again.

The shooting mode cannot be changed when the [Timer shooting settings] dialog box is displayed.
Display the [Timer shooting settings] dialog box after setting the shooting mode.

Bulb Exposures

1 **Display the capture window** (p.27)**.**

2 **Double-click the shooting mode icon and select [BULB].**

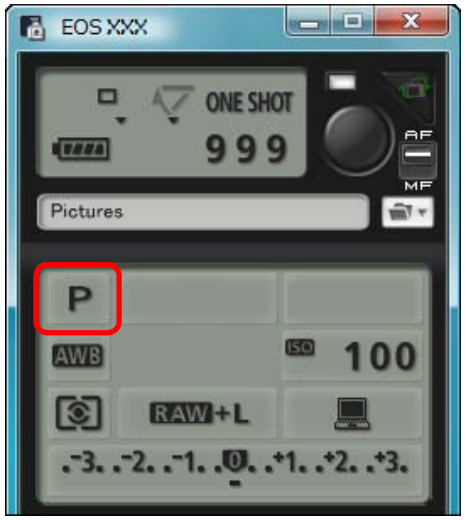

- Specify the following settings for cameras other than 1D Mk IV, 1Ds Mk III, 1D Mk III.
  - For cameras with < B > (bulb) on the Mode dial, set to < B >.
  - For cameras without < B > (bulb) on the Mode dial, set the Mode dial to < M > (manual), and select [BULB] in the capture window or set the camera's shutter speed to [BULB].

3 **Set the desired aperture.**

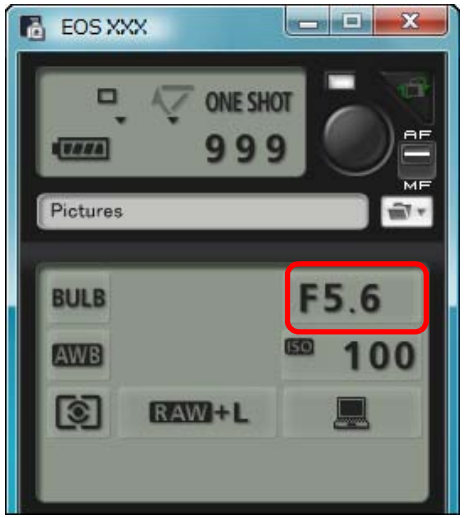

4 **Click the [ ] button.**

➜The [Timer shooting settings] dialog box appears.

5 **Enter the exposure time and click the [Start] button.**

- Enter a value between 5 seconds and 99 minutes and 59 seconds in one-second increments.

You can start/end bulb exposure without setting an exposure time by clicking the [●] button.

Flash Shooting

1D Mk IV | 5D Mk II | 7D | 60D | REBELT3i | 600D | REBELT2i | 550D | REBELT3 | 1100D

From EU you can set the camera's flash function, as well as EX-series Speedlite (sold separately) compatible with flash function setting, in order to perform flash shooting.
For more details on setting items, also refer to the Instruction Manual provided with your EX-series Speedlite and with your camera.

1 Prepare your camera and flash.

- When using an external flash, mount it on your camera.

2 Connect your camera and computer, and then start up EU (p.5).

3 Click [Camera settings/Remote shooting].

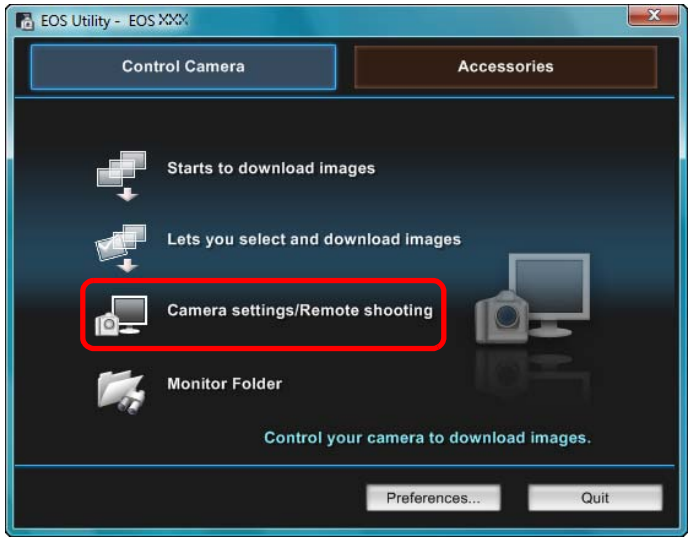

➜The capture window appears.

4 Click the [ ] button.

➜The [Flash control menu] appears.

5 Click [Flash function settings].

Flash control menu

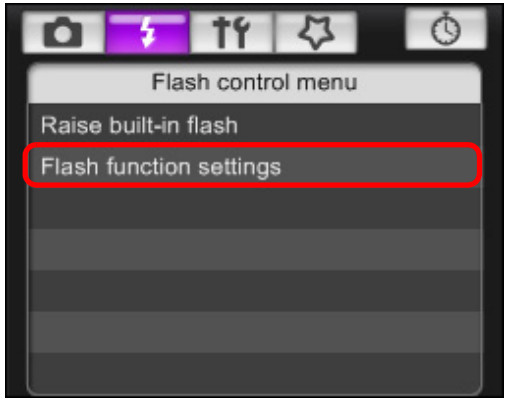

- When REBELT3i 600D is connected, [Built-in flash] is also displayed.
  You can change the way you set the built-in flash functions by selecting setting items displayed in [Built-in flash].
  Refer to your camera's Instruction Manual for details on setting items ([NormalFiring], [EasyWireless], [CustWireless]).

➜ The [Flash function settings] window appears.

Select [Raise built-in flash] to use the built-in flash on 7D 60D REBELT3i 600D REBELT2i 550D REBELT3 1100D.

6 Specify settings.

Flash function settings window

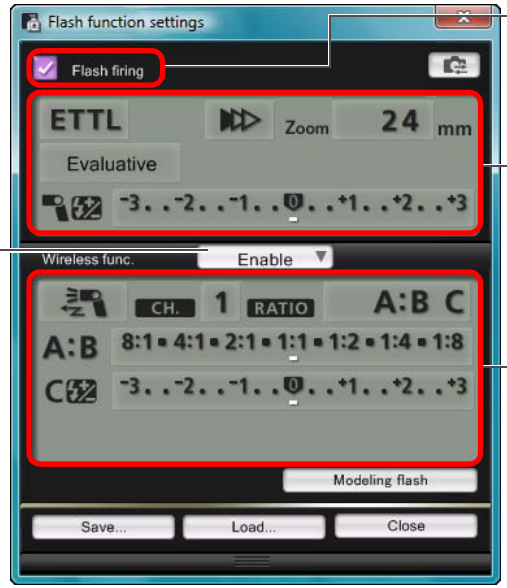

Check that this box is checkmarked

Click setting items, and select settings from the menu that appears*

Enable the wireless func., click the setting items, and then select settings from the menu that appears*

[Wireless func.] button

1D Mk IV 5D Mk II REBELT2i 550D REBELT3 1100D

To enable the wireless function, click the button and select [Enable] from the menu that appears. To cancel, select [Disable] from the menu.

7D 60D REBELT3i 600D

To enable the wireless function, click the button and select the flash combination from the menu that appears. To cancel, select [Disable] from the menu.

To enable the wireless function for the built-in flash on the REBELT3i 600D, select [Built-in flash] in [Flash control menu], then select [EasyWireless] or [CustWireless]. To cancel, select [NormalFiring].

*You can also use the scroll-wheel on your mouse to select settings for items in the settings window that appears.

If the [Flash control] menu is displayed on the camera's LCD monitor, EU [Flash function settings] window automatically closes.

- You can use modeling flash by clicking the [Modeling flash] button. You should only use modeling flash for a maximum of 10 times continuously. (For more information, refer to the Instruction Manual provided with the flash.)
- Information displayed in the [Flash function settings] window is updated by clicking the [ ] button, so it is synchronized with the current flash settings. (Since setting changes made with the flash unit are not reflected in the [Flash function settings] window, you can click the [ ] button and update the [Flash function settings] window to match the current flash settings.)
- You can name and save the flash setting as a file separate from the image by clicking the [Save] button. You can also click the [Load] button and load this file into EU for use in other shooting.
- You can use flash shooting and Remote Live View shooting (p.27) together.
  However, you cannot use modeling flash during Remote Live View shooting.
- Settings that can be performed in the [Flash function settings] window differ depending on the flash and camera.

7 Click the [●] button to shoot.

➜The shot image is transferred to your computer and displayed in the [Quick Preview] window. Then, DPP starts up automatically.

- When the capture window AF/MF selector is set to [AF], AF/AE is executed when the cursor is moved to the [●] button (p.77).
- You can quickly review the shot image in the [Quick Preview] window displayed before DPP starts up. You can also resize the [Quick Preview] window.
- You can show/hide the [Quick Preview] window by clicking the [Other Functions] button in the capture widow and selecting [Quick Preview] from the menu that appears.

- For a list of [Flash function settings] window functions, refer to p.79.
- You can also shoot using the <space> bar on the keyboard.

Registering Background Music to a Camera Memory Card

REBELT3i 600D

You can register WAV-format music files, saved to your computer, to the camera's memory card as background music. Registered background music can be played together with a Video Snapshot Album or slideshow played on the camera.

1 Connect your camera and computer, and then start EU (p.5).

- If your camera and computer are not connected, [Register Background Music] is not displayed.

2 Click [Register Background Music].

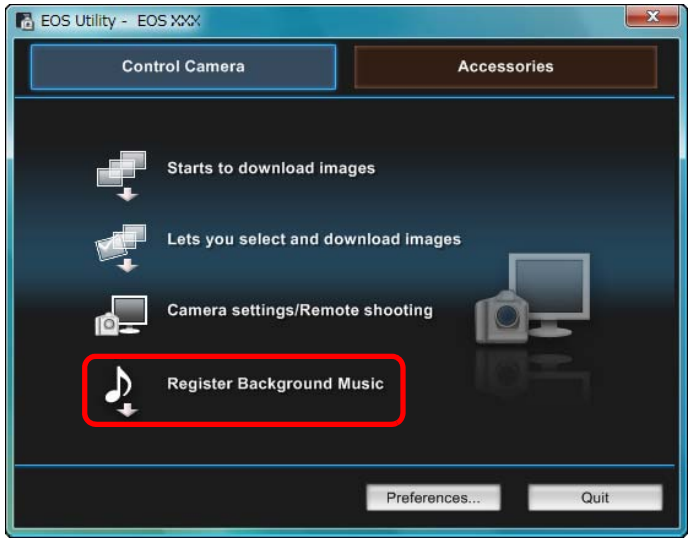

➜The [Register Background Music] window appears.

- When the [EOS Sample Music] folder is installed to your computer, five tracks appear in [Background music to register] the first time as EOS Sample Music.
- When the camera is in movie shooting mode, registering background music is not possible.

Register Background Music window

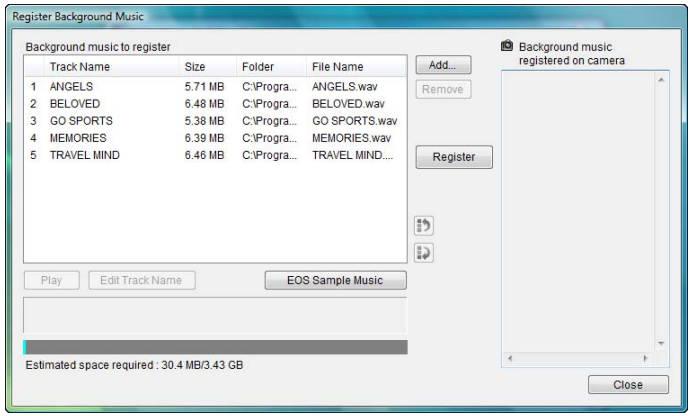
Register Background Music
Background music to register
Track Name Size Folder File Name
1 ANGELS 5.71 MB C:\Progra... ANGELS.wav
2 BELOVED 6.48 MB C:\Progra... BELOVED.wav
3 GO SPORTS 5.38 MB C:\Progra... GO SPORTS.wav
4 MEMORIES 6.39 MB C:\Progra... MEMORIES.wav
5 TRAVEL MIND 6.46 MB C:\Progra... TRAVEL MIND....
Add...
Remove
Register
Background music registered on camera
Play
Edit Track Name
EOS Sample Music
Estimated space required : 30.4 MB/3.43 GB
Close

3 Edit [Background music to register].

Adding New Music Files

- Click the [Add] button, select a music file in the [Open] dialog box that appears, and then click the [Open] button.

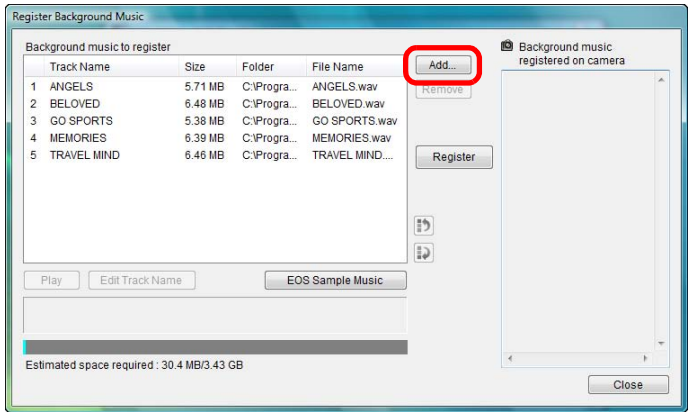
Register Background Music
Background music to register
Track Name Size Folder File Name
1 ANGELS 5.71 MB C:\Progra... ANGELS.wav
2 BELOVED 6.48 MB C:\Progra... BELOVED.wav
3 GO SPORTS 5.38 MB C:\Progra... GO SPORTS.wav
4 MEMORIES 6.39 MB C:\Progra... MEMORIES.wav
5 TRAVEL MIND 6.46 MB C:\Progra... TRAVEL MIND....
Add...
Remove
Register
Background music registered on camera
Play
Edit Track Name
EOS Sample Music
Estimated space required : 30.4 MB/3.43 GB
Close

➜A music file is added to [Background music to register].

- You can also directly drag and drop a music file saved anywhere in your computer to add it to [Background music to register].
- Music can be added only one track at a time.
- A total of 20 tracks can be added, each up to 29 minutes 59 seconds long.

Changing the Playback Order of Music Files

- Select a music file in [Background music to register], and then click the [ ] or [ ] button.

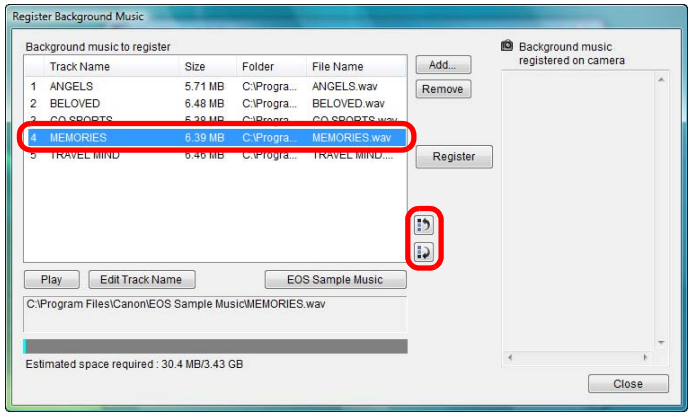

➜The order of the music files changes.

- You can also directly drag and drop music files within the [Background music to register] to change the order.

Deleting Music Files

- Select a music file in [Background music to register], and then click the [Remove] button.

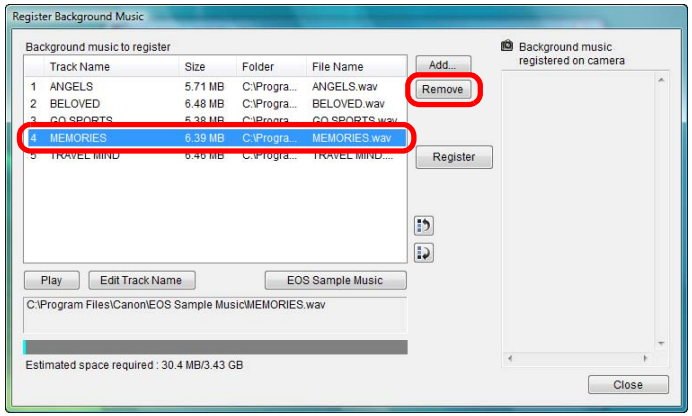

➜The music file is deleted from [Background music to register].

Editing Track Names of Music Files

- Select a music file in [Background music to register], click the [Edit track Name] button and enter a track name up to 25 characters (single-byte). Then, click the [OK] button.

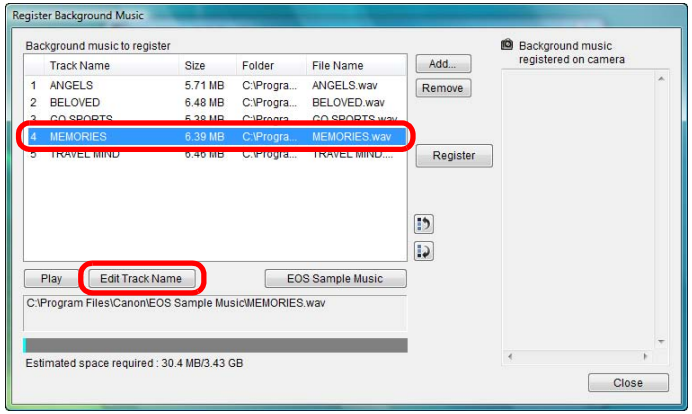

➜The track name for the music file changes.

- You can also display the [Edit Track Name] dialog box by double-clicking a music file in the [Background music to register].

Playing Music Files

- Select a music file in [Background music to register], and then click the [Play] button.

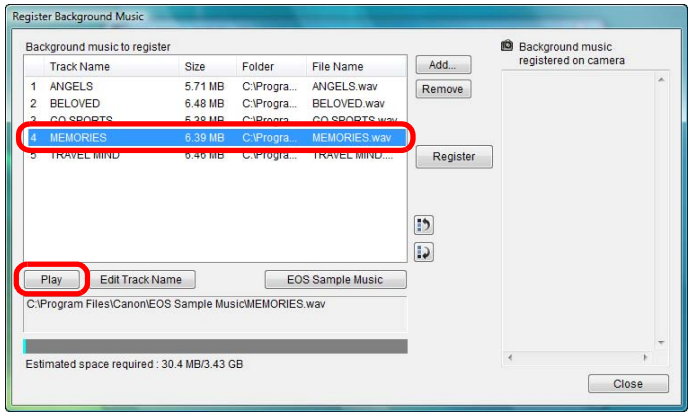

➜The music file plays.

Adding EOS Sample Music

- Click the [EOS Sample Music] button.

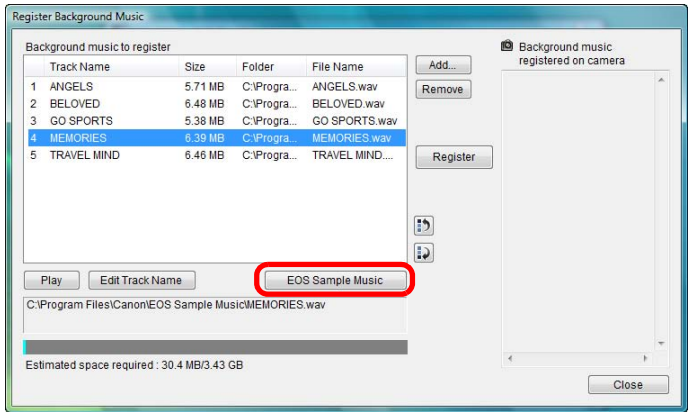

➜The EOS Sample Music on your computer is added to [Background music to register].

- This operation cannot be performed if EOS Sample Music is not installed on your computer.

4 Click the [Register] button.

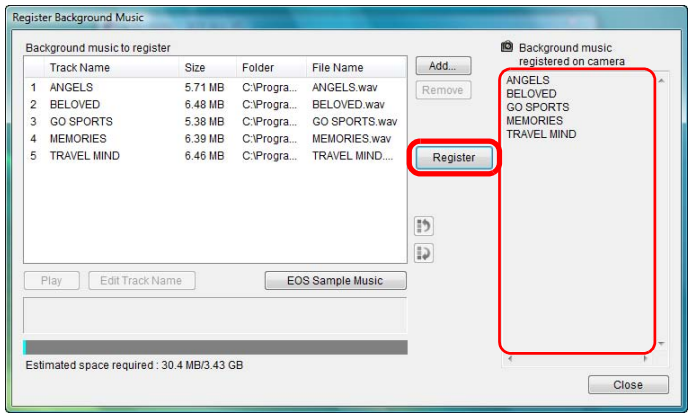

➜The music files in [Background music to register] are registered (copied) to the camera's memory card.

- Music files already registered on the camera's memory card are overwritten as music files are registered.
- Registering music files to your camera one track at a time is not possible.

5 Click the [Close] button.

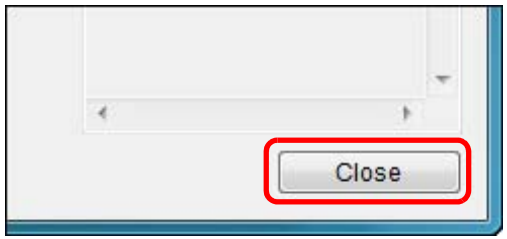

➜The [Register Background Music] window closes.

Music copied through this function may not be used without permission from the copyright holder, except for cases permitted under applicable laws, such as for personal use.

Music files meeting the following requirements may be registered to the camera's memory card.

File format	Music file export: WAVE (.wav, .wave) files in linear PCM
File time limit	Up to 29 min. 59 sec. per one file
File number limit	Up to 20 files
Channels	2 channels
Quantization bit rate	16 bit
Sampling frequency	48 kHz

4 Preferences

You can change each of the EU functions on each tab sheet of the preferences window to make them easier to use.

Preferences 62
Basic Settings 62
Destination Folder 62
File Name 63
Download Images 63
Remote Shooting 64
Linked Software 64

Preferences

1 On the main window, click the [Preferences] button.

➜The [Preferences] dialog box appears.

2 Specify the required settings and click the [OK] button.

➜The settings are applied to EU.

Basic Settings

You can specify the operation when EU starts up and whether the auto power off function is enabled or disabled.

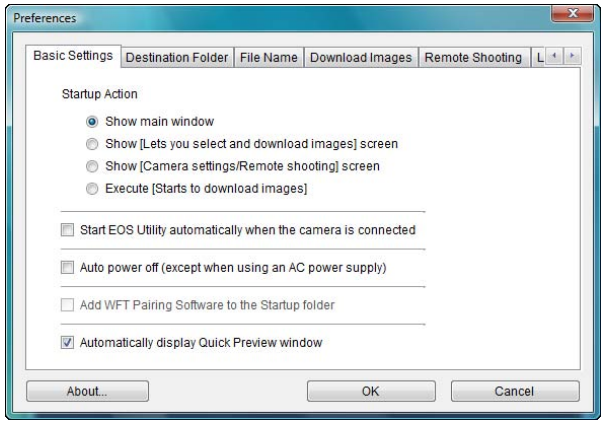

- When [Show [Lets you select and download images] screen] is selected in [Startup Action], the viewer window (p.74) appears.
- When [Show [Camera settings/Remote shooting] screen] is selected in [Startup Action], the capture window (p.77) appears.
- When [Execute [Starts to download images]] is selected in [Startup Action], the [Save File] dialog box (p.7) appears and downloading to your computer begins. When all the images have been downloaded, DPP starts up automatically and the downloaded images are displayed in DPP's main window.
- If you checkmark [Auto power off], the camera's auto power off function is enabled. If you remove the check mark, the auto power off function remains disabled, even if you set the auto power off function on the camera (only when the camera is connected to a computer.).
- If you checkmark [Add WFT Pairing Software to the Startup folder], the WFT pairing software is added to the Windows start menu.
- If you remove the check mark from [Automatically display Quick Preview window], the [Quick Preview] window will no longer appear during Remote Live View shooting or when loading images.

Destination Folder

You can specify the save destination folder of images downloaded from your camera or of images shot remotely.

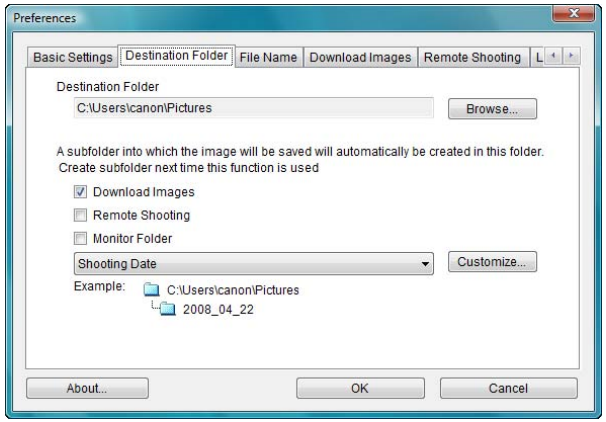

- To specify a save destination folder, click the [Browse] button. After you click the [Browse] button and specify a save destination folder, a subfolder is created automatically below the save destination folder you specified.
- After you checkmark any of [Download Images], [Remote Shooting], or [Monitor Folder], a subfolder is generated when the checkmarked function is used.
- You can select the naming rule for a generated subfolder from the list box. You can also customize the naming rule for subfolders by clicking the [Customize] button.

File Name

You can specify the file name of images downloaded from your camera or of images shot remotely.

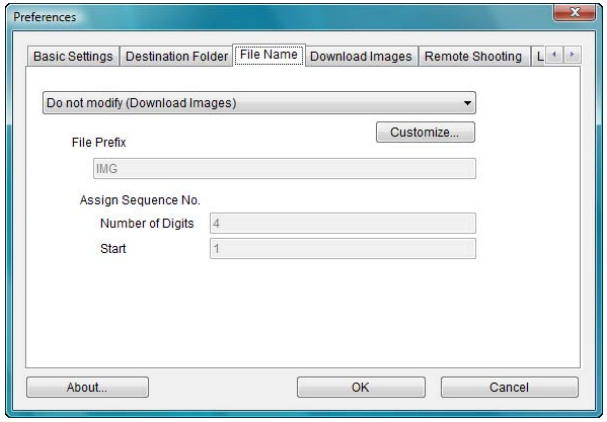

- When specifying an image's file name, select a naming rule for the file from the list box. (If [Do not modify] is selected, images are saved with the file name set in the camera.) You can also customize the naming rule for files by clicking the [Customize] button.
- You can set prefix characters, number of digits for serial numbers, and the start number individually for file names.

Download Images

From the list box, you can select the images to be downloaded when [Starts to download images] in the main window is clicked.

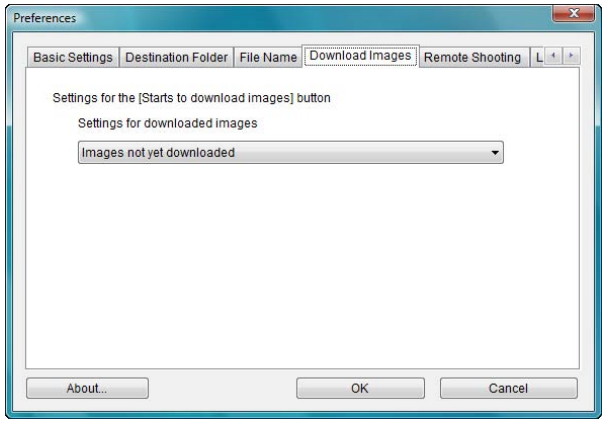

[Images whose transfer settings were specified with the camera] in the [Settings for downloaded images] menu is only enabled for cameras capable of direct transfer of shot images. Refer to your camera's Instruction Manual for details.

Remote Shooting

You can set operations performed during remote shooting.

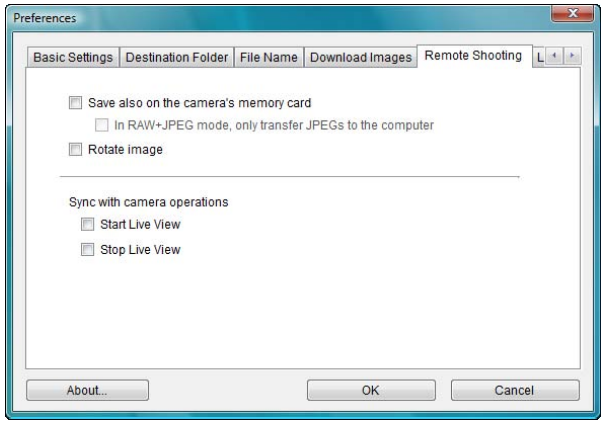

- If you checkmark [Save also on the camera's memory card], images shot during remote shooting will also be saved to the camera's memory card.
- If you checkmark [In RAW+JPEG mode, only transfer JPEGs to the computer], only the JPEG image of images shot in RAW+JPEG recording quality with remote shooting will be transferred to your computer.
- If you checkmark [Rotate image], you can set a function that rotates shot images regardless of the camera's position during shooting. Set the rotation angle in the capture window (p.77).
- If you checkmark [Start Live View], the [Remote Live View window] automatically appears when the camera's Live View starts up.
- Is you checkmark [Stop Live View], the [Remote Live View window] automatically closes when the camera's Live View ends.

  On 1D Mk IV 7D 60D REBELT3i 600D REBELT2i 550D REBELT3 1100D, if the camera's Live View display is active when Remote Live View ends, the camera's Live View display also ends.

Linked Software

From the list box, you can select the linked software that starts up when images are downloaded from the camera or when images are shot remotely. Also, you can register third-party software as linked software by clicking the [Settings] button.

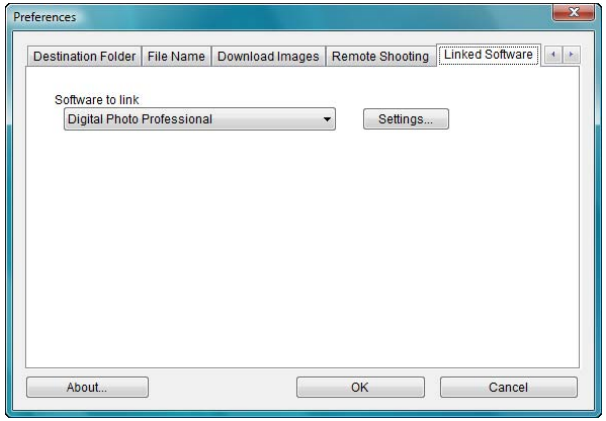

- When you have selected ZoomBrowser EX, you can specify the operation for after images are downloaded.
- In the window displayed when you click the [Settings] button, you can specify the type of images to be posted when linked third-party software is started up.

Reference

This reference section has been provided to enhance your experience using EU. It contains various troubleshooting solutions, how to delete EU from your computer and explanations of the various windows.
An index is provided at the end of the chapter for you to easily find information you are looking for.

Troubleshooting 66
Monitor Folder Function (Function for Use with the WFT-E2/A, E2 II A/B/C/D, E3/A, E4/A, E4 II A/B/C/D, or E5A/B/C/D) 68
Function for Use with the Accessories 69
Folder Structure and File Names in the Memory Card ... 70
Uninstalling the Software 70
Fixing the Plug to the Camera 71
List of Main Window Functions 73
List of Viewer Window Functions 74
List of Register Lens Aberration Correction Data/Register Peripheral Illumination Correction Data Window Functions ... 75
List of My Menu Settings Window Functions 76
List of Capture Window Functions 77
Exposure Level/AEB Level 78
List of Flash Function Settings Window Functions .. 79
List of Remote Live View Window Functions 80
List of Zoom View Window Functions 81
List of Test Shooting Window Functions 82
Index 83
About This Instruction Manual 84
Trademark Acknowledgments 84

Troubleshooting

If EU is not operating correctly, refer to the items below.

Installation could not be completed correctly

- You cannot install the software if a user setting with privileges other than [Administrator] or [Computer administrator] is selected. Select a user setting with [Administrator] privileges in Windows 7/Windows Vista or [Computer administrator] privileges in Windows XP. For detailed information on selecting the user setting, refer to your computer User's Manual.

EU does not start up

- If EU does not start up even when you have set the camera's power switch to < ON >, either double-click the [EOS Utility] icon on the desktop or click the [ ] button ([Start] button in Windows XP), select [All Programs] ▶ [Canon Utilities] ▶ [EOS Utility] ▶ [EOS Utility] to start up EU.

The card reader does not detect the SD card.

- Depending on the card reader and computer OS used, SDXC cards might not be correctly detected. In such a case, connect your camera and computer with the provided interface cable, and transfer the images to your computer.

EU and the camera are not communicating

- EU does not operate correctly on a computer if its system requirements are not met. Use EU on a computer with compatible system requirements (p.2).
- Push the plug of the interface cable all the way into the socket. Loose connections can cause faults and malfunctions (p.5).
- Check that the camera's power switch is < ON > (p.6).
- EU and the camera may not communicate normally with a cable other than the EOS DIGITAL camera-dedicated Canon interface cable (p.5).
- Connect your camera and computer directly with the interface cable provided with your camera. Do not connect the camera via a hub; doing so may prevent EU and your camera from communicating normally.
- If you connect multiple USB devices (not including the mouse or keyboard) to your computer, the camera may not communicate normally. If the camera cannot communicate normally, disconnect USB devices other than the mouse or keyboard from your computer.
- Do not connect more than one camera to the same computer. Two or more cameras may not operate normally.
- Do not connect your camera with the computer while performing "Linked shooting" with WFT-E2 II A/B/C/D, E4 II A/B/C/D, E5A/B/C/D (sold separately). Your camera may not operate normally.
- If there is insufficient charge left in the camera battery, the camera cannot communicate with EU. Either replace with a fully charged battery or use the AC adaptor kit provided with your camera. Your computer does not supply power to the camera through the interface cable.

Communication between EU and the camera disconnected

- Operation of the auto power off function will automatically switch the camera off, disabling communication with EU, if you turn the auto power off function to [ON]. Remove the check mark from [Auto power off] in the preferences window (the [Basic Settings] tab sheet) (p.62) or set the auto power off function in the camera to [OFF].
- If you do not perform any operation while the camera and computer are connected, depending on the computer system, a confirmation message may appear on the screen asking whether you wish to continue communicating with the camera. If you do not perform an operation while this message appears, communication with your camera is discontinued and EU shuts down. In this case, turn the camera's power switch to < OFF >, then again to < ON > and start up EU.
- Do not put your computer to sleep while it is connected to the camera. If your computer goes into sleep mode, never disconnect the interface cable while your computer is still in sleep mode. Always wake your computer up while it is still connected to the camera. Depending on the type of computer, disconnecting the interface cable while your computer is in sleep mode could prevent the computer from waking up correctly. Refer to the computer User's Manual for more information on sleep mode.

A non-Canon flash does not fire during Remote Live View shooting

- When a non-Canon flash is mounted on the camera for Remote Live View shooting, set [Silent shooting] in the camera to [Disable].

Remotely shot images using EU are not displayed in DPP

- In Digital Photo Professional, select the [Tools] menu ▶ [Sync folder with EOS Utility].

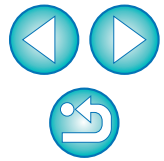

Monitor Folder Function (Function for Use with the WFT-E2/A, E2 II A/B/C/D, E3/A, E4/A, E4 II A/B/C/D, or E5A/B/C/D)

This is a function for checking your images with Digital Photo Professional (hereinafter DPP) in real time using the Wireless File Transmitter WFT-E2/A, E2 II A/B/C/D, E3/A, E4/A, E4 II A/B/C/D, or E5A/B/C/D (sold separately).
For setting the WFT-E2/A, E2 II A/B/C/D, E3/A, E4/A, E4 II A/B/C/D, or E5A/B/C/D refer to the Instruction Manual provided with each product.

1 Click [Monitor Folder].

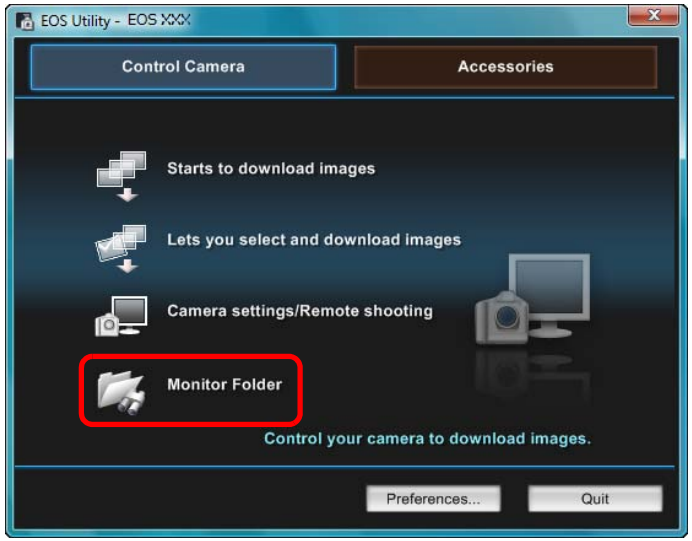

➜The [Monitor Folder] dialog box appears.

2 Click the [Browse] button and specify the save destination folder for shot images.

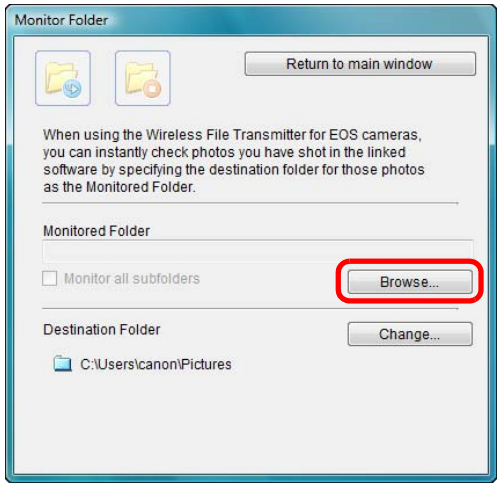
Monitor Folder
Return to main window
When using the Wireless File Transmitter for EOS cameras, you can instantly check photos you have shot in the linked software by specifying the destination folder for those photos as the Monitored Folder.
Monitored Folder
Monitor all subfolders
Browse...
Destination Folder
Change...
C:\Users\canon\Pictures

- You can specify the save destination folder for the shot images set in the WFT-E2/A, E2 II A/B/C/D, E3/A, E4/A, E4 II A/B/C/D, or E5A/B/C/D.

3 Click the [Change] button and specify the transfer destination folder.

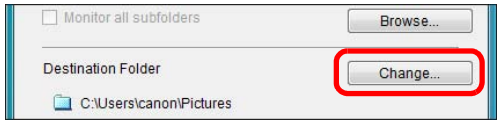

4 Click the [ ] button.

➜Image transfer preparation is complete.

5 Take a shot.

➜If images are saved in the folder specified in step 2, they are transferred/saved in the folder specified in step 3.

➜DPP starts up and the images saved in the folder specified in step 3 are displayed.

You cannot specify the same folders in step 2 and step 3.

You can change the software that starts up in step 5, from DPP to ZoomBrowser EX or other software in preferences ([Linked Software] tab sheet) (p.64).

Function for Use with the Accessories

If you have the Wireless File Transmitter WFT-E2/A, E2 II A/B/C/D, E3/A, E4/A, E4 II/A/B/C/D, or E5A/B/C/D (sold separately), you can start up the previously mentioned accessory software from EU. And you can also start up the Picture Style Editor (Picture Style file creating software).

For details on using each software, refer to the instruction manual for the software. For Picture Style files, refer to p.18.

1 Connect your camera and computer, and then start up EU (p.5).

2 Click the [Accessories] tab.

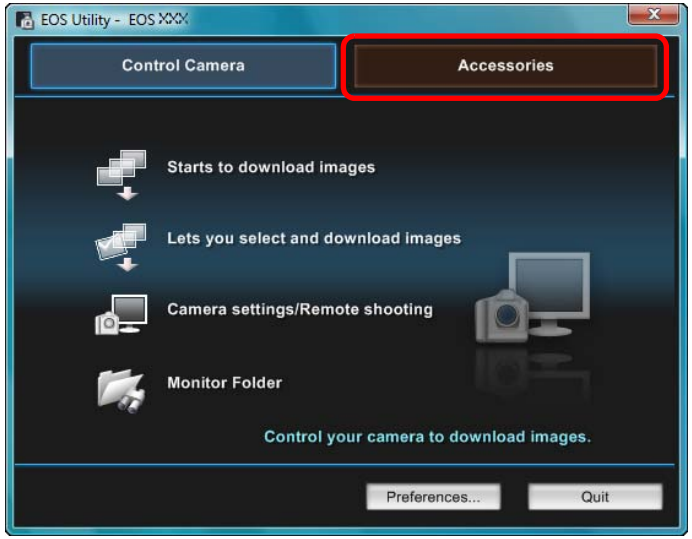

➜The [Accessories] tab sheet appears.

3 Click the software you want to start up.

➜The clicked software starts up.

Folder Structure and File Names in the Memory Card

Images shot with the camera are saved in the memory card's [DCIM] folder with the following folder structure and file names. Refer to the following when copying images to your computer using a card reader.

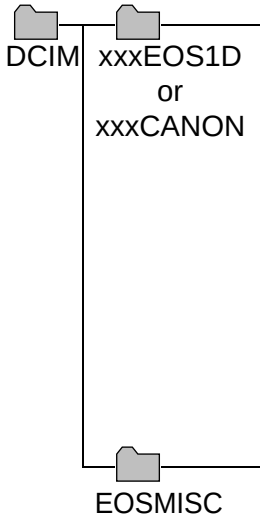

File name	File type
****YYYY.JPG	JPEG image file
****YYYY.CR2	RAW image file
****YYYY.MOV	MOV movie file
****YYYY.THM	Thumbnail file
****YYYY.WAV	Audio file

- The camera specific character string set at the time of factory shipment or set in the camera appears in "****" of the file name.
- The "YYYY" in the file names represents a number between 0001 and 9999.

Contains a file allowing the camera to manage the images in the [DCIM] folder.

- The "xxx" in the folder names represents a number between 100 and 999.
- For the 1D series cameras, the folder structure is the same for CF cards and SD cards.
- When you perform DPOF settings on the camera, a [MISC] folder is created. The files that manage the DPOF settings are saved in the [MISC] folder.
- When you register background music on REBEL T3i 600D, a MUSIC folder is generated for registering music files and WAV files are saved there.
- A thumbnail file is a file saved with the same file name as the movie and that includes shooting information. When a movie is shot with 1D Mk IV 5D Mk II 7D REBEL T2i 550D or REBEL T1i 500D, it is generated together with the movie file.
- When you play on the camera a movie that was shot with 1D Mk IV 5D Mk II 7D REBEL T2i 550D or REBEL T1i 500D, both the movie file and the thumbnail file are required.

When Adobe RGB is specified, the file names of images shot with your camera have an underscore "_" as the first character.

Uninstalling the Software

- Before starting the software uninstallation, exit all programs you are using.
- Log in under the Administrator privileges when uninstalling the software.
- To prevent computer malfunctions, always restart your computer after you have uninstalled the software. Also, reinstalling the software without first restarting your computer is likely to result in computer malfunctions.

1 Click the [] button ([Start] button in Windows XP), select [All Programs] ▶ [Canon Utilities] ▶ [EOS Utility] ▶ [EOS Utility Uninstall].

2 Proceed with the uninstallation as directed by the on-screen messages.

➜The software is uninstalled.

Fixing the Plug to the Camera

1D Mk IV 1Ds Mk III 1D Mk III

Fasten the plug to the camera with the cable protector to prevent it from detaching during remote shooting.

1D Mk IV

1 Open the covers.

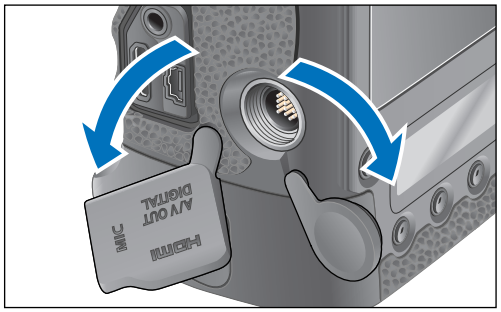

2 Pass the small plug of the cable through the cable protector, and pull it in the direction of the arrow.

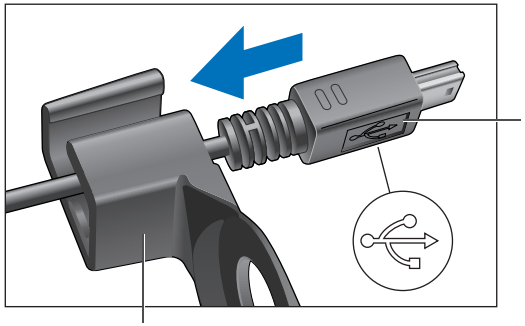

- Check the direction of the < > mark on the plug and pull it in.

3 With the plug as it is in step 2, connect it to the camera's <A/V OUT / DIGITAL> terminal.

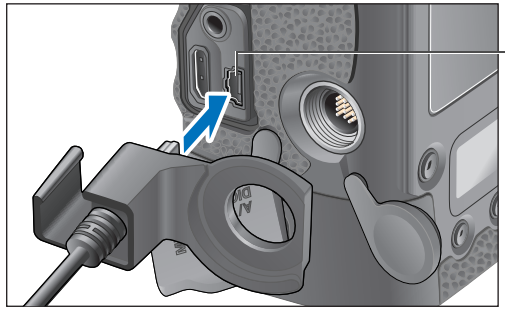

4 Fix the cable protector with the fixing screw.

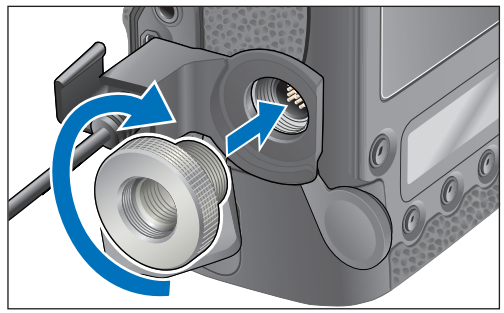

1Ds Mk III 1D Mk III

1 Remove the cap.

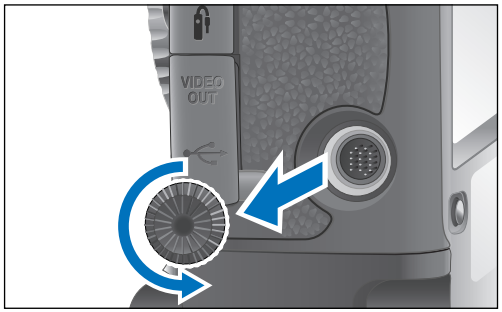

2 Attach the cap on the fixing screw.

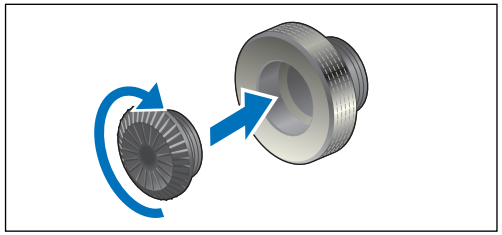

3 Connect the small plug of the cable into the < ⇐ > terminal on your camera.

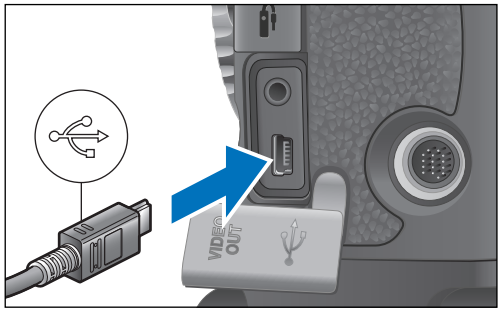

- Connect the plug with the < ⇐ > mark facing the front of the camera.

4 Attach the cable protector and fix it with the fixing screw.

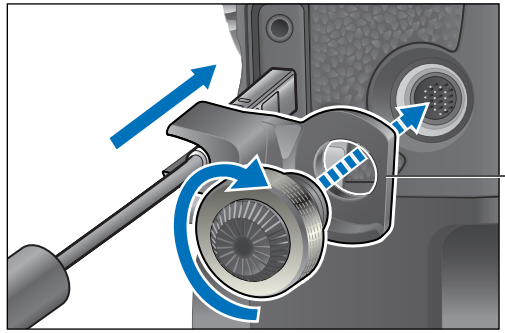

List of Main Window Functions

Control camera tab sheet

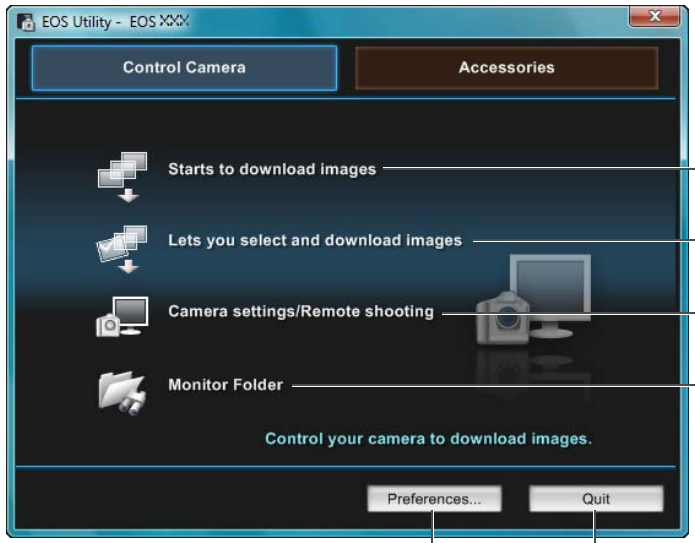

(p.7)
(p.8, p.74)
(p.27, p.77)
(p.68)
(p.62)
Exits EU (p.10)

- If you click the [Accessories] tab, you can start up from EU the software for accessories such as the Wireless File Transmitter WFT-E2/A, E2 II A/B/C/D, E3/A, E4/A, E4 II/A/B/C/D, or E5A/B/C/D (sold separately) and the Picture Style Editor (Picture Style file creating software). (p.69)

- The window below appears when REBELT3i 600D is connected.

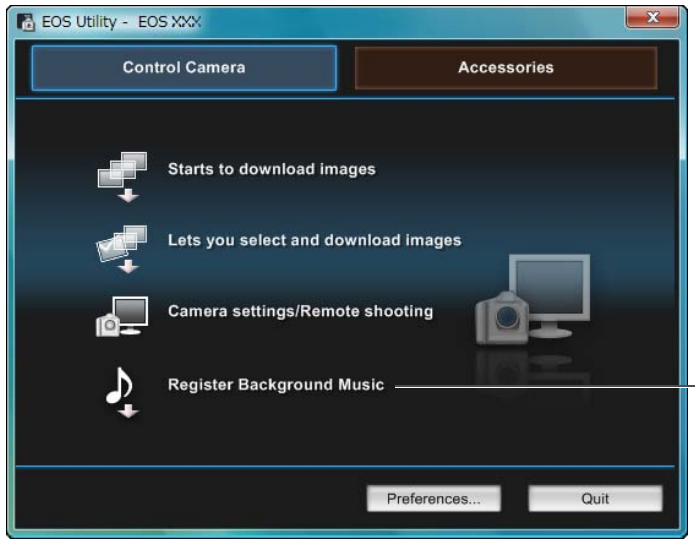

(p.58)

List of Viewer Window Functions (p.8)

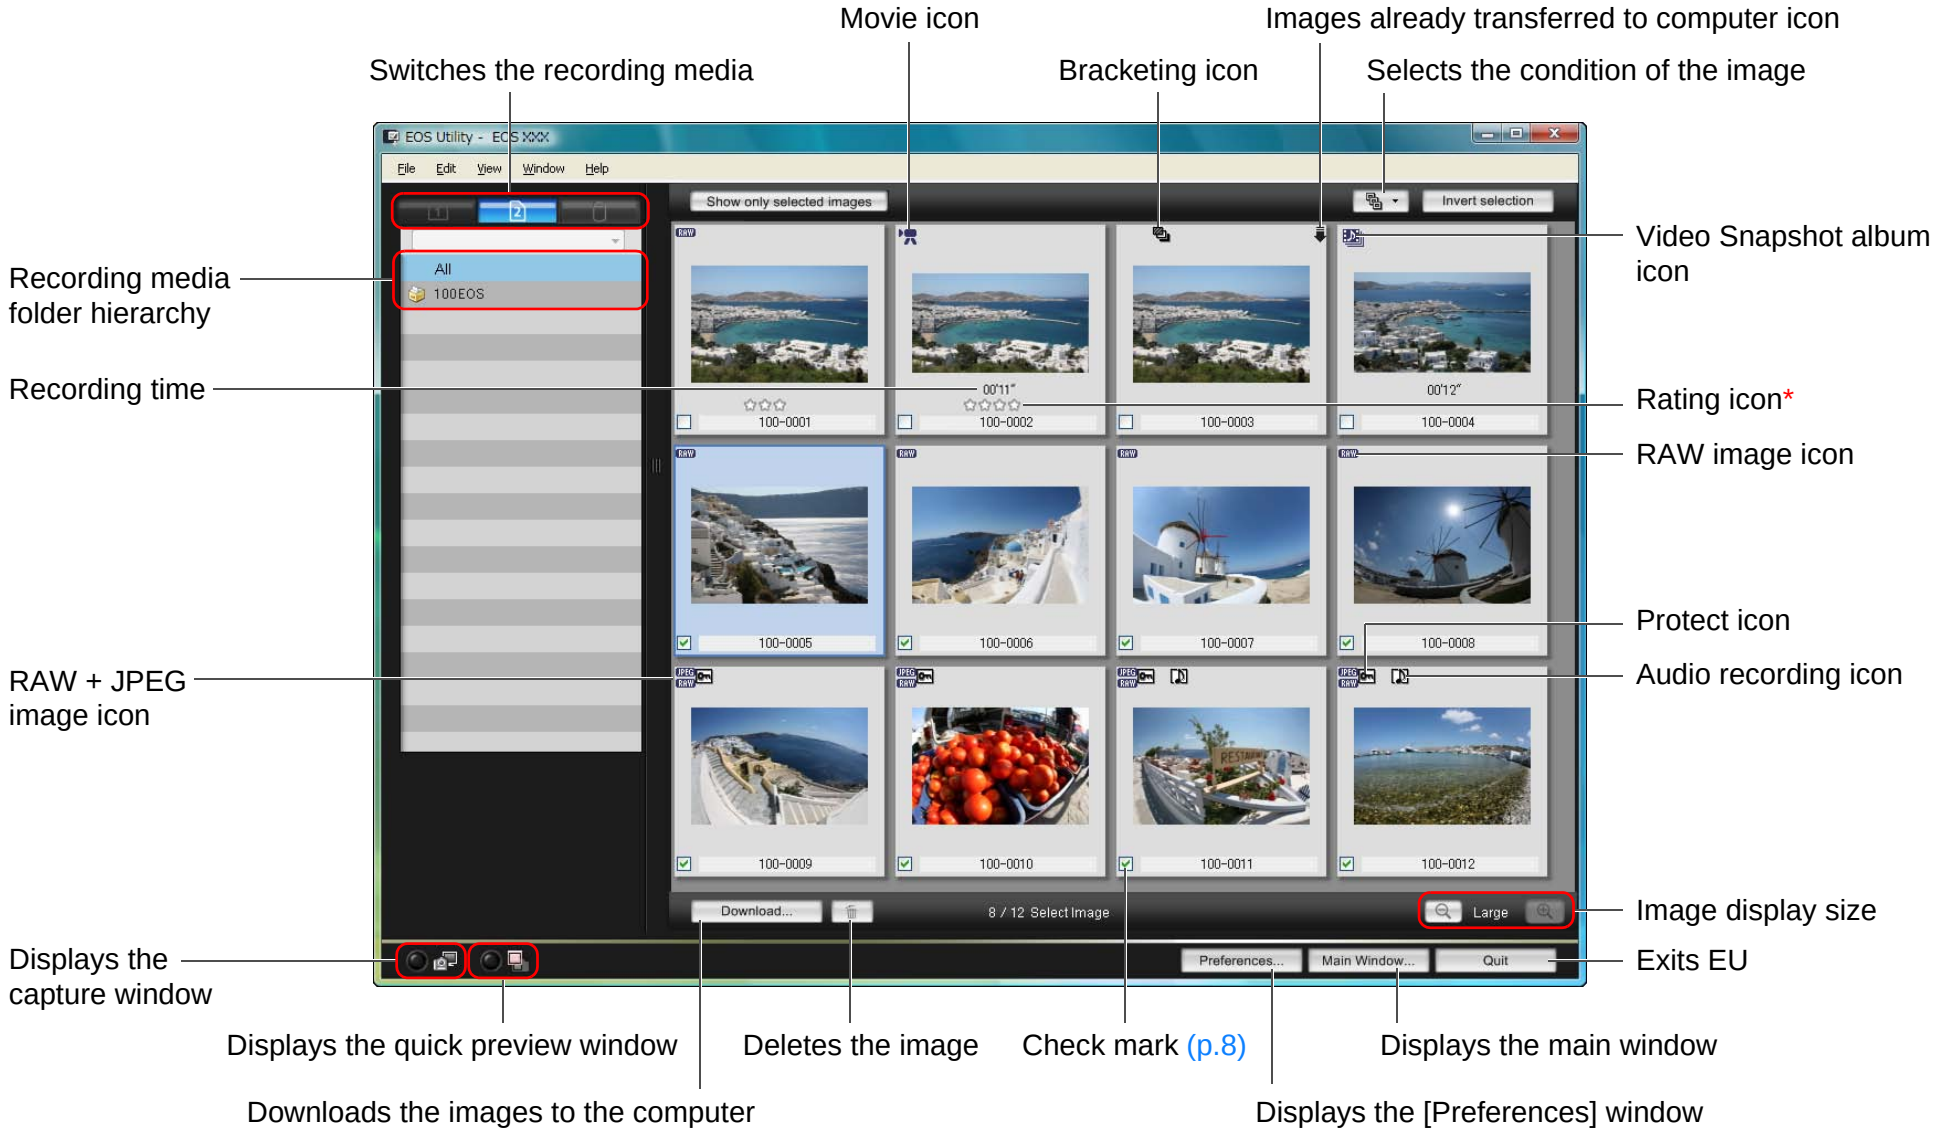

* Ratings set on 60D REBELT3i 600D REBELT3 1100D, Digital Photo Professional Ver. 3.9 or later or ZoomBrowser EX Ver. 6.6 or later are displayed. However, the [Reject] rating is not displayed. Also, ratings cannot be set in EU.

List of Register Lens Aberration Correction Data/Register Peripheral Illumination Correction Data Window Functions (p.22)

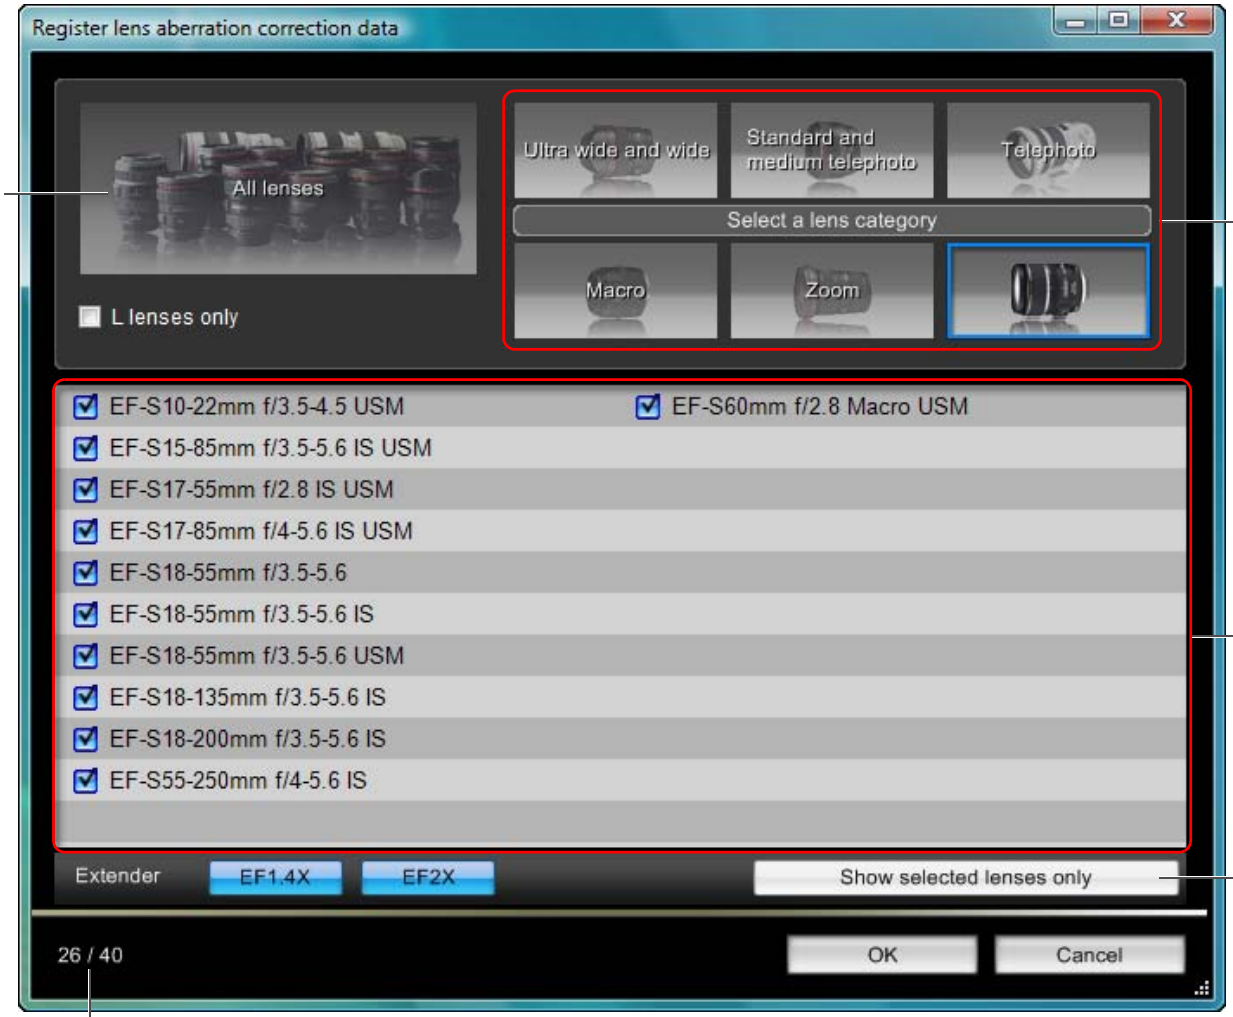

Displays all the categories

Lens category

Displays lenses selected in [Select a lens category] by category

Displays only the registered lenses

No. of lenses registered in the camera/No. of lenses that can be registered

Lens names displayed in the [Register lens aberration correction data] window/[Register peripheral illumination correction data] window may be partially shortened depending on the lens type.

List of My Menu Settings Window Functions (p.24)

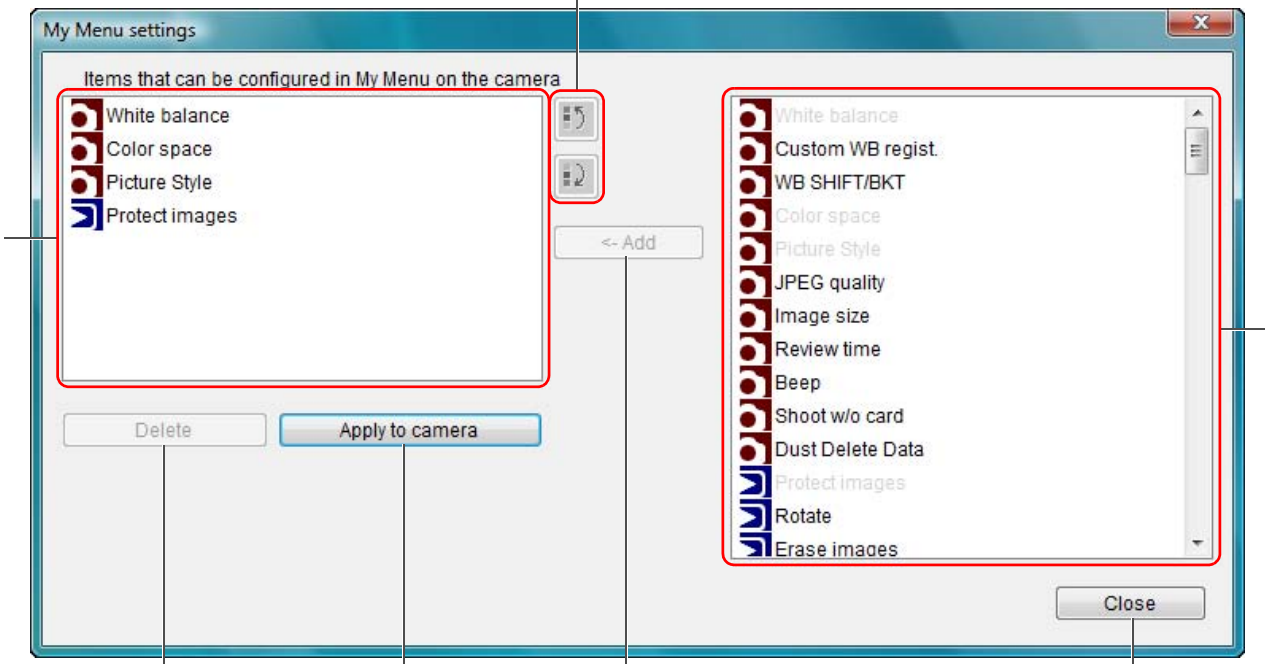

List of Capture Window Functions

- Displayed items differ depending on the model and settings of the camera connected.
- For *1 to *8 explanations, refer to the next page.

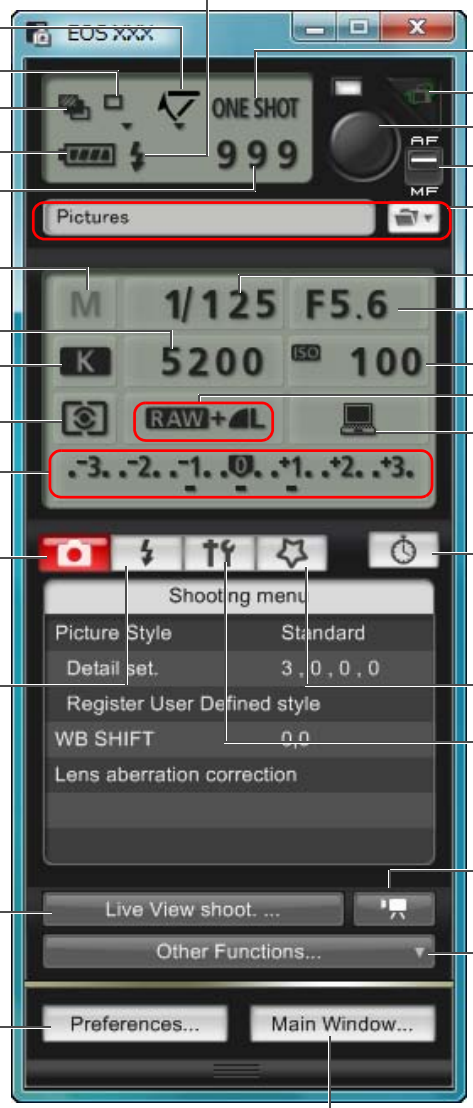

Flash ready*2

Mirror lockup

Drive mode

Bracketing

Power status*1

Shots to go

Shooting mode

Color temperature

White balance

Metering mode

Exposure Level/AEB Level
(Refer to next page for details)

Displays the [Shooting menu] (p.15)

Displays [Flash control menu] (p.56)

Displays the [Remote Live View window] (p.31, p.80)

Displays the [Preferences] window (p.62)

Displays the main window (p.73)

AF mode

Rotates shot image*3

Shoot button*4 (p.31)

AF/MF selector button*5

Save destination for shot images

Shutter speed

Aperture*6

ISO speed

Image recording quality

Save destinations for shot images*7

Displays the [Timer shooting settings] window (p.53, p.54)

Displays the [My Menu] (p.25)

Displays the [Set-up menu] (p.13)

Displays the [Remote Live View window (Movie)]*8 (p.45, p.49)

Displays the viewer window (p.8, p.74)
Shows/hides the [Quick Preview] window
Displays the [Test Shooting] window (p.37, p.82)

*1 When using the battery, the charge level is displayed.

*2 Displayed only on 1D Mk IV 7D 60D REBELT3i 600D REBELT2i 550D REBELT3 1100D .
Appears after flash charging is complete and the cursor is moved to the Shoot button.

*3 Each time you click the button, the shot image rotates 90 degrees. To make this function available, checkmark [Rotate image] in preferences ([Remote Shooting] tab sheet) (p.64).

*4 On 1D Mk IV 5D Mk II 7D 60D 50D REBELT3i 600D REBELT2i 550D REBELT1i 500D REBELT3 1100D ,
when the AF/MF selector button is set to [AF], AF/AE is performed when the cursor is moved to the Shoot button.

*5 Displayed only on 1D Mk IV 5D Mk II 7D 60D 50D REBELT3i 600D REBELT2i 550D REBELT1i 500D REBELT3 1100D . Even when it is set to [MF], “AF” appears in the shooting information for the shot image. Setting < A-DEP > as the camera’s shooting mode disables this button.

*6 Right-click the aperture, and you can decrease the aperture by pressing <O> on the keyboard, or increase the aperture by pressing <C>.

*7 You can select whether the shot images are saved only to the computer or both to the computer and to the memory card in the camera. In movie mode, shot movies are saved only to the camera’s memory card.

*8 Displayed only on 7D 60D REBELT3i 600D REBELT2i 550D REBELT3 1100D .

Exposure Level/AEB Level

- The display changes as follows by double-clicking the Exposure level/AEB level item.

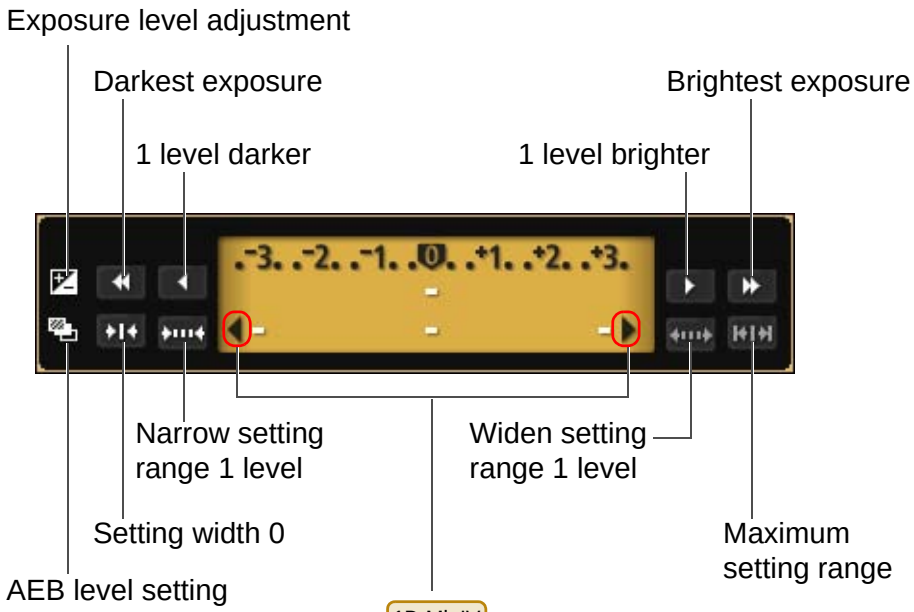

1D Mk IV
When the AEB bracketing setting exceeds the displayable range, [◀], [▶] marks are displayed to show there are bracketing indicators beyond the scale.

List of Flash Function Settings Window Functions (p.55)

1D Mk IV | 5D Mk II | 7D | 60D | REBELT3i | 600D | REBELT2i | 550D | REBELT3 | 1100D

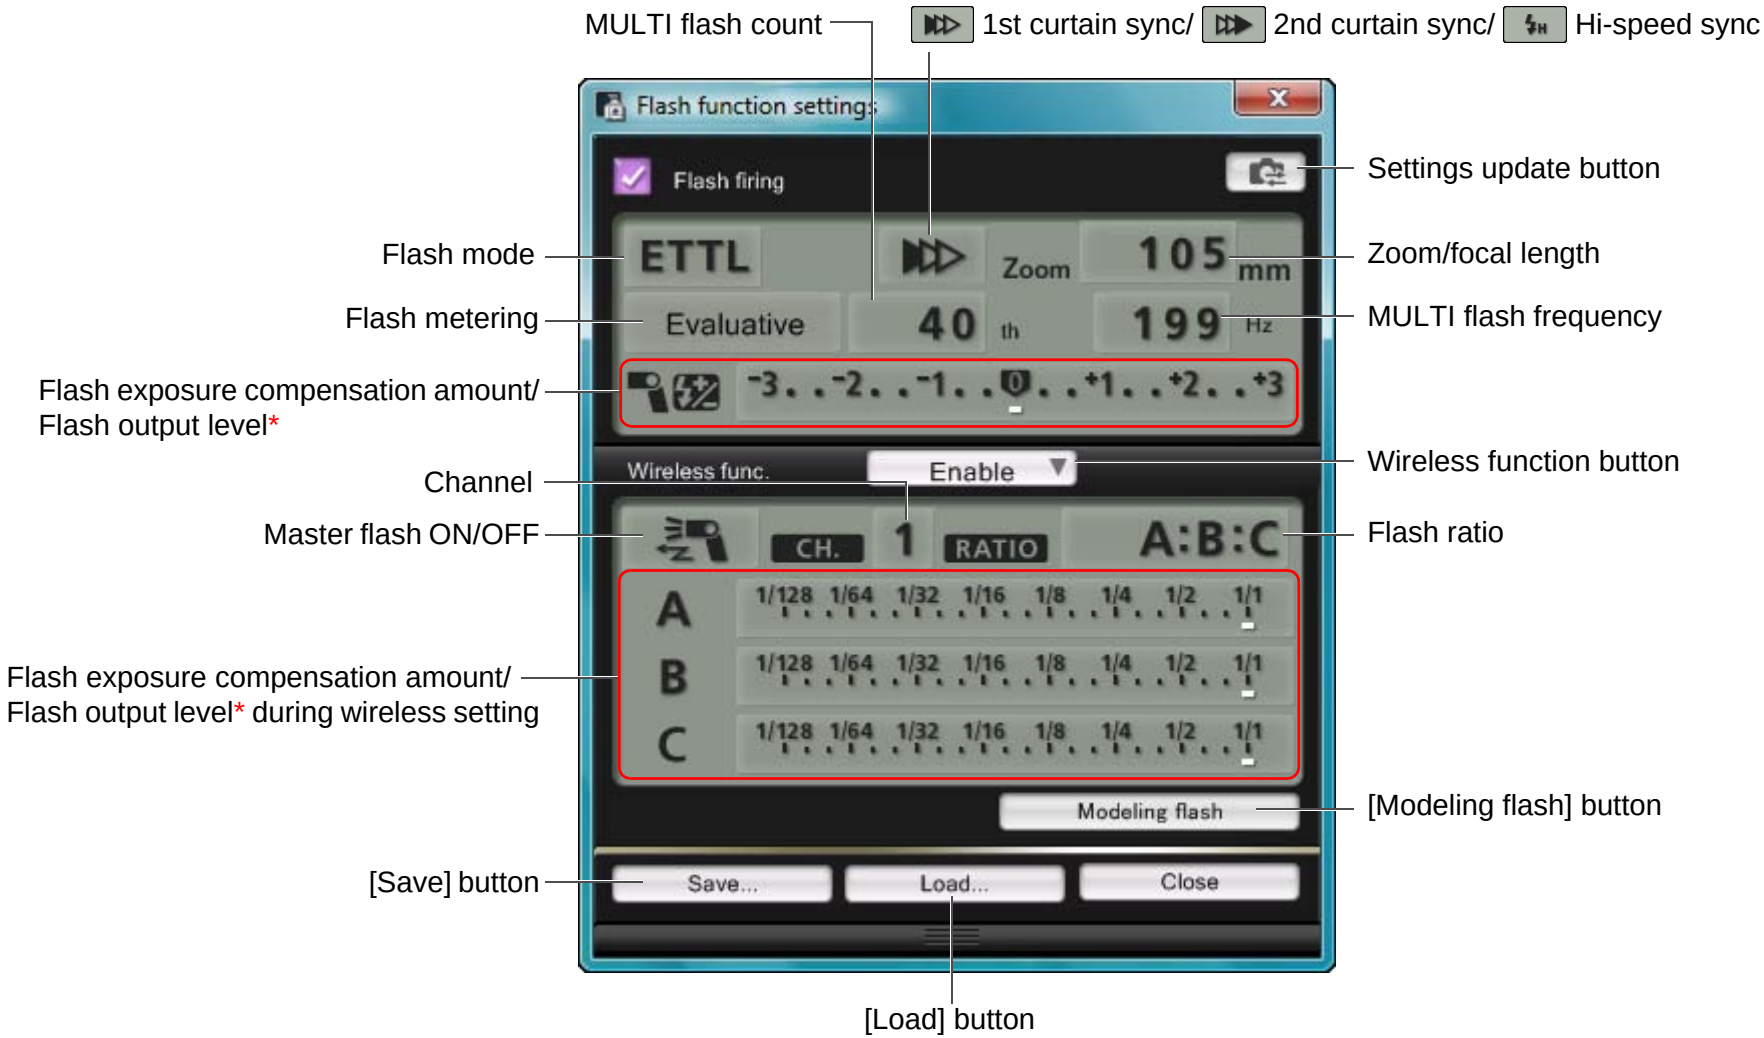

* Displayed information differs depending on the settings. For more details on settings, also refer to the Instruction Manual provided with your EX-series Speedlite or camera.

List of Remote Live View Window Functions (p.27)

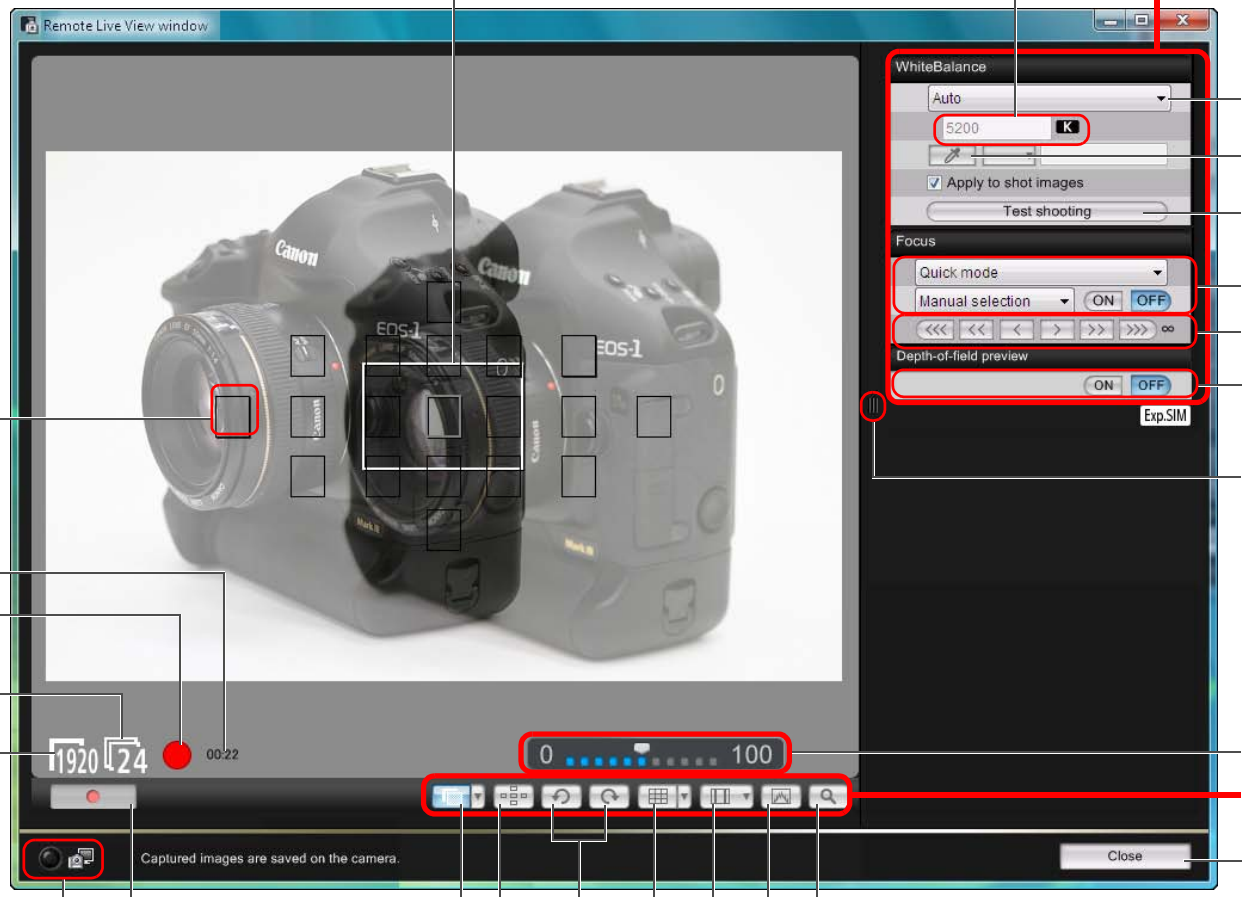

Enlargement display frame

Sets the color temperature

Controllers 1

Selects the white balance (p.37)

Click white balance

Displays the [Test Shooting] window (p.82)

AF mode (p.34 to p.36)

Lens drive (p.33)

Checks the depth of field (p.36)

Shows/hides the controllers 1

AF point

Movie recording time

Movie recording in progress icon

Frame rate

Movie recording size

Composite ratio slider (p.41)

Controllers 2

Closes the window

Displays the capture window (p.77)

Overlaid display function (p.40 to p.41)

Starts/stops movie recording

Shows/hides the AF points

Displays the [Zoom View] window (p.33, p.81)

Rotates the image

Shows/hides the histogram

Shows/hides the gridlines (p.39)

Sets the aspect ratio (p.39)

List of Zoom View Window Functions (p.32)

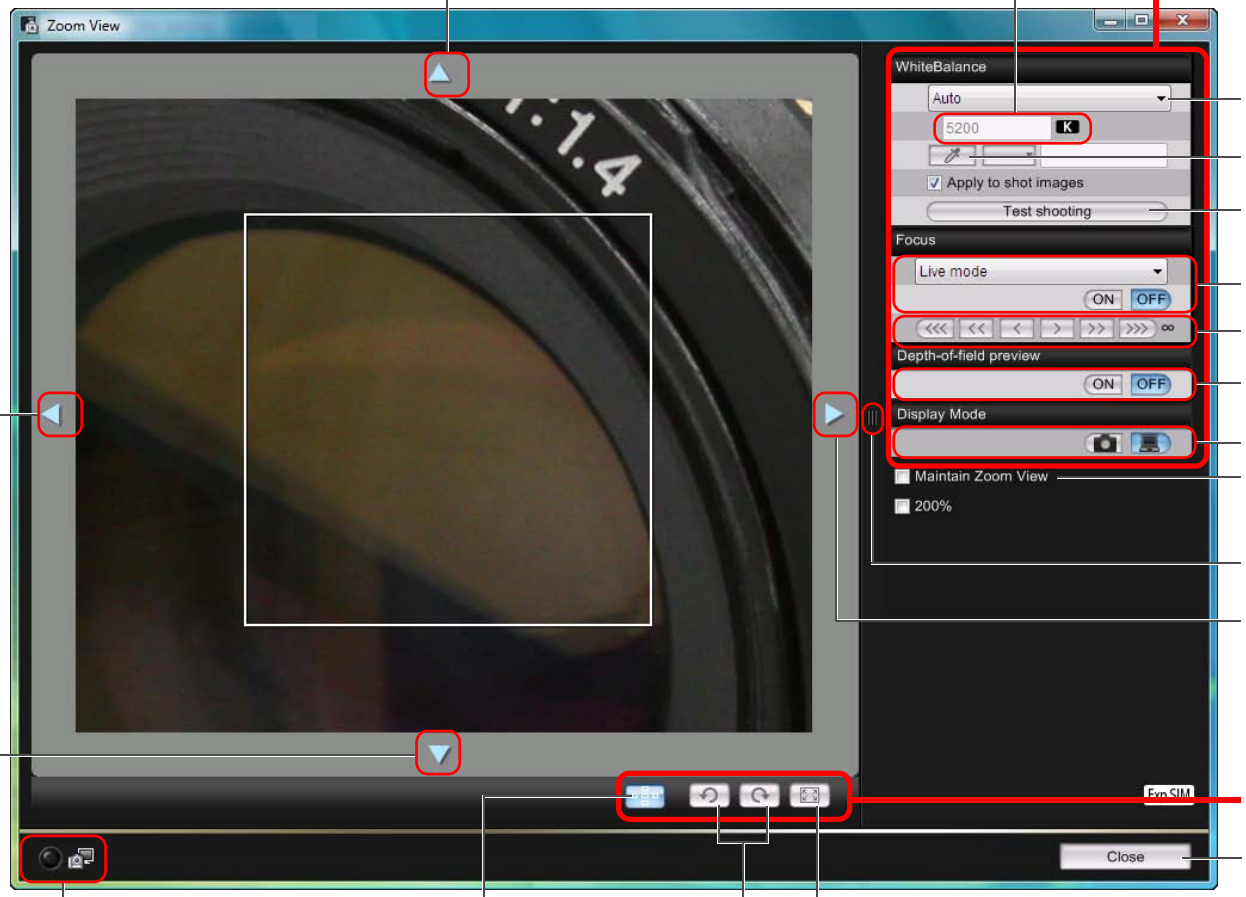

Moves the display position

Sets the color temperature

Controllers 1

Selects the white balance (p.37)

Click white balance

Displays the [Test Shooting] window (p.82)

AF mode (p.34 to p.36)

Lens drive (p.33)

Checks the depth of field (p.36)

Display mode*

Maintains display of the [Zoom View] window

Shows/hides the controllers 1

Moves the display position

Moves the display position

Moves the display position

Controllers 2

Closes the window

Displays the capture window (p.77)

AF point show/hide

Rotates the image

Returns to the [Remote Live View window]

* Clicking the [ ] button switches to a quality suited to focusing while viewing on your camera's LCD monitor; clicking the [ ] button switches to a quality suited to focusing while viewing on your computer.

List of Test Shooting Window Functions (p.37)

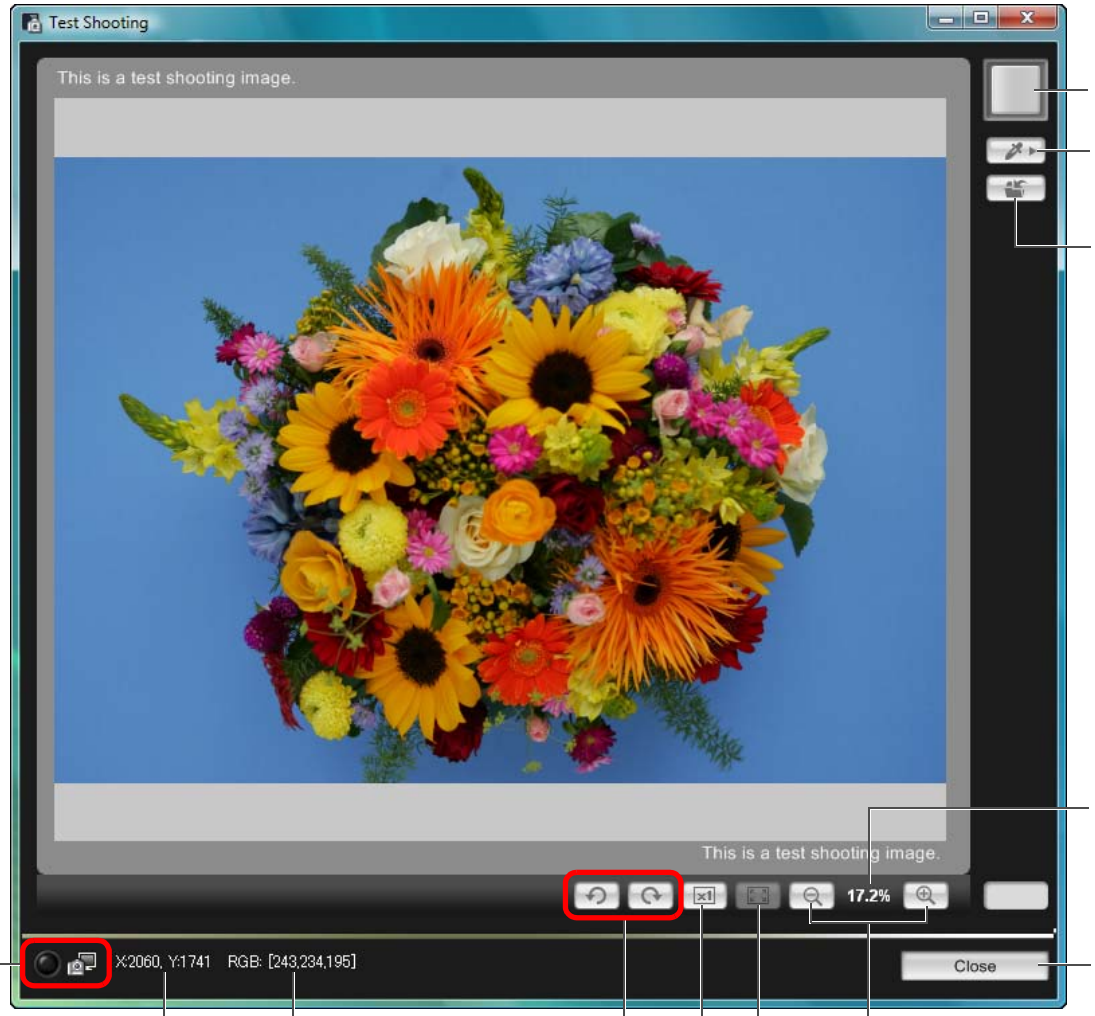

Test Shooting button

Displays the [Click white balance] window (p.38)

Saves the test shot image

Enlargement ratio of the image

Displays the capture window

Closes the window

RGB values*

Rotates the image

Enlargement/reduction of the image

Coordinates*

100% (actual pixel size) view

Fit-to-window view

* Only displayed when the [Click white balance] window is displayed (p.38) and the cursor is moved to over the point to be the standard for white for the image.

Index

A

Adjusting the Horizontal Alignment of the Camera (Remote Live View Shooting) 39
Adjusting the Vertical Alignment of the Camera (Remote Live View Shooting) 39
Adjusting the White Balance 22
Applying Personal White Balance 20
Applying Picture Style Files 18
Attaching the Cable Protector 72

B

Basic Settings (Preferences) 62
Bulb Exposures 54

C

Capture Window 77
- Flash Control Menu 56
- My Menu 25
- Set-up Menu 13
- Shooting Menu 15

Changing the Aspect Ratio (Remote Live View Shooting) 39
Changing the White Balance in the Remote Live View Window (Remote Live View Shooting) 37
Checking the Depth of Field and Exposure (Remote Live View Shooting) 36
Connecting the Camera to Your Computer 5

D

Destination Folder Settings (Preferences) 62
Download Images Settings (Preferences) 63
Downloading All the Images in a Single Operation 7
Downloading Images with a Card Reader 10
Downloading Selected Images 8

E

Exiting the EOS Utility 10

F

File Name Settings (Preferences) 63
Flash Control Menu (Capture Window) 56
Flash function settings Window 56, 79
Flash shooting 55
Focusing Automatically (Using AF) (Remote Live View Shooting) 34
Focusing in Face Detection Live Mode (Remote Live View Shooting) 36
Focusing in Live Mode (Remote Live View Shooting) 35
Focusing in Quick Mode (Remote Live View Shooting) 34
Focusing Manually (Remote Live View Shooting) 32
Focusing Using AF 34
Folder Structure and File Names 70
Folder Structure and File Names in the Memory Card 70
Function for Use with WFT-E2/A, E2 II A/B/C/D, E3/A, E4/A, E4 II A/B/C/D, or E5A/B/C/D 68
Function for use with Wireless File Transmitter WFT-E2/A, E2 II A/B/C/D, E3/A, E4/A, E4 II A/B/C/D, or E5A/B/C/D 68

I

Interval Timer Shooting 53

L

Linked Software Settings (Preferences) 64

M

Main Window 73
My Menu (Capture Window) 25
My Menu Settings 24
My Menu Settings Window 25, 76

O

Overlaid Display Function (Remote Live View Shooting) 40

R

Register Lens Aberration Correction Data/Register Peripheral Illumination Correction Data Window 23, 75
Registering Background Music to a Camera Memory Card 58

Registering Lens Aberration Correction/Peripheral Illumination Correction Data for the Lens 22
Remote Live View Shooting 27
Remote Live View Window 31, 80
Remote Live View Window Functions 32
Adjusting the Horizontal Alignment of the Camera 39
Adjusting the Vertical Alignment of the Camera 39
Changing the Aspect Ratio 39
Changing the White Balance in the Remote Live View Window .. 37
Checking the Depth of Field and Exposure 36
Focusing Automatically (Using AF) 34
Focusing in Face Detection Live Mode 36
Focusing in Live Mode 35
Focusing in Quick Mode 34
Focusing Manually 32
Overlaid Display Function 40
White Balance for Flash Photography 37
Remote Shooting Settings (Preferences) 64

S

Setting JPEG Quality 21
Setting Picture Styles 16
Setting the Camera Owner's Name 12
Setting the Camera's Date and Time 12
Setting the Copyright Notice for the Image 12
Set-up Menu (Capture Window) 13
Shooting by Operating the Camera 42
Shooting Menu (Capture Window) 15
Shooting Movies 42
Specifying Preferences 62
Basic Settings 62
Destination Folder Settings 62
Download Images Settings 63
File Name Settings 63
Linked Software Settings 64
Remote Shooting Settings 64
Starting up EOS Utility 6
Supported Camera 2
System Requirements 2

T

Test Shooting Window 37, 82
Timer Shooting 53

U

Uninstalling the Software 70

V

Viewer Window 8, 74

W

White Balance for Flash Photography (Remote Live View Shooting) . 37

Z

Zoom View Window 33, 81

About This Instruction Manual

- It is prohibited to reproduce, in whole or part, the contents of this Instruction Manual without permission.
- Canon may change without notice the software specifications and contents of this Instruction Manual.
- The software screens and displays printed in this Instruction Manual may differ slightly from the actual software.
- The content of this Instruction Manual has been reviewed thoroughly. However, if you should notice any errors or omissions, please contact a Canon Service Center.
- Please note that irrespective of the above-mentioned, Canon does not take responsibility for the outcome of the operation of the software.

Trademark Acknowledgments

- Microsoft and Windows are registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Other names and products not mentioned above may be registered trademarks or trademarks of their respective companies.